


Operating the Remote Control

Point the remote control at the infrared receiver head on the control panel on the main body and then press the corresponding button. The buttons on the Remote Control correspond to the buttons on the Control Panel on the Blower Unit.

Remote control working distance \leq 20 feet

Remote control angle \leq 30°

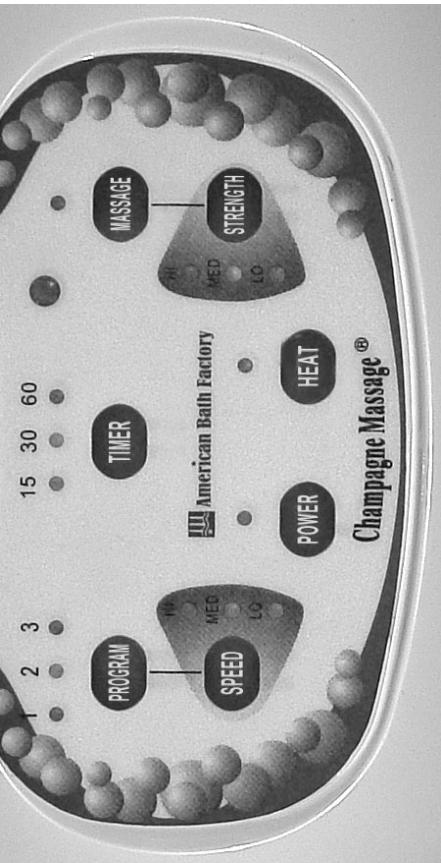

3

4

Operating the Control Panel

Choose the function type you need. Press the Massage or Program button:

PROGRAM – Choose between the three programs.

SPEED – Controls the air bubbles flow speed. There are three choices: High, 15 min, 30 min, and 60 min

TIMER – The treatment time you require. There are three choices: High, 15 min, 30 min, and 60 min

HEAT – Controls the heating device. Pressing it will produce warm bubbles.

POWER - Turns On/Off the Blower.

MASSAGE – Shows the normal massage type.

STRENGTH – Shows the strength of bubble action. There are three choices: Low, Medium, and High.

After testing your bathtub you are ready for installation assuming no problems were found.

Recommendations

1. When filling your Champagne Massage® bathtub do not overfill with water and remember that when you get into your bathtub, the water level will rise.
2. After your bath we recommend that while the bathtub is draining to turn on your blower with the heat setting on for 3-5 minutes to blow out any water and to dry out the lines.

Warnings

1. Do not dip the blower into water.
2. Do not disassemble and reassemble the blower.
3. Do not remove the supply plugs with wet hands.
4. Do not remove the plug by pulling the cable.
5. If the blower fails to function normally, for safety reasons, switch off the power and call the manufacturer.
6. Do not clean the blower in water.
7. Parts incorporating electrical components, except the remote control, must be located or fixed so that they cannot fall into the bathtub.
8. Do not put the blower on a wet surface when using it. Keep the surface dry during use.
9. Danger: Do not try to replace/repair the blower unit yourself.
10. Do not dip or drop the remote into water, as it is water-resistant, not water-proof.
11. Make sure bathtub feet are secured to the ground. (This will ensure plumbing is not damaged from movement of the bathtub).
12. Before plugging in Champagne Massge Blower Unit to be sure to **Use only a GFI (Ground Fault Interrupter) protected outlet to safeguard against electrical shock.**

Troubleshooting

Here are some suggested solutions for some common issues that might affect your bathtub or affect the operation of your Champagne Massage® Blower. Please call American Bath Factory at (800) 454-2284 about any issues you cannot resolve or questions you may have about your bathtub. Your satisfaction is our primary goal.

1. Verify that the drain is installed securely and that the rubber gasket is seated properly between the bottom of the bathtub and the drain pipe.
2. Verify that the drain is installed with SILICONE and not plumber's putty. See instructions on page 5. Re-apply SILICONE as necessary to ensure a watertight seal. Verify that the overflow cover is tightened securely into the overflow drain and that the rubber overflow gasket is seated properly between the bathtub and overflow drain.
3. Ensure that all faucet hardware is installed properly and securely. Replace worn washers and gaskets as necessary.
4. Check all water supply lines for leaks. Replace washers or gaskets as necessary.

Bathtub is Leaking

1. Fill your bathtub with approximately 1/2" of water. Add 1 cup of household bleach and let mixture stand for 15 minutes before draining. Refill the bathtub with water to normal operating level and run the blower for five minutes. Drain your bathtub with the blower on for 3-5 minutes after bathtub is completely drained to dry the lines.

Day to day operation

1. Prior to turning on the Champagne Massage Blower Unit fill bathtub with water to desired level.
2. When in bathtub only turn on/off or adjust settings with the remote control not with the control panel on the blower unit.
3. After your bath we recommend that while the bathtub is draining to turn on your blower with the heat setting on for 3-5 minutes to blow out any water and to dry out the lines.

Turn off system