



Fabric Hammock & Stand

Model 6290W-88B

Weight Limit: 275 pounds

Congratulations on purchasing this Hammock and Stand. We hope it provides hours of relaxation. **If you have questions** regarding this product, please contact customer service at (800)-295-6758.

NO TOOLS REQUIRED FOR ASSEMBLY

Your box should contain:

1 – Fabric Hammock with chain assembly.

1 – Unassembled Hammock Stand consisting of:

2 – Upright poles with attached S-hook ends.

1 – Center Pole.

2 – Leg assemblies.

****For your convenience plastic pole ends and leg ends are already fitted to their respective poles.****



Assembly Instructions

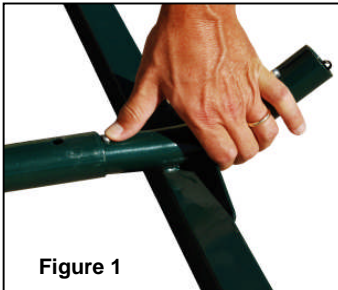


Figure 1

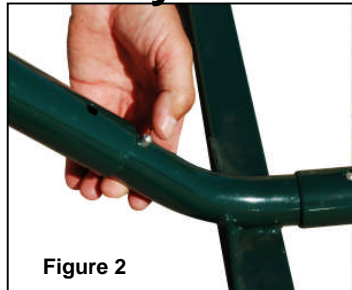


Figure 2



Figure 3

Step 1. Place both leg assemblies on the ground with the upward curving elbows facing away from each other. Take the center-pole and place on the ground between the two leg assemblies. Locate the holes on each end of the center-pole and face them up. Slide one end of the center pole over the end of one elbow pole on the foot assembly. Push in silver lock- pin (**Figure 1**) and continue to slide pole until the lock-pin pops through the hole. Repeat on the other side.

Step 2. Both upright poles have a pre-attached s-hook and end cap on one end and a lock-pin hole on the other. Take one upright-pole and align the lock-pin hole with the other lock-pin on the elbow pole of the foot assembly. Slide the upright pole over the elbow pole, push lock-pin down (**Figure 1**) and continue to slide pole until the lock-pin pops through the hole (**Figure 2**). Repeat on the other side.

Step 3. Unroll the fabric hammock and make sure it is not twisted or tangled. Each end of the hammock has an outdoor plated O-ring with a chain attached. Attach one end of the hammock to the assembled hammock stand by placing the last link of the chain over the S-hook on the upright pole. (**Figure 3**) Attach the other end of the hammock in similar fashion. Adjust height of hammock by adjusting the link of chain you attach to the S-hook.

Caution – Care should always be taken when using your hammock but especially when using your hammock for the first time. Please always use extreme caution when getting into and out of the hammock. Never exceed weight capacity. Never let young children use hammock unaccompanied by an adult. Always inspect hammock before use to assure everything is appropriately attached. Make sure to read and follow hammock care instructions.

Precautionary Measures Before Each Use – Check for loose or untied ropes. Check for fraying at possible wear points (where the ropes pass through the wooden spreader, around the metal ring at each end of the hammock, where the ropes intersect in the body of the hammock bed). Check if ropes are weak by pulling on them. If they appear weak the hammock may be unsafe to use. Check for cracks in the wood. Check the stand to assure it is properly assembled and lies on a level surface. - - - Take care to keep hammock out of direct sun or moisture when not in use. Store in cool dry place.

Maintaining your Hammock:

Your hammock is made of quality materials but you can extend the useful life of the hammock by keeping your hammock out of the rain and out of direct sunlight when the hammock is not in use. To extend the life of your hammock always store in a cool dry place when the hammock is not in use.

Clean the fabric portion of the hammock using a mild soap and water solution. Rinse with water and allow to dry. For stains, spot clean then rinse with clean water. Never use harsh chemicals to clean.

Wipe stand of dirt and moisture before storing.

Wood spreaders will bleach with continued exposure. Apply an outdoor spar finish to wood if desired to restore shine.



Algoma Net Company, Div. of Gleason Corp
1525 Mueller St. Algoma, WI 54201
Email: aloomasales@aloomanet.com