


# ASSEMBLY INSTRUCTIONS

## ITEM NO: BO-216-DB

1. CAREFULLY UNPACK AND PLACE ALL PARTS ON A SMOOTH SURFACE AND LAY THEM UP AS PER THE SKETCH.
2. SCREW TUBE (B) ONTO BASE (A), PART (C) ONTO TUBE (B), PART (D) ONTO PART (C).
3. INSERT THE HARP (E) INTO THE CUP OF PART (D).
4. PLACE THE SHADE (NOT INCLUDED) ON THE HARP (E) AND SCREW THE FINIAL (F) TIGHTLY, THEN ADJUST THE SHADE HORIZONTAL.
5. UNSCREW THE NUT (G), AND ADJUST THE ARM (H) TO APPROPRIATE HEIGHT, THEN SCREW THE NUT (G) TIGHTLY.
6. INSERT THE POLARIZED PLUG INTO OUTLET , TURN ON THE SWITCH AND ENJOY YOUR LAMP.

**WATTAGE:** 150W 3 WAY TYPE A (EX BULB)

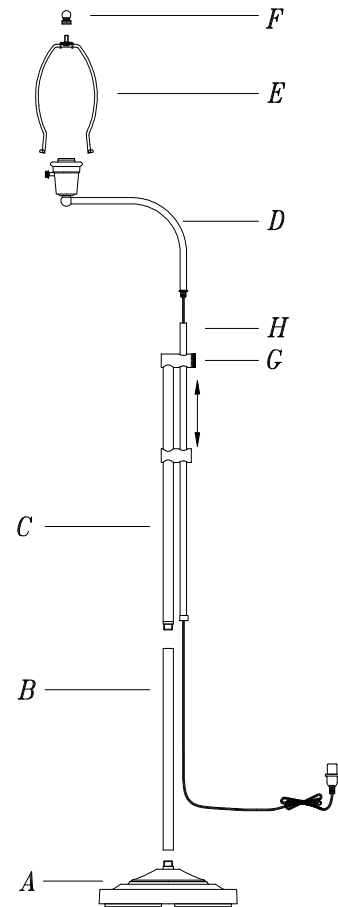

## IMPORTANT SAFETY INSTRUCTIONS:

THIS PORTABLE LAMP HAS A POLARIZED PLUG (ONE BLADE IS WIDER THAN THE OTHER) AS A FEATURE TO REDUCE THE RISK OF ELECTRIC SHOCK. THIS PLUG WILL FIT IN A POLARIZED OUTLET ONLY ONE WAY. IF IT DOES NOT FIT FULLY IN THE OUTLET, REVERSE THE PLUG. IF IT STILL DOES NOT FIT, CONTACT A QUALIFIED ELECTRICIAN. NEVER USE WITH AN EXTENSION CORD UNLESS THE PLUG CAN BE FULLY INSERTED. DO NOT ALTER THE PLUG.

**SAVE THESE INSTRUCTIONS FOR FUTURE REFERENCE.**