


HAYWORTH FLOOR LAMP

MODEL # 3457-22



PLEASE READ AND SAVE THESE INSTRUCTIONS:

1. REMOVE ALL PARTS FROM PACKAGING AND LAY ON A FLAT SURFACE.
2. SCREW POLE (B) CLOCKWISE INTO BASE (A) TO TIGHTEN.
3. SCREW POLE (C) CLOCKWISE INTO POLE (B) TO TIGHTEN.
4. SCREW POLE (D) CLOCKWISE INTO POLE (C) TO TIGHTEN AND PULL THE REMAINING SLACK OF THE POWER CORD OUT CAREFULLY FROM THE OPENING (G) IN THE BASE.
5. SET SHADE (E) ON POLE (D) AND TIGHTEN CLOCKWISE WITH SOCKET RING (F) TO SECURE SHADE BEFORE SCREWING IN LIGHT BULB.

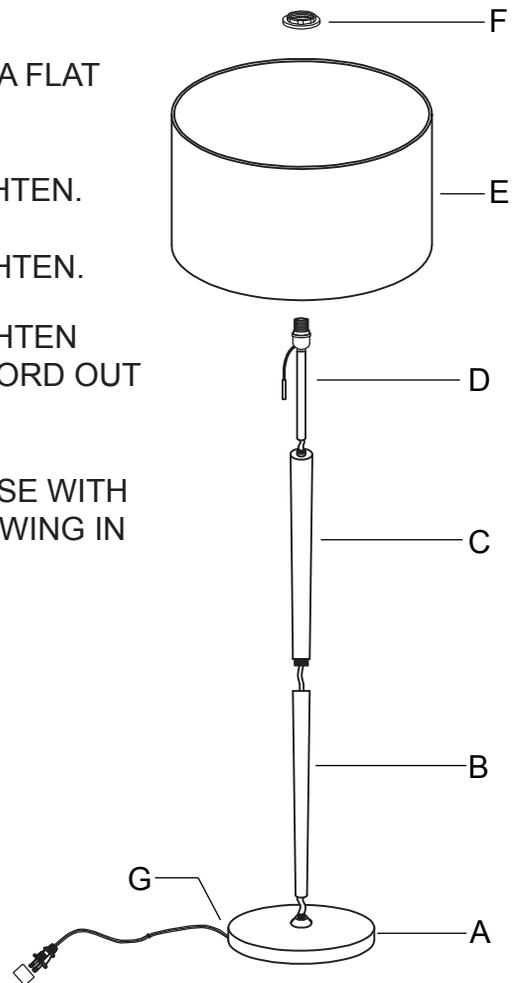

MAINTENANCE:

This lamp requires the use of a maximum 42-Watt CFL light bulb or a 150-Watt maximum standard incandescent bulb (not included). Wattages listed are maximums - lower wattages may be used. **DO NOT USE 3-WAY LIGHT BULBS IN THIS LAMP - THIS IS NOT A 3-WAY LAMP.**

To clean lamp, wipe with clean, dry cloth.

IMPORTANT SAFETY INSTRUCTIONS:

This portable lamp has a polarized plug (one blade is wider than the other) as a feature to reduce the risk of electric shock. This plug will fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Never use with an extension cord unless plug can be fully inserted. **DO NOT ALTER PLUG.**



21 Penn Plaza #909 New York, NY 10001
Tel : (212) 736 4440 Fax : (212) 736 4806
www.adessohome.com