

euø style™

Assembly Instructions Talisa

PLEASE NOTE: Check that you have received all components and hardware before assembling.
If you are missing any parts, contact your retailer,
or fax Euro Style at 415.455.8033.



A (2 pcs)



B (2 pcs)







C (4 pcs)



D (1 pc)



E (3 pcs)

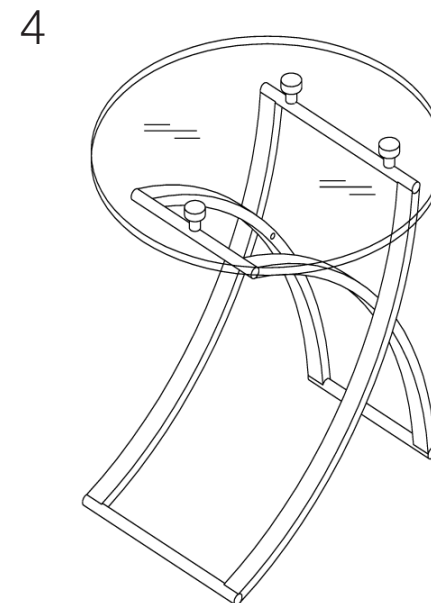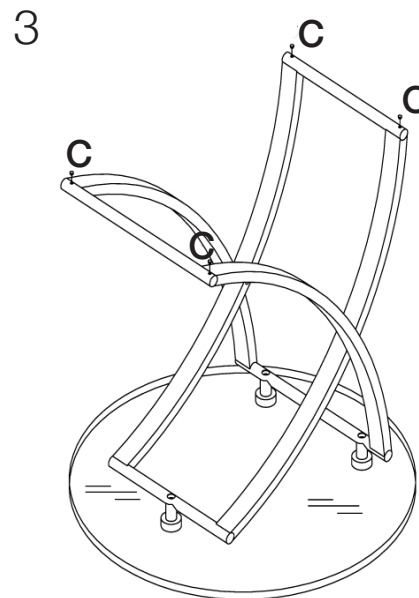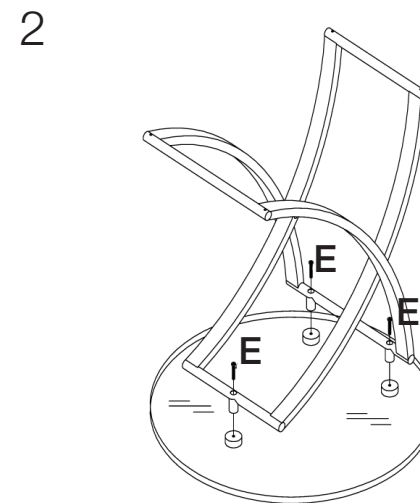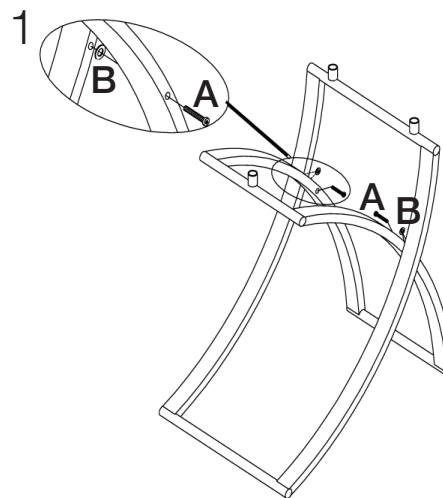

During assembly, hand tighten screws only. When all screws are in place, then tighten completely.