






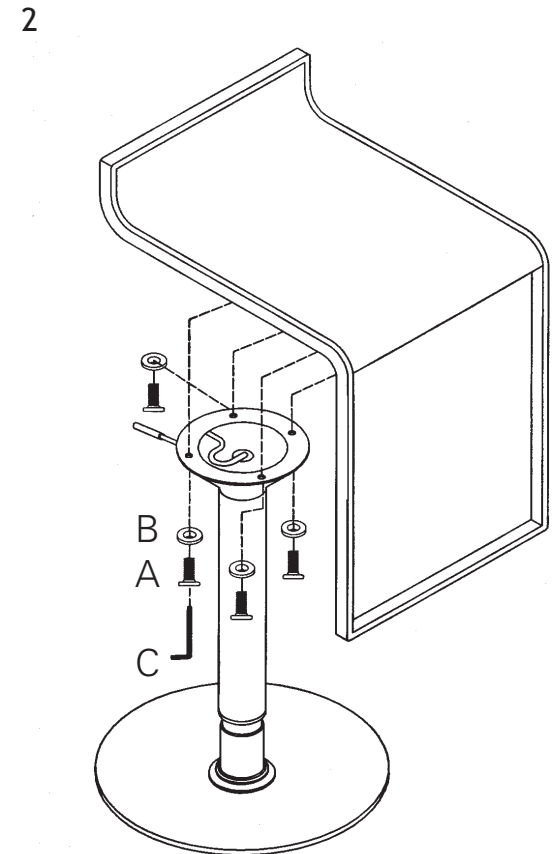
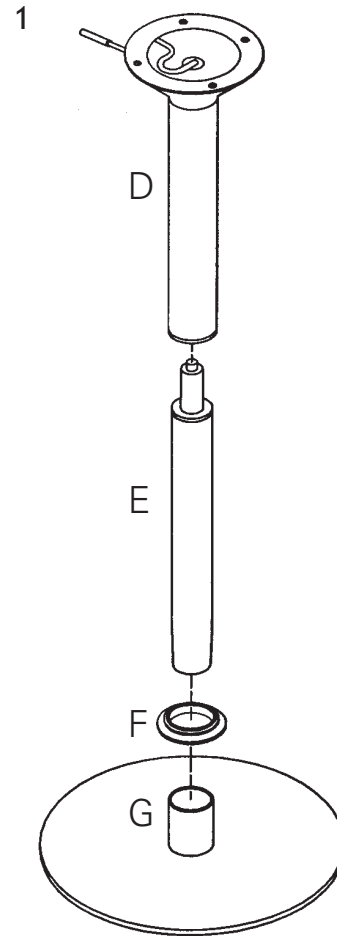


euro style

Assembly Instructions Forest Bar/Counter



- A  4 pcs
- B  4 pcs
- C  1 pc
- D  1 pc
- E  1 pc
- F  1 pc
- G  1 pc



PLEASE NOTE: Check that you have received all components and hardware before assembling. If you are missing any parts, contact your retailer, or fax Euro Style at 415.455.8033.