


FIGURE 1

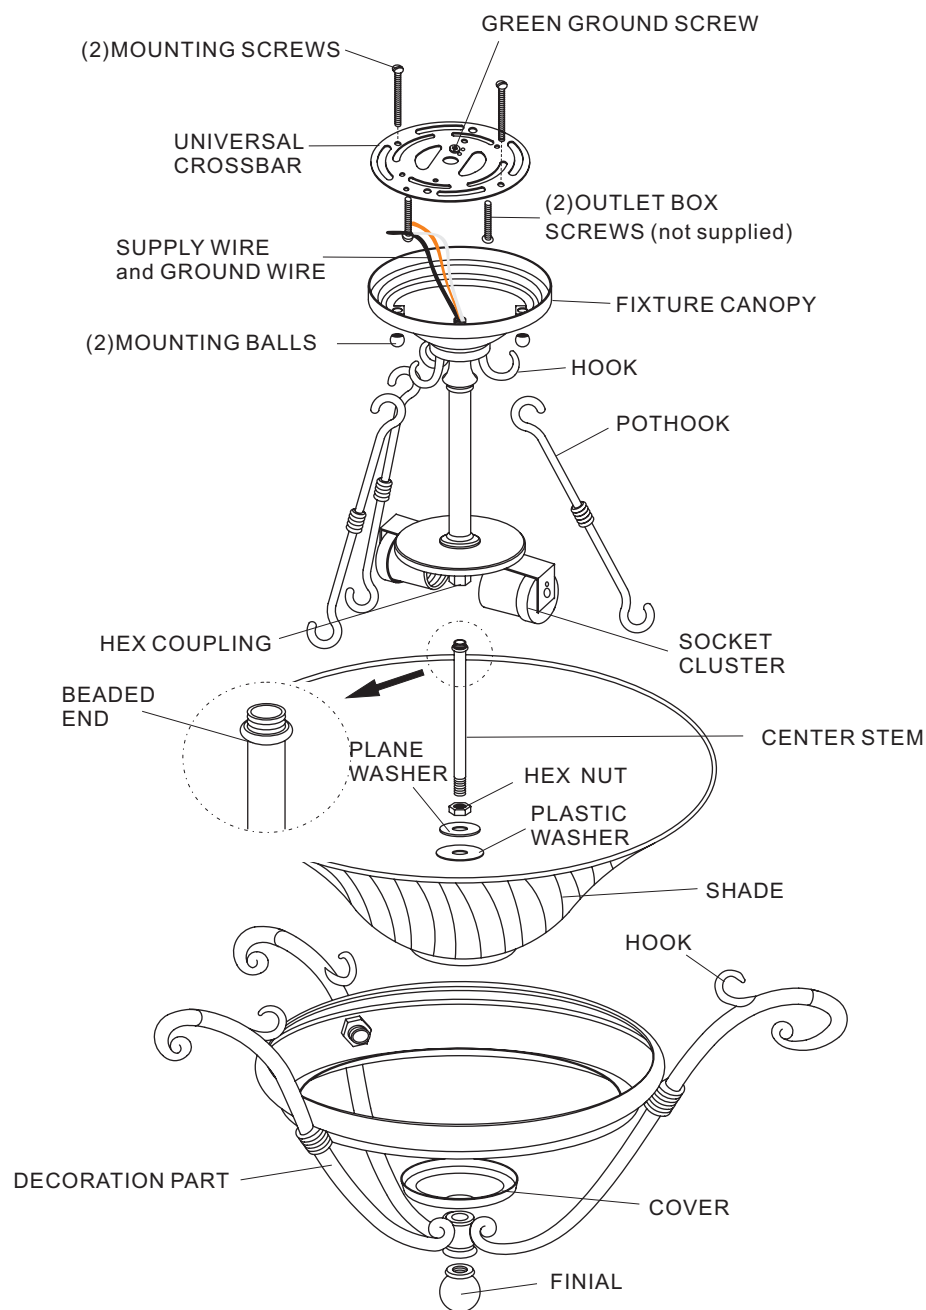

ASSEMBLY / INSTALLATION INSTRUCTIONS:

1. Before beginning installation, carefully unpack and identify all parts, referring to illustration (FIGURE 1).
2. Turn the electrical power to installation point OFF at circuit breaker.
3. Thread BEADED END of CENTER STEM into HEX COUPLING and tighten until snug. Proceed to thread HEX NUT onto end of CENTER STEM and make sure there is enough length for rest components. Locate the following part in this order: PLANE WASHER, PLASTIC WASHER, SHADE, COVER, DECORATION PART. Secure them together by threading FINIAL onto end of CENTER STEM and tighten until snug. Locate one end of POTHOOK onto HOOKS on the bottom side of FIXTURE CANOPY. Proceed to locate another end of POTHOOK onto HOOKS on DECORATION PART.
4. Locate the (2) MOUNTING SCREWS and thread them into the back of the UNIVERSAL CROSSBAR, making sure that they match the holes in the FIXTURE CANOPY. Using (2) OUTLET BOX SCREWS (not supplied), fasten the UNIVERSAL CROSSBAR to the OUTLET BOX.
5. **Making the wire connections:** Using wire connectors (not supplied) connect the HOUSE GROUND WIRE to the FIXTURE GROUND WIRE; connect the HOUSE WHITE WIRE to the FIXTURE SUPPLY WIRE (WHITE or RIBBED SIDE); connect the HOUSE BLACK (or RED) WIRE to the FIXTURE SUPPLY WIRE (BLACK or SMOOTH SIDE). Wrap each connection with approved electrical tape.
6. Carefully tuck all of the wiring up into the outlet box, and fit the FIXTURE CANOPY over the MOUNTING SCREWS. Secure the FIXTURE CANOPY to the ceiling with the (2) MOUNTING BALLS, making sure that the balls are fully threaded onto the MOUNTING SCREWS before tightening.
7. Install bulbs referring to fixture markings and/or labels for maximum wattage.
8. Restore power to installation point ON. Retain this sheet for future reference.

**IF IN DOUBT ABOUT ELECTRICAL INSTALLATION,
 CONSULT A LICENSED ELECTRICIAN!**