


ASSEMBLY / INSTALLATION INSTRUCTIONS:

FIGURE 1.

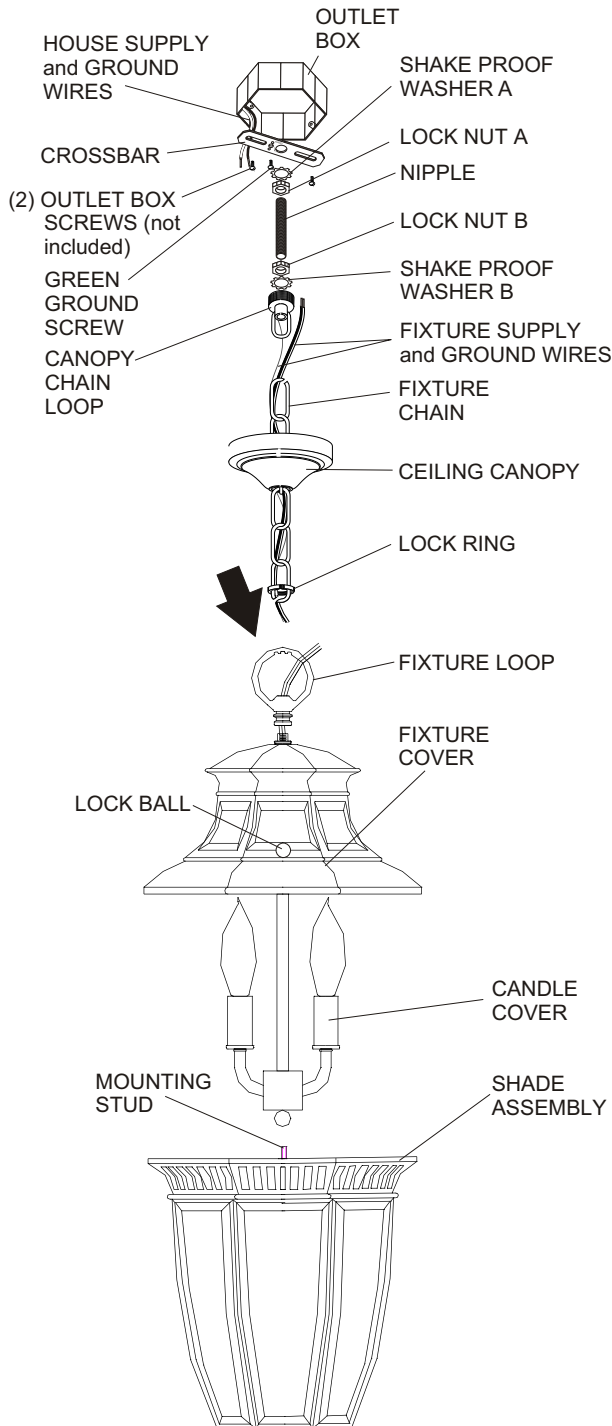

1. Before installing fixture, carefully unpack and identify all parts referring to illustration FIGURE 1. Be sure the power to the installation point is **OFF**. Be sure to assembly fixture on level work surface that will not scratch finish.
2. Locate the CROSSBAR and secure to OUTLET BOX with (2) OUTLET BOX SCREWS (not supplied). Locate LOCK NUT A and SHAKE PROOF WASHER A. Thread LOCK NUT A and SHAKE PROOF WASHER A onto top end of NIPPLE. Thread NIPPLE into the center of CROSSBAR. Locate LOCK NUT B and thread onto bottom end of NIPPLE. Tighten LOCK NUT A against CROSSBAR with pliers until snug.
3. Locate the CANDLE COVERS and pass over SOCKETS. Install bulbs referring to fixture markings and / or labels for maximum wattage.
4. Locate the SHADE ASSEMBLY and pass MOUNTING STUDS at top through MOUNTING HOLES in the FIXTURE COVER. Thread LOCK BALLS onto studs to secure SHADE ASSEMBLY. Hand tighten until snug.
5. Locate th FIXTURE CHAIN and determine desired hanging height of fixture. Adjust chain by removing links if needed. Please note that depending on chain material thickness, you might be required to use chain pliers to spread links open. Proceed to attach one end of chain to FIXTURE LOOP, attached to top of fixture. Unravel FIXTURE SUPPLY and GROUND and pass through FIXTURE CHAIN alternating links. Proceed to pass the fixture wires through the following mounting components in this order: 1) CANOPY LOCK RING, 2) CEILING CANOPY, 3)CANOPY CHAIN LOOP 4) SHAKE PROOF WASHER B.
6. ***Make the connections:*** (Quoizel recommends (2) people for the remainder of installation). Position the fixture under the OUTLET BOX and pass the FIXTURE SUPPLY and GROUND WIRES through the center of the NIPPLE. Connect the HOUSE GROUND WIRE to the FIXTURE GROUND WIRE. Secure both to the CROSSBAR with GREEN GROUND WIRE. Using wire connectors (not supplied), connect the HOUSE WHITE WIRE to the FIXTURE SUPPLY WIRE (RIBBED or WHITE side); connect the HOUSE BLACK (or RED) WIRE to the FIXTURE SUPPLY(SMOOTH or BLACK side). Wrap all connections with approved electrical tape.
7. With the connections properly made, carefully tuck all wires into OUTLET BOX. Locate the CANOPY CHAIN LOOP and thread onto the end of NIPPLE. Proceed to thread LOCK NUT B and SHAKE PROOF WASHER B down NIPPLE and tighten against CANOPY CHAIN LOOP. Attach top end of FIXTURE CHAIN to CANOPY CHAIN LOOP. Pass the center hole in the CEILING CANOPY over the CANOPY CHAIN LOOP and secure to ceiling by threading LOCK RING onto CANOPY CHAIN LOOP.
8. Restore power to installation point **ON**. Retain this sheet for future reference.