


QUOIZEL

6 CORPORATE PARKWAY
GOOSE CREEK, SC. 29445
www. quozel. com

INSTALLATION INSTRUCTIONS

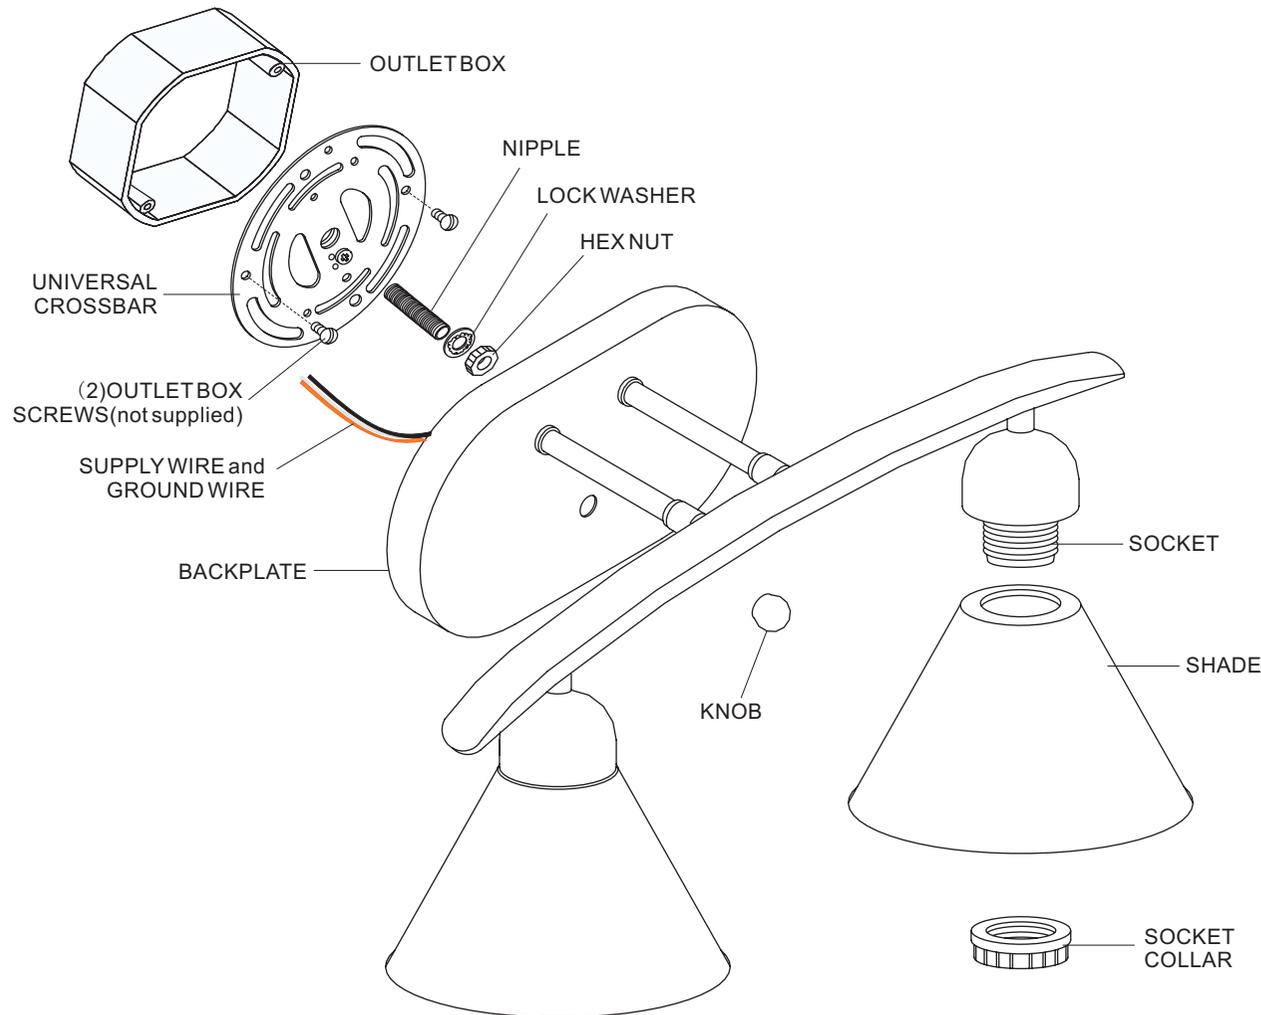

1. Before beginning installation, carefully unpack and identify all parts referring to the illustration.
2. Turn power to installation point OFF at the circuit breaker.
3. Locate the UNIVERSAL CROSSBAR and secure it to the outlet with (2) OUTLET BOX SCREWS (not supplied). Thread the end of the NIPPLE into the center of the CROSSBAR. Position the BACKPLATE over the outlet box. Proceed to locate LOCK WASHER over the NIPPLE and thread the HEX NUT onto the NIPPLE. Pass the mounting hole on the center of the BACKPLATE over the end of the NIPPLE. There should be enough length protruding from the mounting hole on the center of the BACKPLATE. If the NIPPLE length is not long enough, thread the NIPPLE less into the center of UNIVERSAL CROSSBAR. Remove the BACKPLATE and snug the HEX NUT against the UNIVERSAL CROSSBAR with pliers to secure the NIPPLE.
3. **Make the connections:** (Quoizel recommends 2 people for this step)
Use wire connectors (not supplied) attach the HOUSE GROUND WIRE to the FIXTURE GROUND WIRE; connect the HOUSE WHITE WIRE to FIXTURE WHITE (or RIBBED SIDE) SUPPLY WIRE; connect the HOUSE BLACK (or RED) WIRE to the FIXTURE BLACK (or SMOOTH SIDE) WIRE. Wrap each connection with approved electrical tape.
4. Carefully tuck all the wires into the outlet box and position the BACKPLATE over the NIPPLE and secure by threading the KNOB onto the end of the nipple. Tighten until snug.
5. Position the SHADE over the SOCKET as shown. Thread the SOCKET COLLAR onto the SOCKET and hand tighten until snug to secure the SHADE.
6. Install bulb referring to fixture markings and/or labels for maximum wattage.
7. Restore power to the installation point ON. Retain this sheet for future reference.

**IF IN DOUBT ABOUT ELECTRICAL INSTALLATION,
CONSULT A LICENSED ELECTRICIAN!**