


ASSEMBLY/INSTALLATION INSTRUCTIONS

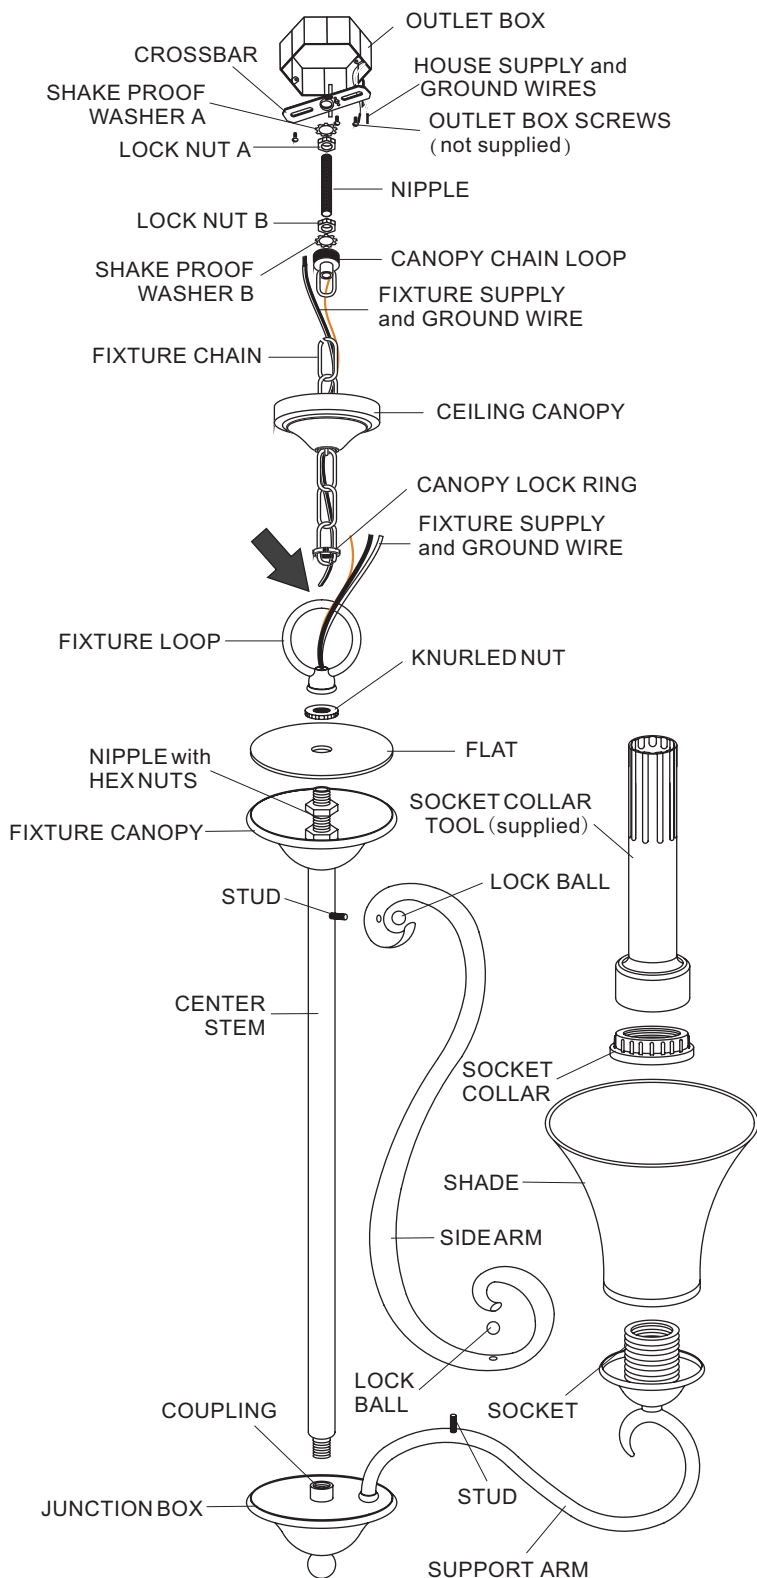

1. Before beginning the installation, carefully unpack and identify all parts, referring to the illustration.
2. Turn the power to installation point OFF at circuit breaker.
3. Carefully unfold all SUPPORT ARMS to proper locations. Locate NIPPLE with HEX NUTS inside of CENTER STEM. Thread end of NIPPLE into the COUPLING on the top center of JUNCTION BOX. Use plier, thread hex coupling against FIXTURE CANOPY and hand tighten until snug.
4. Position FLAT over the top end of NIPPLE and secure with KNURLED NUT. Proceed to thread FIXTURE LOOP onto the nipple and tighten until snug.
5. Locate SIDEARMS and match the holes on them with STUDS on CENTER STEM and SUPPORT ARMS. Secure the SIDEARMS by threading LOCK BALLS onto the STUDS. Hand tighten until snug.
6. Fasten the CROSSBAR to the OUTLET BOX with (2)OUTLET BOX SCREWS (not supplied). Proceed to thread the LOCK NUT A and SHAKE PROOF WASHER A onto the top end of NIPPLE. Thread NIPPLE into the center of CROSSBAR. Locate the LOCK NUT B onto the bottom end of the NIPPLE. Tighten LOCK NUT A against CROSSBAR with plier until snug.
7. Locate the FIXTURE CHAIN and determine desired hanging height of fixture. Adjust chain by removing links if needed. Please note that depending on chain material thickness, you might be required to use chain pliers to spread links open. Proceed to attach one end of chain to FIXTURE LOOP, attached to top of fixture. Pass the fixture wires through FIXTURE CHAIN alternating links. Proceed to pass the fixture wires through the following mounting components in this order: 1)CANOPY LOCK RING; 2)CEILING CANOPY; 3) CANOPY CHAIN LOOP; 4) SHAKE PROOF WASHER B and LOCK NUT B; 5) NIPPLE; 6) SHAKE PROOF WASHER A and LOCK NUT A.
8. **Making the connections:**(2 people recommended for the remaining steps)
Position the fixture under the ceiling mounted outlet box. Pass SHAKE PROOF WASHER B over the NIPPLE. Thread CANOPY CHAIN LOOP onto NIPPLE. Thread LOCKNUT B down the NIPPLE, against the CANOPY CHAIN LOOP and snug with pliers. Pass the wires through the NIPPLE. Take up wire slack and trim wires so that approx. 6" will remain inside outlet box. Proceed to attach the top of the FIXTURE CHAIN to the bottom of the CANOPY CHAIN LOOP. Using wire connectors(not supplied) connect the HOUSE GROUND WIRE to the FIXTURE GROUND WIRE; connect the HOUSE WHITE WIRE to the FIXTURE SUPPLY WIRE (WHITE or RIBBED SIDE); connect the HOUSE BLACK (or RED) WIRE to the FIXTURE SUPPLY WIRE(BLACK or SMOOTH SIDE). Wrap each connection with approved electrical tape.
9. With the proper connections made, proceed to push the CEILING CANOPY upward over the OUTLET BOX. Be sure that all wires are carefully tucked into the OUTLET BOX cavity. Secure canopy against ceiling by threading CANOPY LOCK RING onto the CANOPY LOOP. Tighten until snug.
10. Position the SHADE over the SOCKET. Use SOCKET COLLAR TOOL(supplied), thread SOCKET COLLAR onto SOCKET and hand tighten until snug to secure the SHADE.
11. Install bulbs referring to fixture markings and/or labels for maximum wattage.
12. Restore power to the installation point ON. Retain this sheet for future reference.

**IF IN DOUBT ABOUT ELECTRICAL INSTALLATION,
CONSULT A LICENSED ELECTRICIAN!**