
# HO664200TX – White HO664300TX – Black HO664400TX - Espresso Corner Desk Assembly Instructions

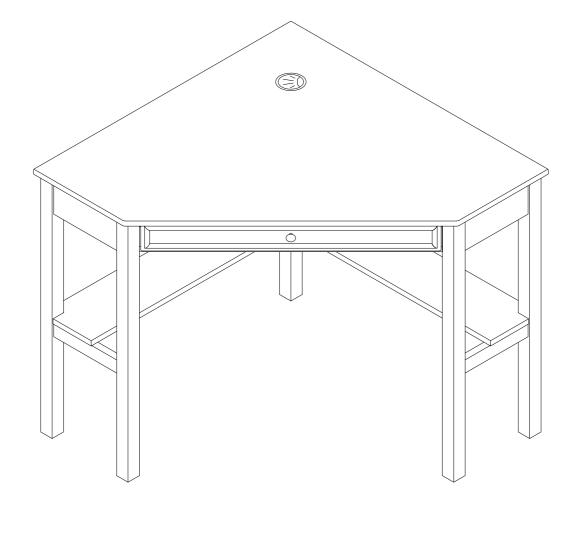

For assistance with assembly contact:
Southern Enterprises Inc.
Customer Service 1-800-633-5096
service@seidal.com
www.seidal.com


### PO#11279




### HO664200TX-White / HO664300TX-Black / HO664400TX-Espresso

## Corner Desk Parts List


Please check packaging for all parts and hardware before discarding. Unpack and lay parts on clean, padded surface like carpet or blanket. Check that you have all parts indicated. Call customer service if hardware is missing. Before beginning assembly, carefully study the diagrams below and sort your hardware according to the pictures. Using the incorrect hardware will cause damage.

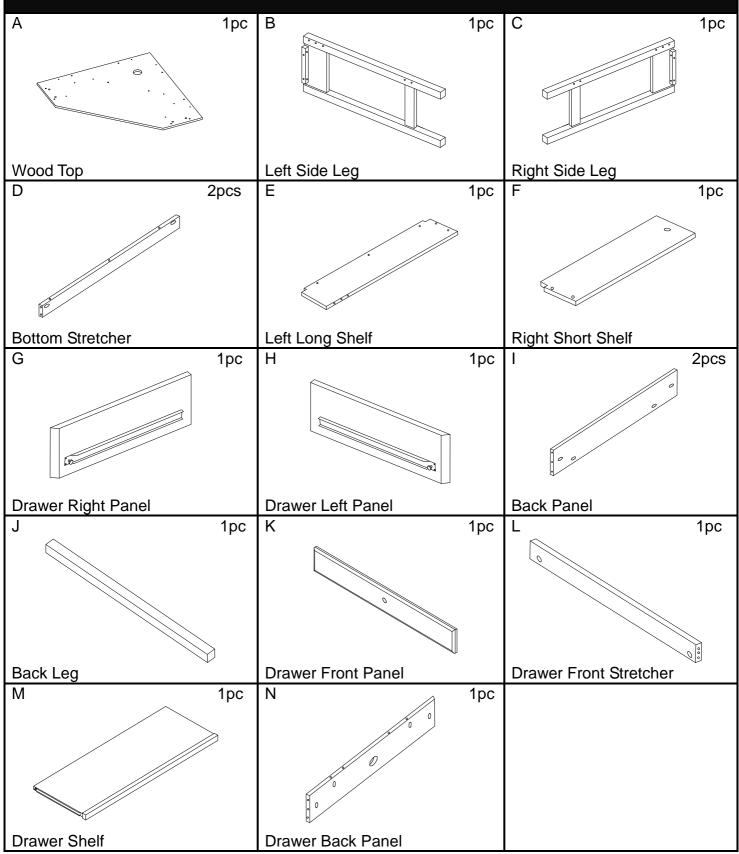

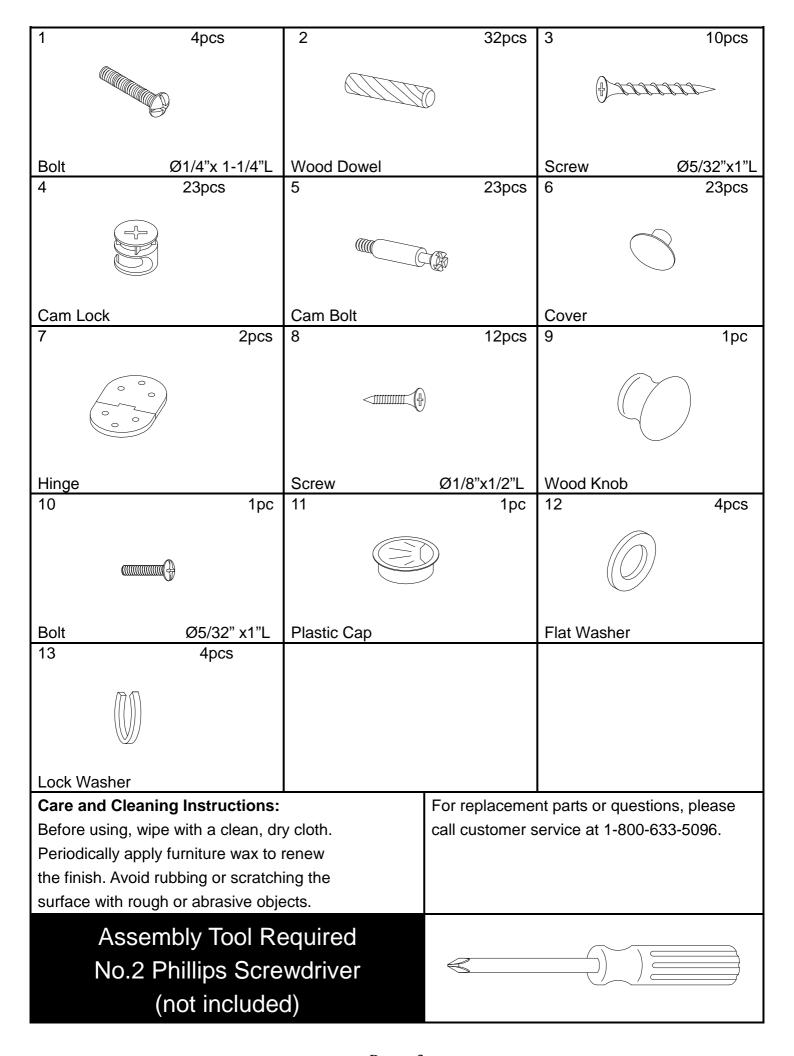

### HO664200TX-White / HO664300TX-Black / HO664400TX-Espresso


# Corner Desk Assembly Instructions

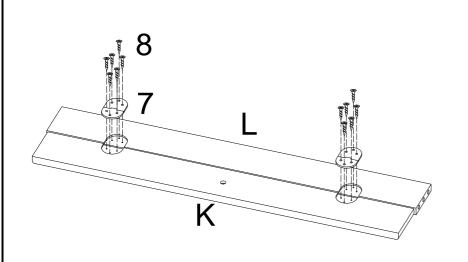

Please do not over-tighten cam locks. Please stop when you feel them tighten.

Attach hinges (7) to drawer front panel (K) and drawer front stretcher (L) by using screws (8) as shown.

Figure 1

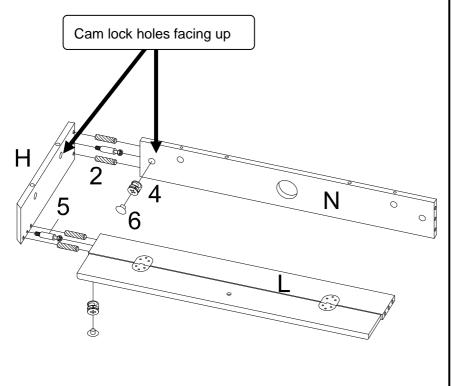


Insert cam locks (4) into holes on drawer back panel (N) and drawer front stretcher (L). Screw cam bolts (5) into holes on drawer right panel (G). The cam lock hole for drawer front stretcher (L) should be facing down as shown on the illustration. Make sure the holes for the cam locks on drawer right panel (G) and drawer back panel (N) are facing upwards as shown.


Attach drawer left panel (H) to drawer back panel (N) and drawer front stretcher (L) by inserting wood dowels (2) and cam bolts (5) into corresponding holes until drawer right panel (G), drawer back panel (N), and drawer front stretcher (L) meet.


Tighten by rotating cam locks (4) clockwise with Phillips screwdriver.

Make sure not to over tighten.

Figure 2

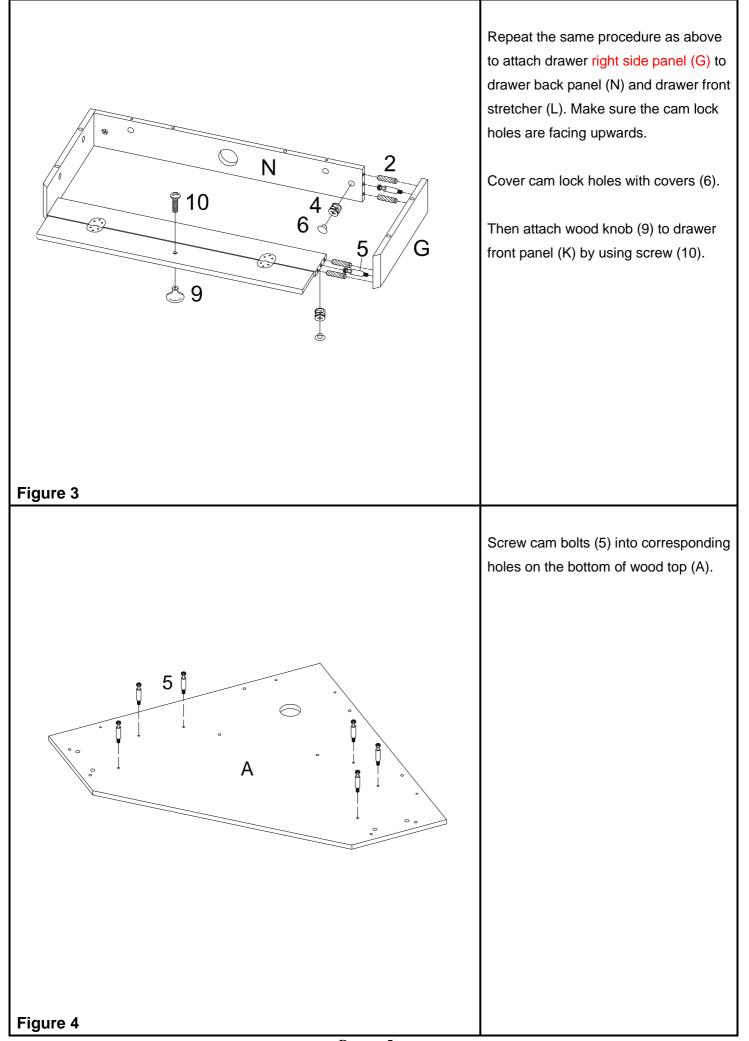

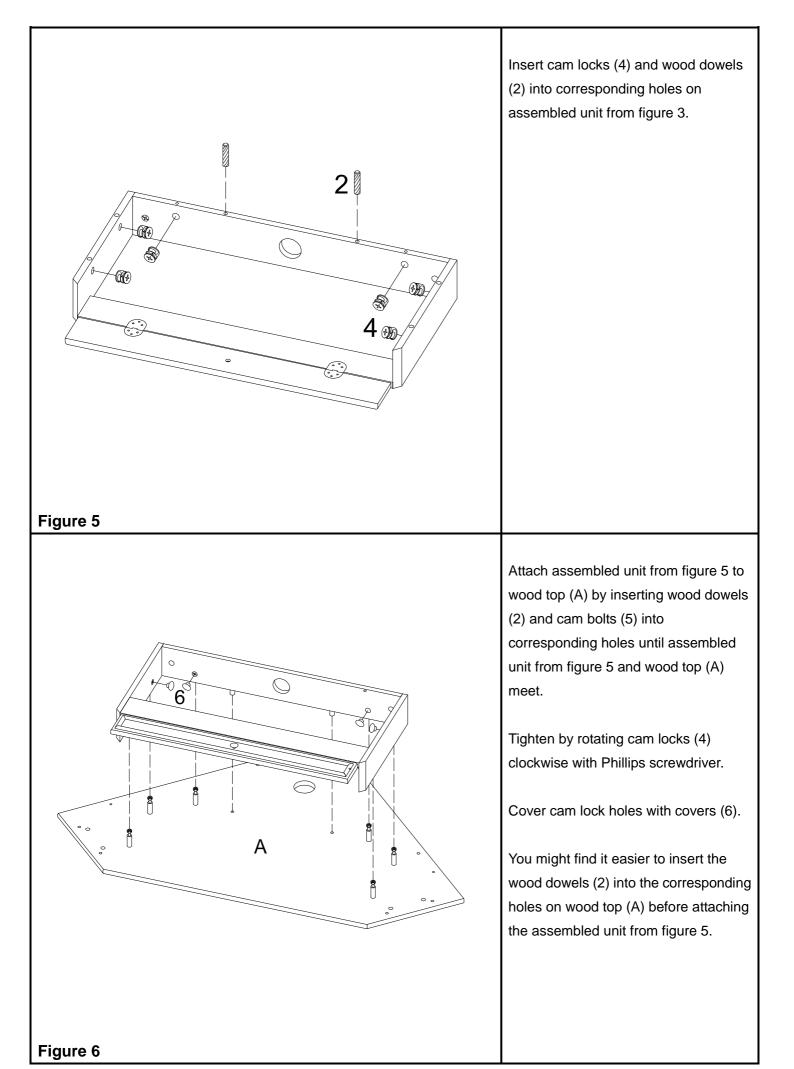

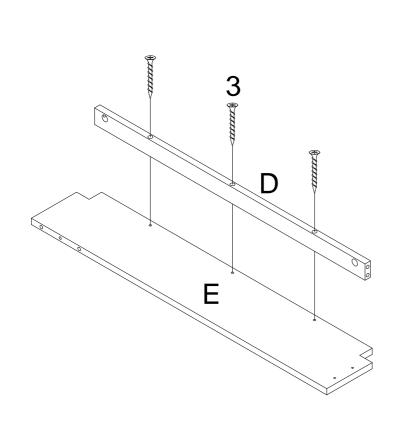


Insert screws (3) into bottom stretcher (D). Attach bottom stretcher (D) to left long shelf (E) by inserting screws (3) into predrilled holes on left long shelf (E).

Tighten screws (3) with Phillips screwdriver.

Make sure to insert the screws through the big hole on bottom stretcher (D) rather than the small hole.

Figure 7

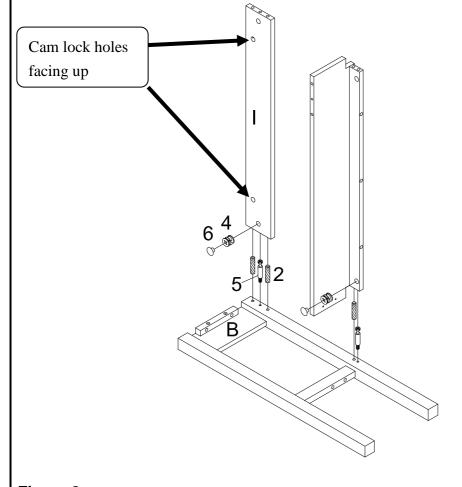

Insert cam locks (4) into corresponding holes on back panel (I) and assembled unit from figure 7. Screw cam bolts (5) into holes on left side leg (B).


Attach back panel (I) and assembled unit from figure 7 to left side leg (B) by inserting wood dowels (2) and cam bolts (5) into corresponding holes until assembled unit from figure 4 and back panel (I) and left side leg (B) meet.

Make sure back panel (9) has the cam lock holes facing upward.

Tighten by rotating cam locks (4) clockwise with Phillips screwdriver.

Cover cam lock holes with covers (6).

Figure 8

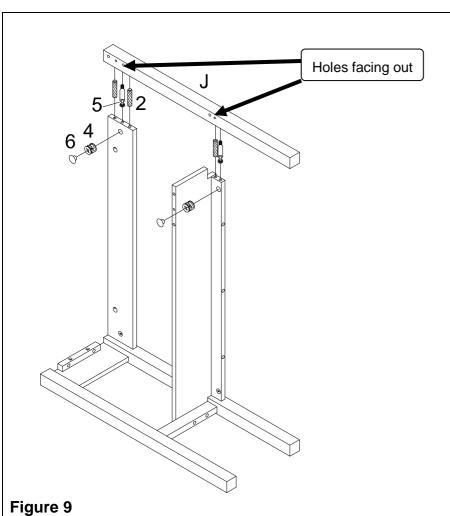


Insert cam locks (4) into holes on assembled unit from figure 8. Screw cam bolts (5) into holes on back leg (J).

Attach back leg (J) to assembled unit from figure 8 by inserting wood dowels (2) and cam bolts (5) into corresponding holes until assembled unit from figure 8 and back leg (J) meet.

Tighten by rotating cam locks (4) clockwise with Phillips screwdriver.

Cover cam lock holes with covers (6).


Make sure the additional cam lock and wood dowel holes are facing outwards as shown in the illustration.

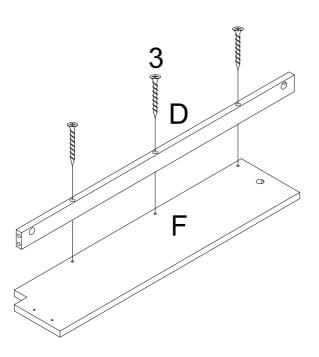

Insert screws (3) through bottom stretcher (D) and into the predrilled holes on right short shelf (F).

Tighten screws (3) with Phillips screwdriver.

Figure 10

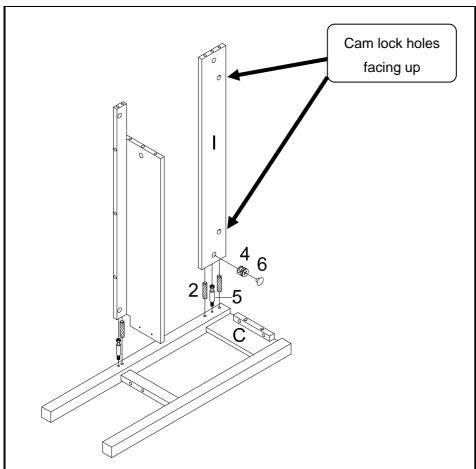

Insert cam locks (4) into holes on back panel (I) and assembled unit from figure 10. Screw cam bolts (5) into holes on right side leg (C).


Attach back panel (I) and assembled unit from figure 10 to right side leg (C) by inserting wood dowels (2) and cam bolts (5) into corresponding holes until assembled unit from figure 7 and back panel (I) and right side leg (C) meet.

Tighten by rotating cam locks (4) clockwise with Phillips screwdriver.

Cover cam lock holes with covers (6).

Make sure the cam lock holes on back panel (I) are facing upwards as shown.

Figure 11

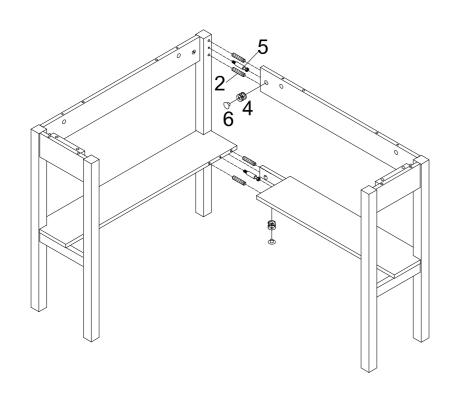

Insert cam locks (4) into holes on assembled unit from figure 11. Screw cam bolts (5) into holes on assembled unit from figure 9.


Attach assembled unit from figure 11 to assembled unit from figure 9 by inserting wood dowels (2) and cam bolts (5) into corresponding holes until assembled unit from figure 11 and assembled unit from figure 9 meet.

Tighten by rotating cam locks (4) clockwise with Phillips screwdriver.

Cover cam lock holes with covers (6).

This step may be easier with the help of another person.

Figure 12

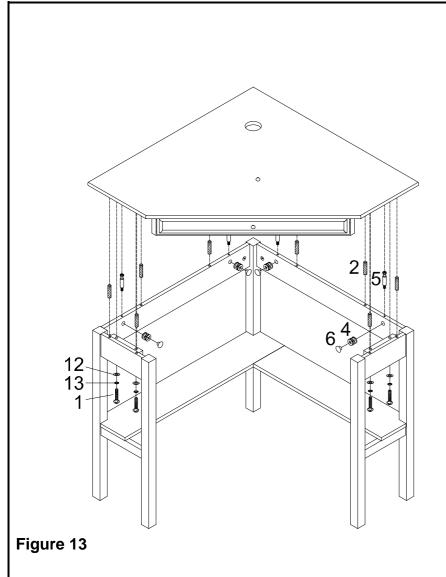

Insert cam locks (4) into holes on assembled unit from figure 12. Screw cam bolts (5) into holes on the bottom of wood top (A).

Attach wood top (A) to assembled unit from figure 12 by inserting wood dowels (2) and cam bolts (5) into corresponding holes until assembled unit from figure 12 and wood top (A) meet.

Insert bolts (1) through lock washers (13) and flat washers (12) to connect assembled unit from figure 12 and wood top together.

Tighten by rotating cam locks (4) and bolts (1) clockwise with Phillips screwdriver.

Cover cam lock holes with covers (6).


This step is easier with the help of another person.

Turn the table upside down.

Insert screws (3) into holes on assembled unit from figure 13 as shown.

Tighten screws (3) with Phillips screwdriver.

Figure 14

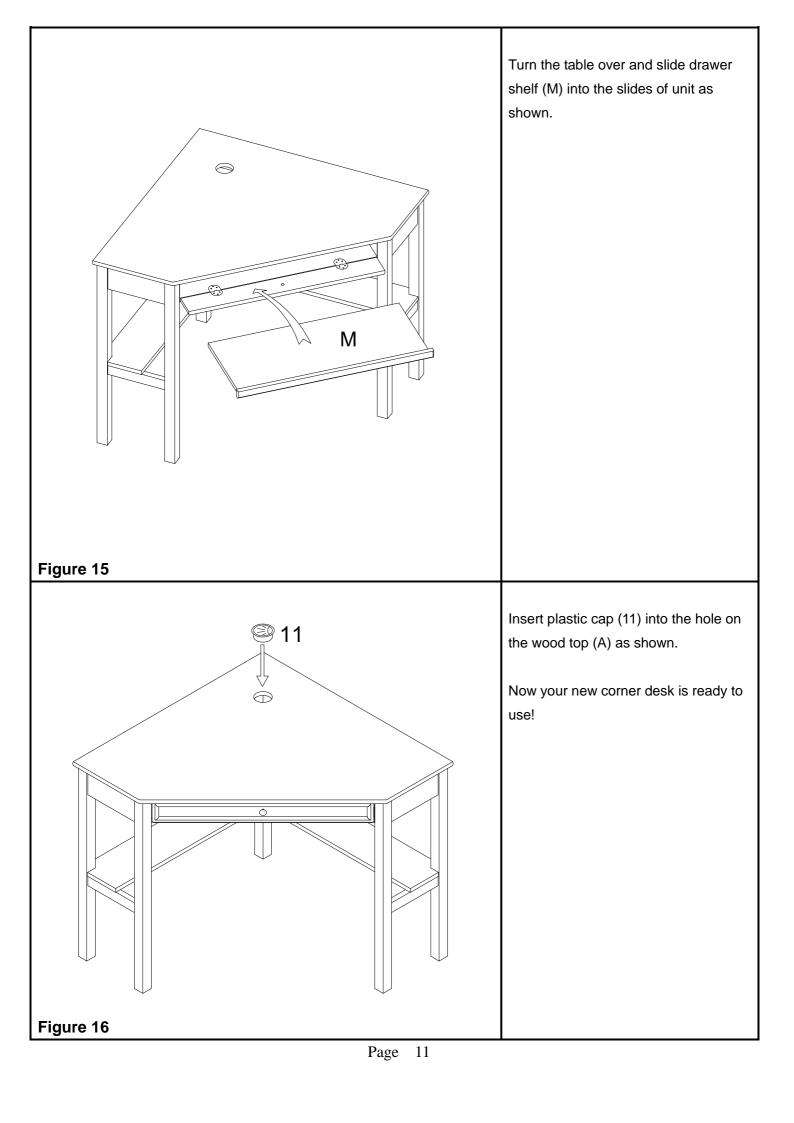

Parts Replacement Form			
Customer Information			
Name			
Address			
City/State/Zip Code			
Phone Number			
Please indicate where you purchased this item: Store/Website/Catalog			
Please indicate color/size/style number:			
Style No P	Parts Letter	Parts Description	Quantity Needed

Please immediately examine this product carefully. Any request for missing parts or damage replacement must be received within 90 days of your receipt of the product. Replacement, if available, will be honored within this time frame. Parts will not be available for items arriving fully assembled. We do not recommend modifying product(s) and we are not responsible for any damages due to product modification(s). If damages or missing parts are not reported within 90 days of your receipt, we are under no obligation to provide parts or replacement merchandise.

Please contact Southern Enterprises at 800-633-5096 or in Dallas 972-869-0111/ 9am – 4pm Mon-Fri Central time if you have product issues or email us at service@seidal.com. Please ask for customer service representative for issues involving damages or replacement parts. Please ask for technical assistance representative for any issues with product and assembly/construction.

Please contact the retailer that you purchased from for returns.



Customer Service 1-800-633-5096
<a href="mailto:service@seidal.com">service@seidal.com</a>
Southern Enterprises, Inc.
600 Freeport Parkway, Suite 200
Coppell, Texas 75019