INSTALLATION AND SAFETY INSTRUCTIONS

HC-449

Instructions of Assembly and Installation of the Ambiance™ Track and Lens.

WARNING: USE ONLY WITH 9423, 9427, OR 9428 SOCKETS.
MAXIMUM 10W LAMP. USE MINIMUM 6" ON CENTER SPACING.
Read and understand these instructions before installing

fixture. WARNING: BE SURE ELECTRICITY TO SYSTEM YOU ARE WORKING ON IS TURNED OFF; EITHER THE FUSE REMOVED

Retain these instructions for maintenance reference.

ASSEMBLY

STEP 1:

Cut track and lens to desired length.

OR THE CIRCUIT BREAKER SET AT OFF.

STEP 2:

Attach track to surface with 9862 screws (not supplied).

STEP 3:

Snap cable onto track, be sure not to exceed cable maximum.

WARNING: RISK OF FIRE. MAXIMUM WATTAGE PER 105° 10/2 CABLE LENGTH:

300 WATTS @ 12V. 500 WATTS @ 24V.

STEP 4:


Install sockets (not included) (See supplied instruction sheet for socket installation).

STEP 5:

Install lamps (not included).

STEP 6:

Snap diffuser into track.

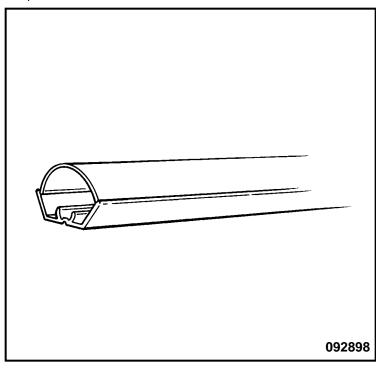

INSTALLATION AND SAFETY INSTRUCTIONS

HC-449

Instructions of Assembly and Installation of the Ambiance™ Track and Lens.

WARNING: USE ONLY WITH 9423, 9427, OR 9428 SOCKETS. MAXIMUM 10W LAMP. USE MINIMUM 6" ON CENTER SPACING. Read and understand these instructions before installing fixture.

WARNING: BE SURE ELECTRICITY TO SYSTEM YOU ARE WORKING ON IS TURNED OFF; EITHER THE FUSE REMOVED OR THE CIRCUIT BREAKER SET AT OFF.

Retain these instructions for maintenance reference.

ASSEMBLY

STEP 1:

Cut track and lens to desired length.

STEP 2:

Attach track to surface with 9862 screws (not supplied).

STEP 3:

Snap cable onto track, be sure not to exceed cable maximum.

WARNING: RISK OF FIRE. MAXIMUM WATTAGE PER 105° 10/2 CABLE LENGTH:

300 WATTS @ 12V. 500 WATTS @ 24V.

STEP 4:

Install sockets (not included) (See supplied instruction sheet for socket installation).

STEP 5:

Install lamps (not included).

STEP 6:

Snap diffuser into track.

