



IMPORTANT TURN OFF THE POWER AT THE MAIN FUSE OR CIRCUIT BREAKER BOX BEFORE STARTING INSTALLATION

Carefully unpack and identify all parts before assembly. Bulbs are not included.

1. Attach Chains:

A. Open adjustable chain links by turning small round tube at one side. See fig. 1.

B. Hook chain onto open adjustable chain link. Then attach adjustable chain link onto loop located at fixture plate. Close adjustable chain link by turning back small round tube.

C. Repeat other side.

D. At this point determine the desired length of chains to hang. Remove any unwanted chain links by following fig. 2.

E. Take bottom open link of chain and hook onto fixture loop. Then close back link.

F. Repeat other side.

G. Hook fixture loops onto fixture curls.

- **2.** Take ground wire (without plastic insulation) and weave through above chain links. Then thread through hole in fixture plate loop. Repeat with fixture wires (with plastic insulation).
- 3. Follow enclosed "Multiple Standard Installation Instructions" for electrical and fixture installation onto ceiling outlet box.
- **4.** Install shades onto fitters by fastening counter rings onto threaded sockets.
- **5.** Install bulbs (not included). See relamping label located at socket area for type and maximum allowed wattage.

©MURRAY FEISS IMPORT LLC.

MURRAYFEISS