

ASSEMBLY INSTALLATION INSTRUCTIONS


MODE NO : 6029-PR62 EB

WARNING: TO AVOID RISK OF ELECTRICAL SHOCK, BE SURE TO SHUT OFF POWER WHILE INSTALLING OR SERVICING THIS FIXTURE.

NOTE: Before installing, consult local electrical codes for wiring and grounding requirements.

Installation Steps

1. Carefully unpack your new Fixture and lay out all the parts on a clear area. Take care not to loose any small parts necessary for installation.
2. Shut off power at the Fuse Box or Circuit Breaker Box. Remove the old fixture from ceiling, including the Crossbar (D)
3. Attach the Crossbar (D) to the Ceiling Box using the two Screws from the Outlet Box. The side of the Crossbar (D) marked "GND" must face out.
4. Raise the Ceiling Pan such that the Outlet Box and splices are completely covered.
5. While holding the Ceiling Pan toward the ceiling, connect the electrical wires as follows. Connect the black wire from the fixture to the black house (hot) wire. Connect the white wire from the fixture wire to the white (neutral) house wire. Make sure all wire nuts are secured. You may wrap the connections with electrical tape. If your outlet has a ground wire (green or bare copper) connects fixtures Ground Wire to it. Otherwise connect Fixture's Ground Wire directly to the Crossbar (D) using the Green Screw provided. Tuck the wire connections neatly into the Ceiling Box as you hold the Ceiling Pan assembly toward the Ceiling.
6. Attach the Washer onto the Nipple, and secure with the Nut.
7. Attach the Cap (L) over the Nipple (G) and secure with Finial (M).
8. Place Glass Shade onto Lamp Holder and secure with Cap and Socket Ring
9. Install the light bulbs in accordance with the fixture's specifications. **DO NOT EXCEED THE MAXIMUM WATTAGE RATING!**
10. Your installation is now complete. Return power to the Ceiling Box and test the Fixture.

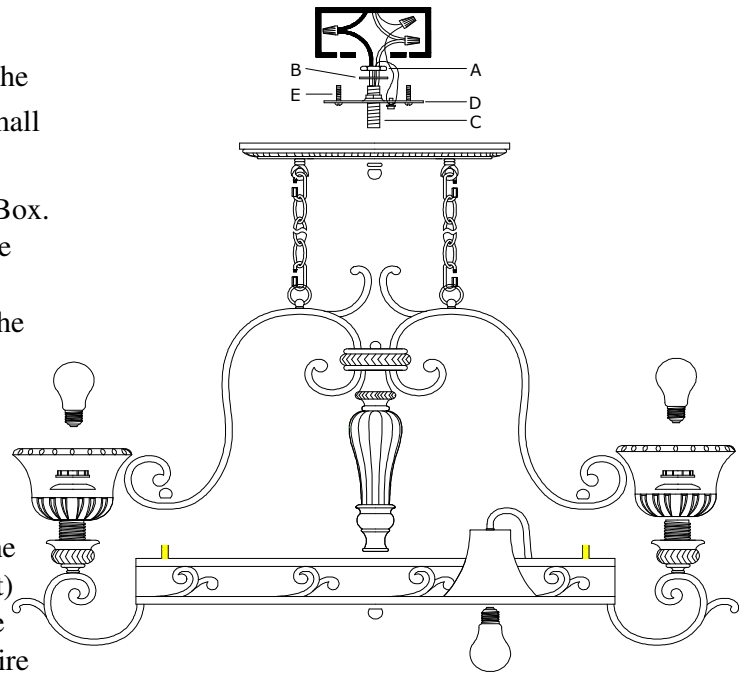

Connecting the wires

