

INSTALLATION INSTRUCTIONS


READ AND SAVE THESE INSTRUCTIONS

CAUTION

TO AVOID POSSIBLE ELECTRIC SHOCK, MAKE SURE THE ELECTRICITY IS SHUT OFF AT THE MAIN PANEL, IF YOU ARE REPLACING AN EXISTING FIXTURE, FIRST TURN THE FIXTURE OFF, NEXT, TURN THE WALL SWITCH OFF, FINALLY, GO TO THE MAIN FUSE OR BREAKER BOX IN YOUR HOME, TURN THE FUSE OR BREAKER BOX TO THE OFF POSITION, SOME TYPES OF FUSE MUST BE UNSCREW TO SHUT OFF THE POWER, ALL WIRING MUST BE DONE IN ACCORDANCE WITH NATIONAL AND LOCAL ELECTRIC CODES. IF YOU ARE NOT FAMILIAR WITH WIRING, YOU SHOULD USE A QUALIFIED ELECTRICIAN.

THIS FIXTURE IS INTENDED TO BE MOUNT TO A UL LIST OUTLET BOX CAPABLE OF SUPPORTING THE FIXTURE.

1. ATTACH THE CROSSBAR TO THE CEILING OUTLET BOX USING THE TWO SCREWS PROVIDED WITH THE OUTLET BOX.(NOTED: IF THE SCREWS WITH OUTLET BOX ARE TOO SHORT, USE THE (2) 8-32 X 1-1/4 SCREWS PROVIDED WITH THE MOUNTING HARDWARE PACKAGE). NEXT, SCREW THE SCREW COLLAR LOOP ONTO THE NIPPLE AND THEN SCREW THE NIPPLE INTO THE CROSS BAR.
2. SLIDE THE SCREW COLLAR NUT AND THE N THE CANOPY ONTO THE END OF THE CHIAN, THEN FASTEN THE END LINK OF CHAIN TO THE SCREW COLLAR LOOP.
3. INSERT THE FIXTURE WIRE AND THE GROUND WIRE UP THROUGH THE NIPPLE, ATTACH THE WHITE OR RIBBED FIXTURE WIRE TO THE SUPPLY WHITE WIRE IN THE OUTLET BOX USING THE TWIST ON WIRE CONNECTORS PROVIDED, ATTACH THE BLACK OR SMOOTH FIXTURE WIRE TO THE BLACK SUPPLY WIRE IN THE SAME MANNER, ATTACH THE FIXTURE AND SUPPLY GROUND WIRE ONTO THE CROSS BAR USING THE GREEN GROUND SCREW.
4. TUCK THE WIRE CAREFULLY INSIDE THE OUTLET BOX, NEXT, RAISE THE CANOPY TO THE CEILING SECURE IN PLACE BY SCREWING THE SCREW COLLAR NUT ONTO THE SCREW COLLAR LOOP.

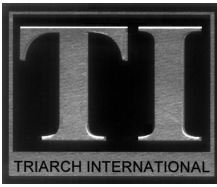

Model No.: 39414

ASSEMBLY INSTRUCTIONS

READ AND SAVE THESE INSTRUCTIONS

UNPACK THE FIXTURE

1. TO PROTECT THE FINISH, PLACE ALL PARTS ON A SOFT SURFACE.
2. INSTALL THE CENTER COLUMN TO THE WIRE BOX AS BELOW DIAGRAM .
3. INSTALL THE GLASS SHADE TO THE SOCKET AND SECURE WITH SOCKET RING, INSERT THE LIGHT BULB.
4. DETERMINE THE LENGTH OF CHAIN REQUIRED AND TO HANG THE DESIRED HEIGHT, USING PLIERS OPEN END LINK OF CHAIN AND ATTACH TO THE CHAIN LOOP ON TOP OF THE FIXTURE. REMOVE OR ADD CHAIN AS DESIRED AT THIS TIME, LACE FIXTURE WIRE AND GROUND WIRE UP THROUGH EVERY OTHER LINK OF CHAIN.

