

G51089 Desk To Easel Art Cart Assembly Instructions

For ages 3 and up.
Adult assembly required.

⚠ WARNING

Small parts and sharp points may be present prior to assembly.

Care Instructions

To clean your product, use mild soap and water on a damp cloth. Do not use window cleaners or cleaning abrasives as they will scratch the surface and could damage the protective coating.


 

 
Customer Service

For questions regarding this product, or to receive replacement or missing parts, contact Customer Service at (800) 524-3555. Please have the model number and part number(s) located in this Assembly Instruction sheet available for reference.



Limited Warranty

All Guidecraft products are warranted to the original purchaser at the time of purchase and for a period of one (1) year thereafter. In order to provide you with timely assistance, please thoroughly inspect your product for missing or defective parts immediately after opening the carton. To receive replacement or missing parts under this warranty, contact Customer Service. You will also need your sales receipt or other proof of purchase.


Hardware and Parts

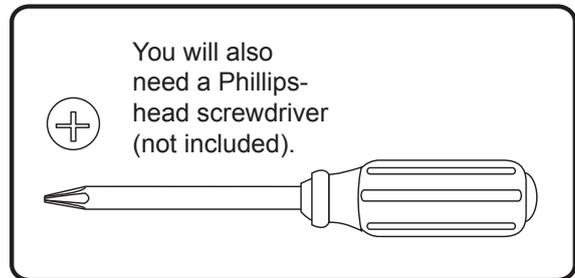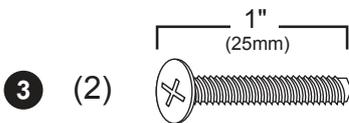


Art Cart Includes:

  
-  4 Fabric Storage Bins
-  5 Paint Cups with Lids
-  1 Starter Roll of Paper (18")

To order additional paper (**G98050 18" Paper Roll**) call Customer Service at (800) 524-3555 or visit online at www.guidecraft.com.

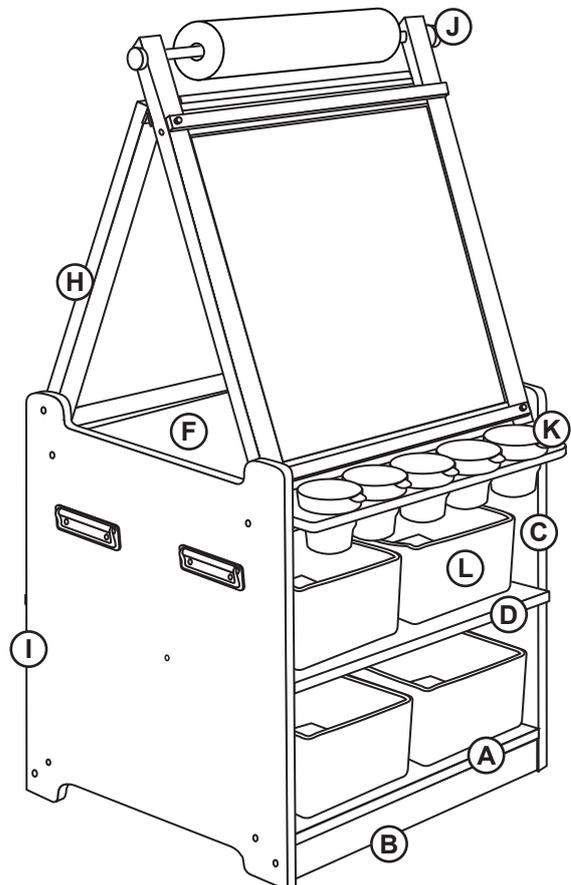


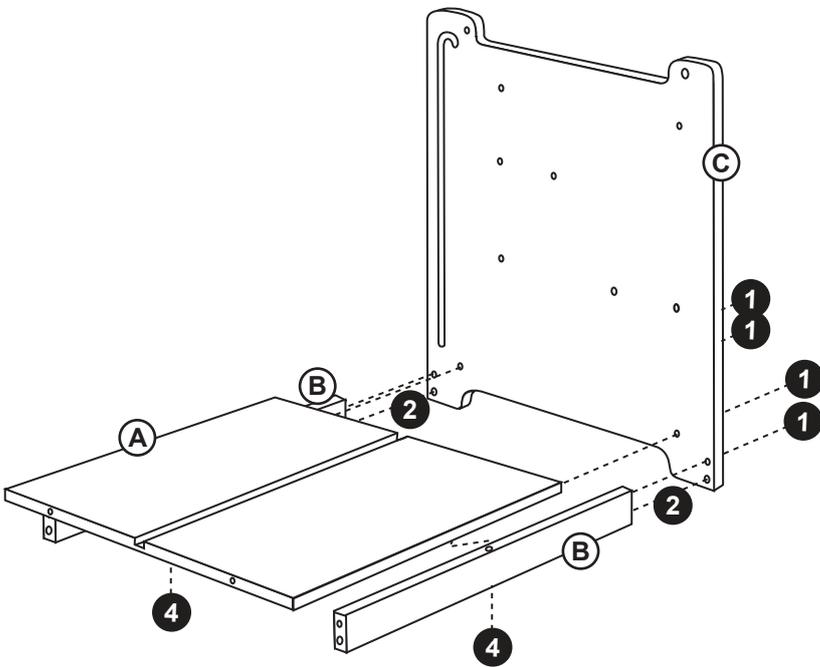


STEP 1

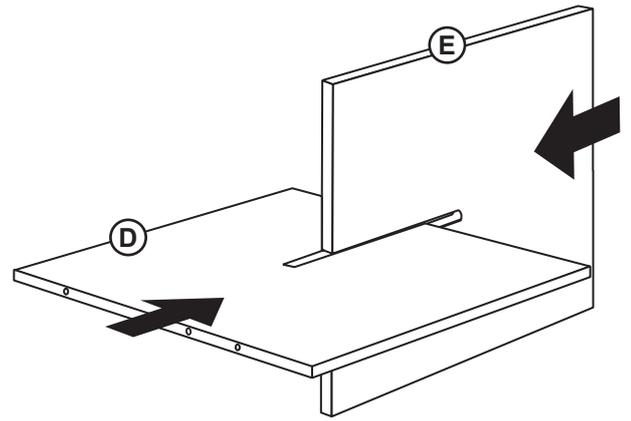


STEP 2

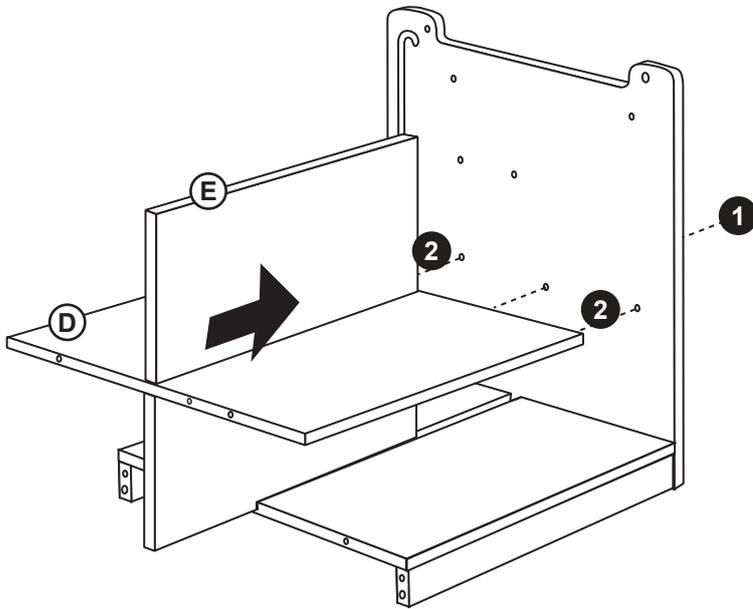

STEP 3

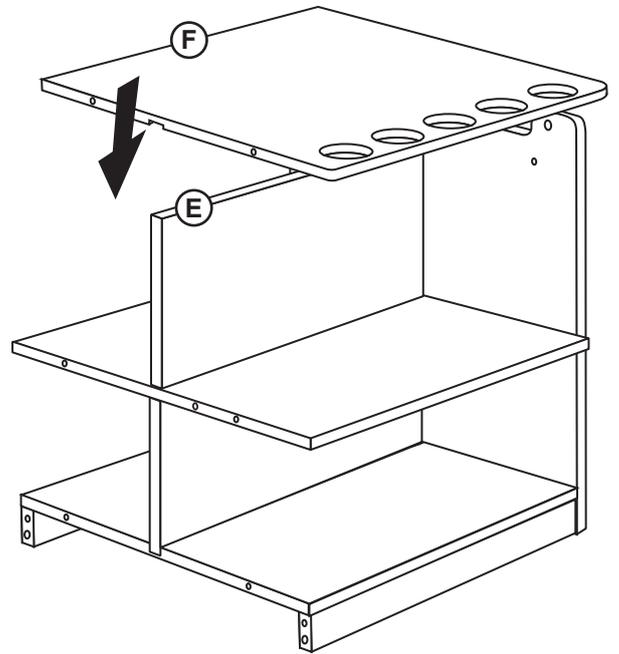


STEP 4

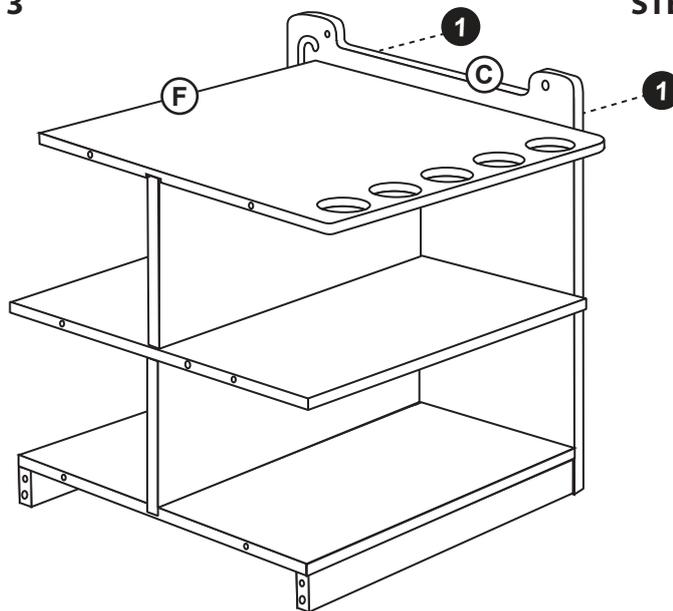


STEP 5

HELPFUL TIP:


Gently turn the unit on its side, with Part C flat on the floor, to assemble Step 6 and Step 7. It will be easier to align the parts and hardware.

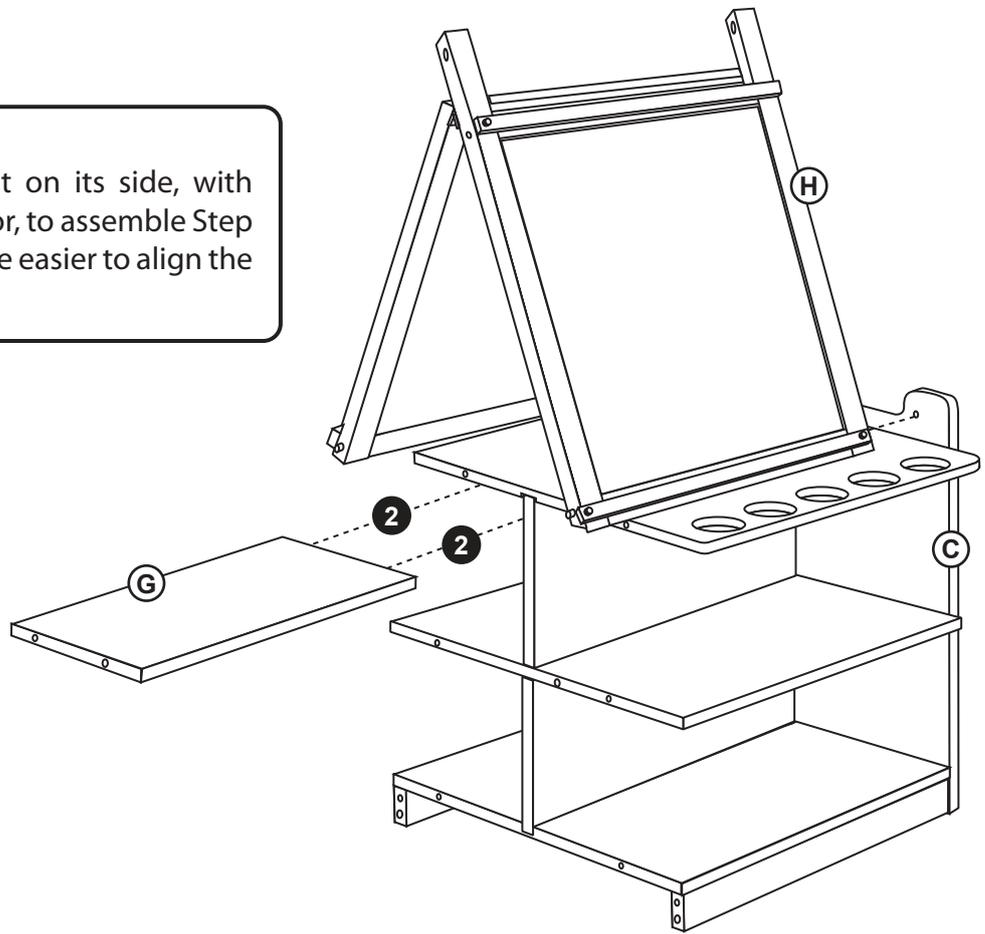

STEP 6

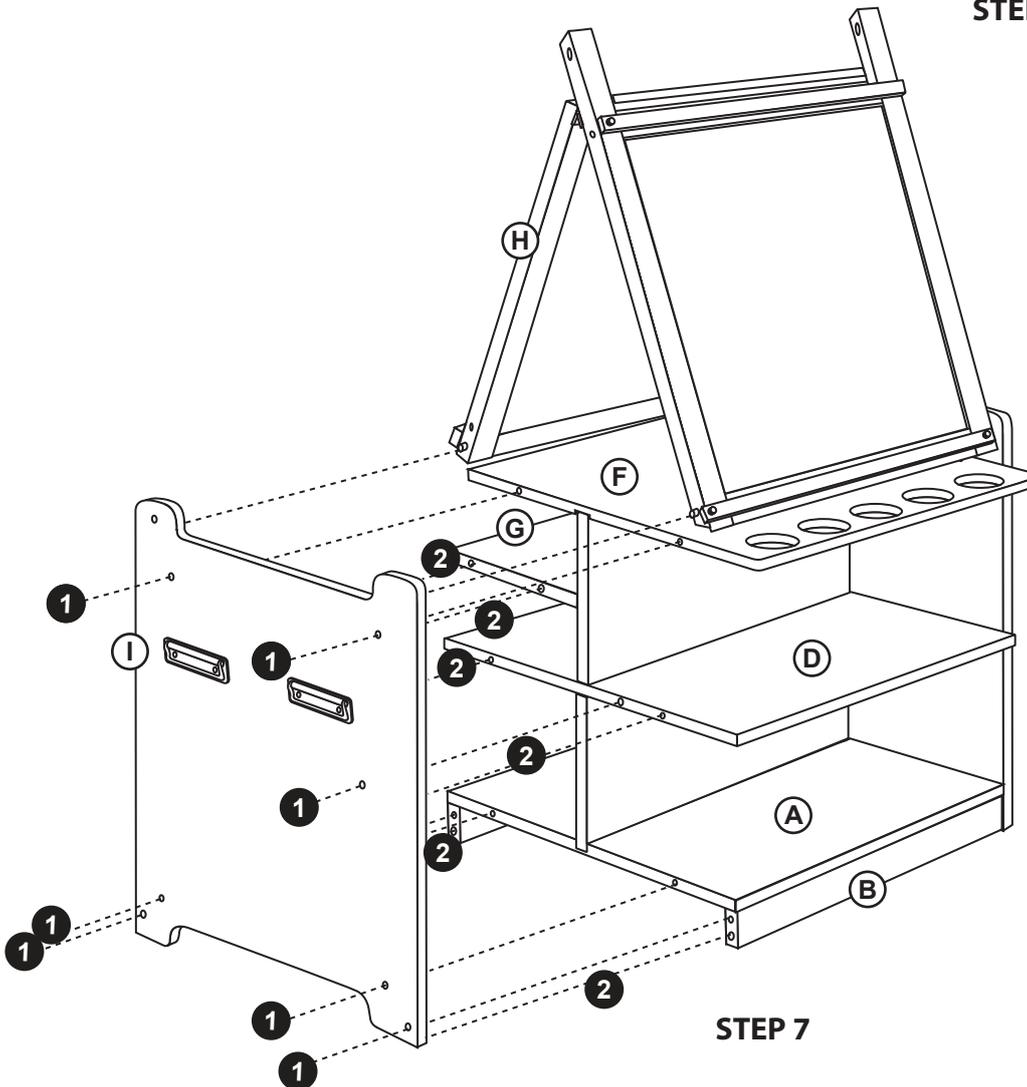


STEP 7

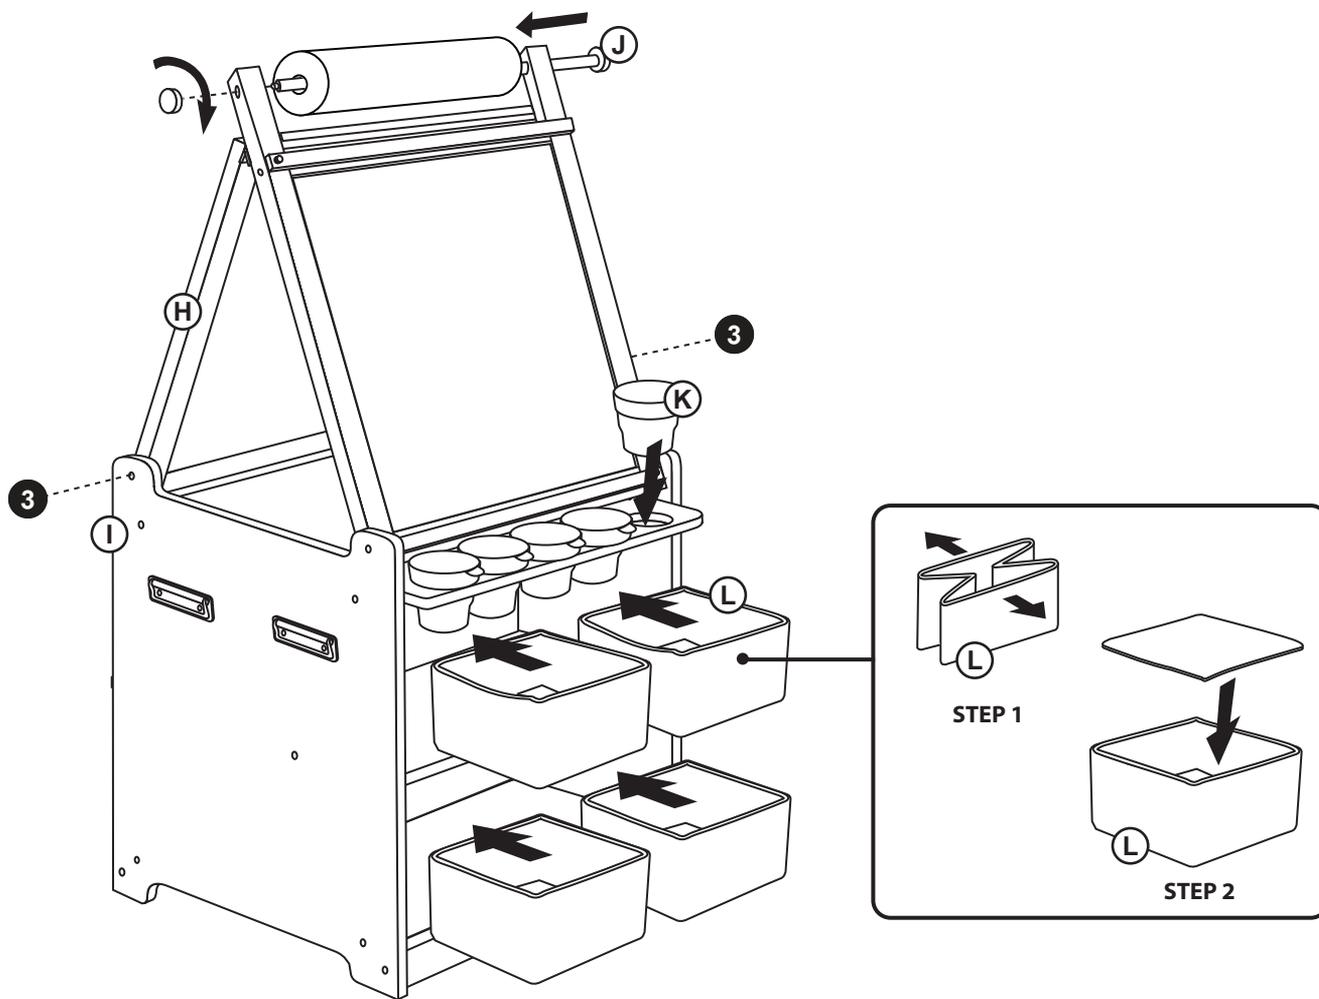

STEP 8


Switching Your Art Cart From Desk to Easel

ADULT ASSEMBLY IS NEEDED WHEN SWITCHING THE ART CART TO BOTH DESK AND EASEL OPTIONS.

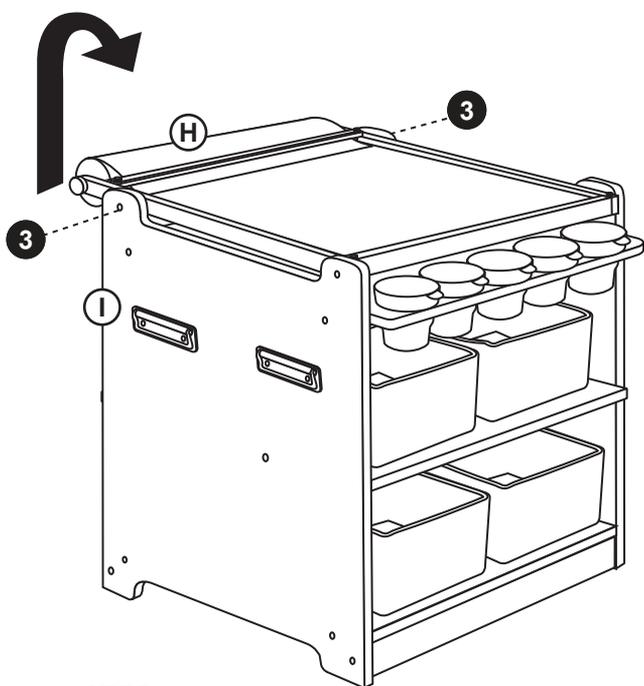

STEP 1

Remove Hardware 3 from both sides of Art Cart. Lift Part H up and allow dowels to rest into the easel position.

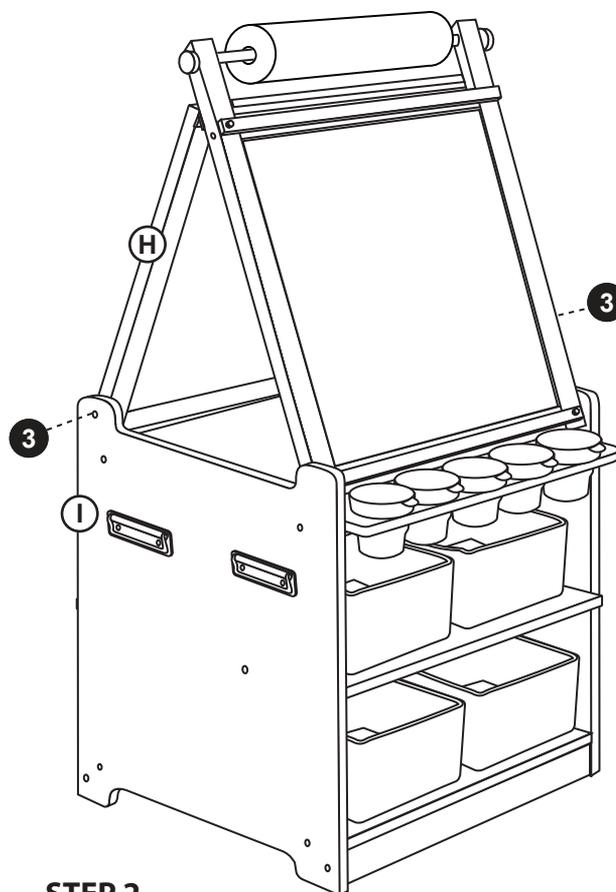

STEP 2

Secure Part H with Hardware 3 on both sides, as shown in above diagram.