King Canopy CarryPak

Please read instructions completely before setting up your instant canopy.

SAFETY AND CARE INFORMATION

- 1 Always use common sense.
- 2 Do not use your canopy as a permanent cover.
- 3 It is designed for temporary use only. Damages due to weather conditions are not warranted.
- 4 Do not set up on a steep incline. Do not leave unattended.
- 5 Never set up in windy, rainy, or snowy conditions. Canopy is not intended to serve as protection from such conditions. Use for shade only. Disassemble and properly store your Canopy after each use.
- 6 Do not let snow or rain accumulate on top. It will collapse.
- 7 Always us an anchoring system. Your canopy will take flight in windy conditions. Anchoring is your responsibility. Damage due to weather conditions are not warranted.
- 8 Keep your canopy away from all fire sources, such as grills or fire pits.
- 9 Do not machine wash your top. Wash with mild soap and water with a brush while the Instant Canopy is open without the legs extended. Do not use harsh detergents, abrasives or bleach.
- 10 Do not put your Instant Canopy away while wet or damp.
 This promotes mildew and rust. Always store completely dry.
- 11 For best results in keeping your top clean and to avoid small rips and tears, it is recommended that the top be removed and stored in the carry bag after each use.
- Never leave your canopy unattended!

WARNING!

Keep all flame and heat sources away from this tent fabric. This tent is made with fabric that meets CPAI-84 specifications for flame resistance. It is not fire proof. The fabric will burn if left in continuous contact with any flame source.

King Canopy Brand Products


1730 Five Points Lane Fuquay-Varina, NC 27526 Phone: 1-800-800-6296 • www.kingcanopy.com



CarryPak Instant Canopy 8'x8'



SET UP & SAFETY INSTRUCTIONS

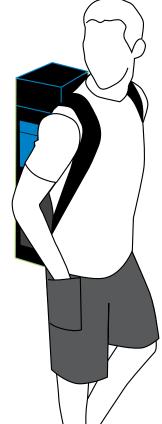

SETUP


TAKEDOWN

1. Remove canopy from Backpack and place it feet down where you are setting it up.





1. Starting with the lowest leg section, release and push in each section of the legs to their innermost point.

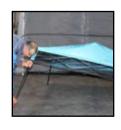

2. Pull the opposite corners outwards to expand canopy.





2. Remove canopy top and half wall, fold them up so they fit in the back pack but do not put them in the back pack yet.



3. Slide the corner brackets up on all four corners until the pins lock in place.





3. Release the corner brackets by pulling the rings out to allow the frame to close.



4. Drape the top over the frame and attach the hook and loop tape at each corner.





4. After all corners are released, pick up one corner and walk inward towards the opposite corner to close unit.



Extend the canopy legs out to desired height, beginning with the lower (first) section and pull out each section one by one.





5. Fully close (compress) frame and slide into back pack.

Make sure to shake off all dirt, sand and clean off the frame if possibe to keep inside of back pack clean and the legs of your canopy from sticking when setting up again.



