


Experience
the comfort
of your
Eames® chair

 Herman Miller

For use with your Aluminum Group, Soft Pad Group, or Executive Chair. Adjustments may vary according to chair model.

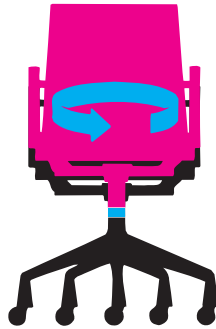

Seat Height

To lower: Turn collar counterclockwise while holding chair arm

To raise: Turn collar clockwise while holding chair arm



Tilt Tension

To increase: Turn knob to right while sitting in chair

To decrease: Turn knob to left while sitting in chair



User information: Installers do not remove

Users: Retain This Information for Future Reference

Maintenance

A periodic inspection of chair components and fasteners should be made to ensure that the chair is structurally intact and functioning properly. Damaged and broken parts should be replaced and loose fasteners tightened. The support tube should be lubricated to ensure smooth operation of the seat height adjustment (See your dealer for further information.). General cleaning instructions are found in the *Care and Maintenance Manual* available from your Herman Miller dealer.

For the location of the sales facility or dealer near you, visit www.hermanmiller.com or call (800) 851 1196.