IMPORTANT! Read entire instruction sheet before you start installation and assembly.

## **A WARNING**

 Installer must verify that the ceiling will safely support four times the combined weight of all attached equipment and hardware. This product is to be used in combination with model PJRL100 Projector Mount Base Unit (see page 2).

 
Before you start check the parts list below to make sure all of the parts shown are included.

Fasten interface bracket (A) to adapter plate

using two M5 socket-pin screws (**B**). Tighten screws (**B**) using 4 mm allen wrench pro-

	Parts List		
	Description	Qty.	Part Number
Α	interface bracket	1	055-1251
В	M5 x .8 x 8 mm socket pin screw	2	520-1062


Note: Actual parts may appear slightly different than illustrated.



vided with adapter plate.

0


Place interface bracket (A) on top on adapter plate as shown.

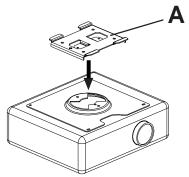

**NOTE:** #Arrow indicates front.
\*Notch indicates front of projector.

Rotate projector with adapter plate attached. Make sure that both front of interface bracket (**A**) and projector adapter plate are aligned.



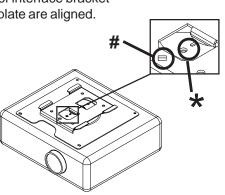

Note: The Projector Adapter Plate and projector you are installing may differ in appearance from the sample illustrated below.



Position four tabs in interface bracket (A) behind four tabs in base unit. Slide forward to engage latch. BE SURE THAT LATCH IS ENGAGED!


## **A WARNING**

Always use an assistant or mechanical lifting equipment to safely lift and position the projector.

## **SECURITY OPTION**

Lock the latch by tightening M6 x 1 x 20 mm socket head security screw through hole in base unit, into threaded hole in latch. Tighten using 4 mm allen wrench (screw and wrench are included with base unit).

**IMPORTANT:** Allen wrench is your key for projector removal. Store it in a safe place.

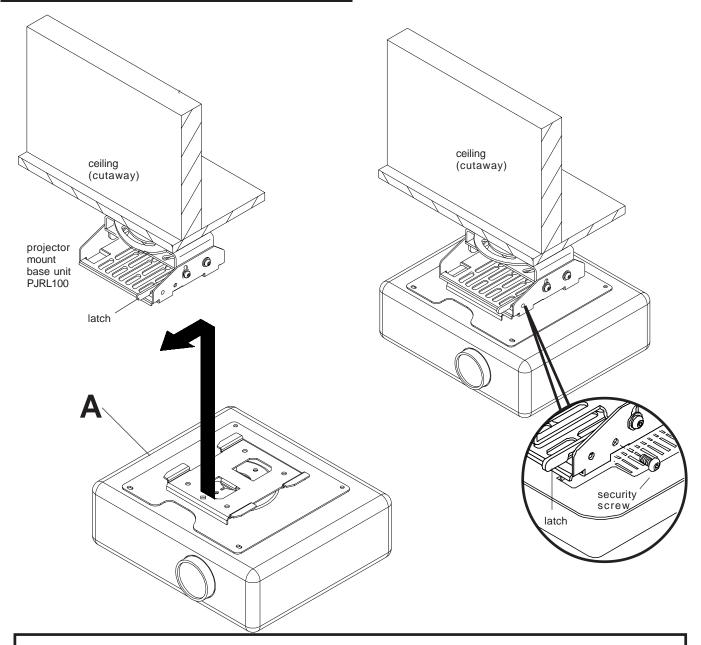

Peerless offers several LCD Projector Mounts to fit various video projectors. New Projector Mounts are continually being developed to meet the demands of a growing LCD projector market. To find out if a mount is available for your particular LCD video projector call Peerless customer service at 1-800-729-0307 or 708-865-8870.

2 of 2

ISSUED: 06-03-02 SHEET #: 055-9101-4 12-02-04