

Installation and Assembly - VCR Mounting Tray

Models:
LDM233K
LDM233
LDM312

IMPORTANT!
Read entire instruction sheet before you
start assembly and installation.

Parts List

Before you start make sure all parts listed below
are included with your product.

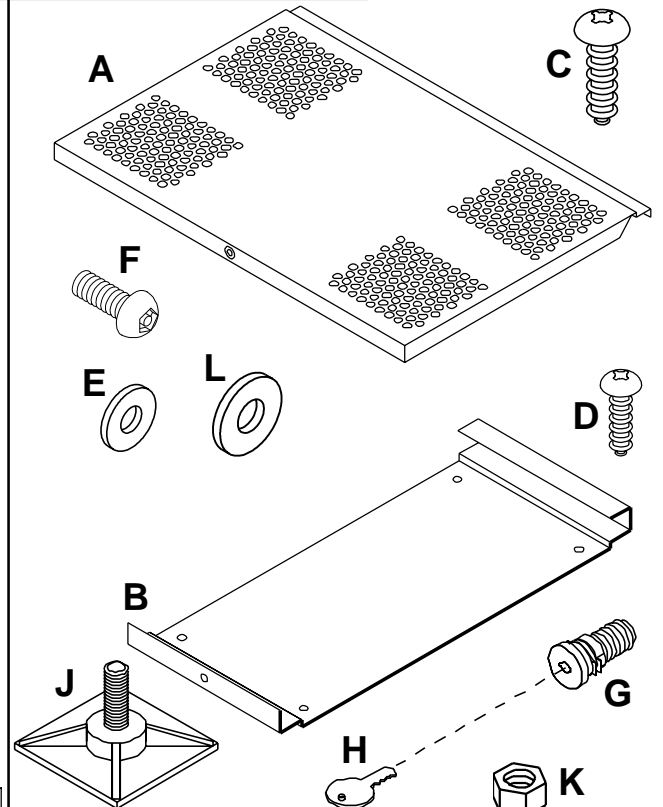
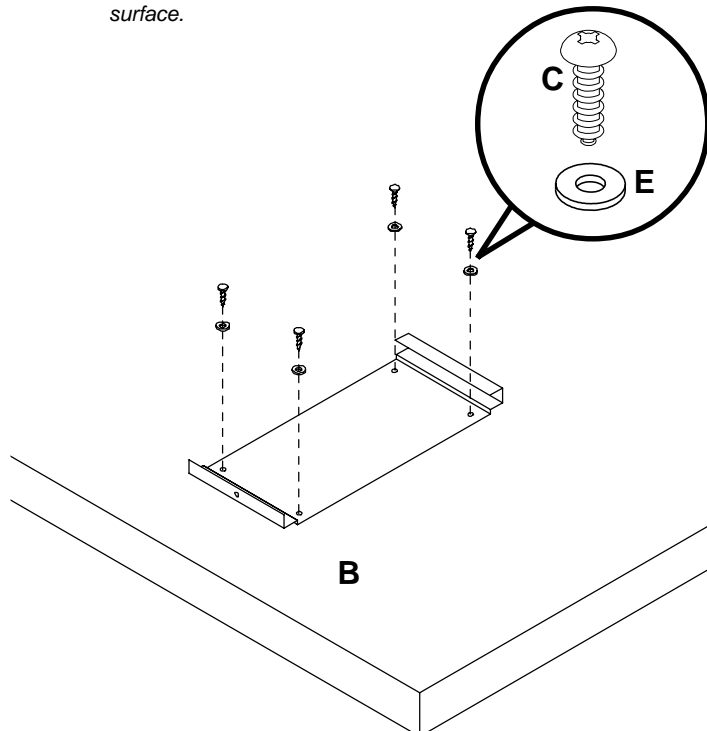
LDM233K Part #	LDM233 Part #	LDM312 Part #	QTY.	Description
A 1235-375K	1235-375	1235-371	1	upper tray
B 120-0017	120-0014	120-0016	1	lower tray
C 500-9006	500-9006	500-9006	4	#10 3/4" phillips screw
D 506-9058	506-9058	506-9058	4	#6 5/8" phillips screw
E 540-9400	540-9400	540-9400	8	small flat washer
F N/A	505-9010	505-9010	1	M5 - .8 x 10mm penta-pin
G 3022-502	N/A	N/A	1	lock plug
H 0000-322	N/A	N/A	1	lock key
J 590-1004	590-1004	590-1004	4	adhesive stud
K 530-9334	530-9334	530-9334	4	nylon nut
L 540-9401	540-9401	540-9401	4	1/4" flat washer
N/A	520-9249	520-9249	1	penta-pin tool (not shown)

Some parts may appear slightly different than illustrated.

1

Drill four 1/8" dia. x 1" deep holes in mounting surface using the lower tray (B) as a template. Attach lower tray (B) to mounting surface with four #10 phillips screws (C) and washers (E) as shown.

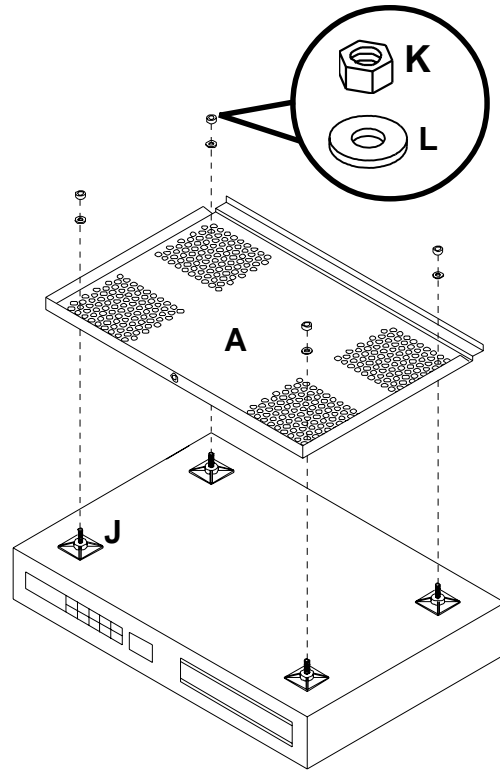
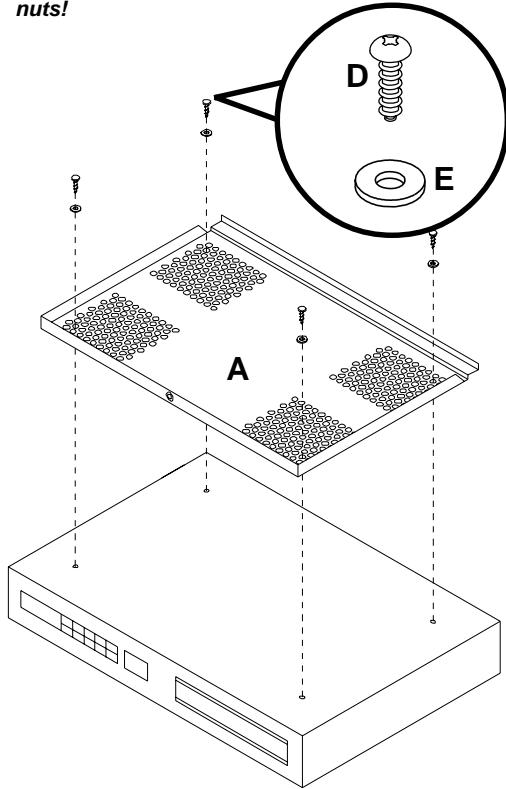
Alternative Installation: Peel off paper to expose adhesive tape on bottom of lower tray (B) and attach to mounting surface.



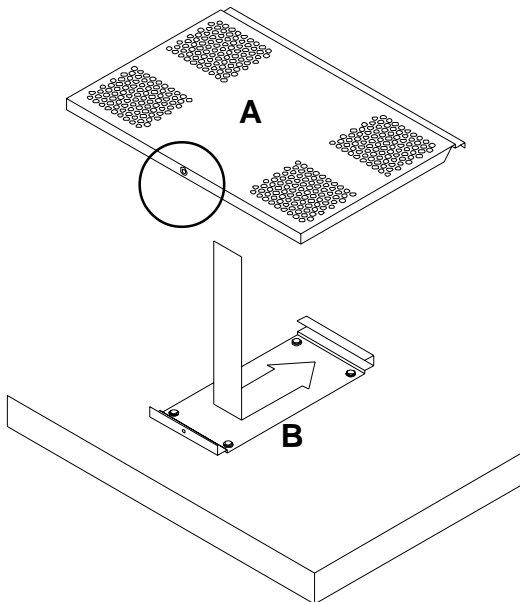
2

Flip VCR upside down and remove the four outermost screws that attach bottom pan to VCR. **Note: Do not remove pan when removing the screws!** Position upper tray (A) so that the holes on tray align with holes on VCR. Attach tray to VCR using four #6 phillips screws (D) and washers (E).

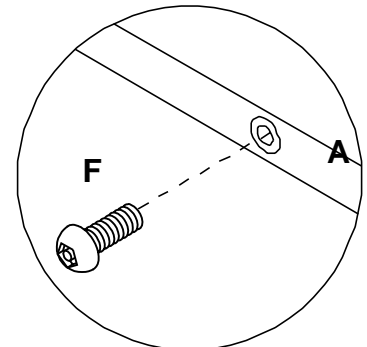
Alternative Installation: Flip VCR upside down and securely attach four adhesive studs (J) to corners of VCR as shown. Before adhering studs to VCR be sure each stud will penetrate a hole in the random perforated hole pattern on upper tray (A)! Place upper tray (A) on VCR as shown. Attach studs to tray using four nylon nuts (K) and 1/4" washers (L). Hand tighten nylon nuts!

**3**

(VCR has been omitted from illustration for clarity.) Slide upper tray (A) with mounted VCR onto lower tray (B) as shown.

**3.1**

Model 233 & 312 - Insert M5 penta-pin screw (F) using penta-pin tool into upper tray (A) as shown.

**3.2**

Model 233K - Install lock plug (G) and lock key (H) into upper tray (A) as shown.

Note: Use lock key (H) to turn (clockwise) the lock plug (G) in lock barrel. Securely tighten - key must be in horizontal position to be removed.

