

Models Covered

	Metro	Monsoon	Solaris	Stratos
KM with baseplate	0691 <i>7</i> XX0	06916XX3	06649XX0	06919XX2
KM w/o baseplate	06566XX0	06551XX0	06544XX0	06559XX0

Product Specifications:

Hole size in mounting surface	Minimum 1-1/2"	
	Maximum 1 E /0/	

Maximum 1-5/8"

Maximum mounting surface depth 2-1/4"
Flow rate 2.2 GPM
Maximum incoming water pressure 145 PSI
Recommended incoming water pressure 22 - 72.5 PSI
Recommended incoming hot water temp 120° - 140° F*

M3 cartridge with high temperature limit stop

^{*}Some governing bodies require that the water heater be set to 120°F or less. Please know and follow all applicable local codes when setting the temperature on the water heater.


Prepare for installation

- Read the instructions thoroughly.
- Inspect the faucet to make sure that it is in good condition, and that all parts are present.
- Insure that you have the tools, supplies, and parts necessary to complete the installation.
- The supply hoses on this faucet require 3/8" compression fittings. Purchase
 the compression fittings and any parts required to adapt your existing water
 supplies to them.
- Flush the supply lines of debris.

Install the baseplate (if using)

The baseplate is only included with models 06917XXO, 06916XX3, 06649XXO, 06919XX2..

No additional parts are necessary if you decide that you do not wish to install the faucet with the baseplate

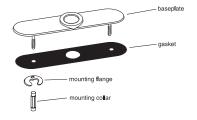

Position the baseplate and gasket on the faucet deck. From under the sink, install the mounting flanges and tighten the mounting collars by hand.

The baseplate can be used on a kitchen sink with less than three holes. Remove and disgard the threaded studs on the bottom of the baseplate. Align the baseplate and the gasket visually.


Install the faucet

- Leave the rubber washer in place on the faucet. Remove the slide washer, metal washer, and collar nut from the faucet shank and place in a safe, convenient location.
- Feed the supply lines, handspray hose, and faucet shank through the hole. From underneath the sink, install the plastic washer*, slide washer, and metal washer. Thread on the collar nut loosely.

*If the total thickness of the mounting surface is greater than 1-3/8", or if there is insufficient space available, omit the plastic washer.




- From above the sink, inspect the placement of the faucet and baseplate. Reposition if necessary.
- Check the swivel of the faucet spout it should swivel equally to the right and to the left. If it appears to swivel more to one side than to the other, pivot the faucet body until the swivel is even.
- When you are satisfied that everything is oriented properly, finish tightening the collar nut. Tighten the tensioning screws.

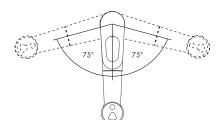


Connect the hot and cold supplies

Connect the hot and cold supply hoses to the supplies using 3/8" compression fittings (not included). Tighten wrench tight.

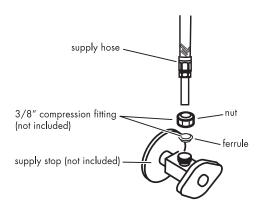

Connect the handspray hose

- Loosen the compression fitting on the end of the flexible handspray hose.
- Slide it over the end of the metal hose supply tube as far as it will go.
- Hold the hose still with a 12mm wrench. Use a 17 mm wrench to tighten the nut. Do NOT ALLOW THE HOSE TO TWIST - A TWISTED HOSE WILL REDUCE THE FLOW OF WATER TO THE HANDSPRAY.

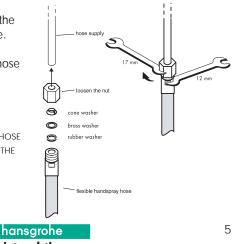

interaktiv

Set the High Temperature Limit Stop (optional)

 
- Remove the decorative flange.
- Remove the handle screw from the stem of the cartridge.



• Remove the high temperature limit stop.




- Replace the high temperature limit stop so that the pin is in the desired notch.
 The temperatures marked on the diagram assume an incoming hot water temperature of 140⁰ F and an incoming cold water temperature of 50⁰ F, and a water pressure of 45 psi. Your high temperature will vary according to your conditions.
- Replace the nut cover.




6

Install the handle

 - If the handle screw was removed while re-setting the high temperature limit stop, thread it onto the M3 stem 4 complete turns.
- Slide the handle over the stem and screw. Use the enclosed 4 mm hex wrench to finish tightening the screw. Turn the handle to one side to more easily access the screw.
- Install the screw cover.



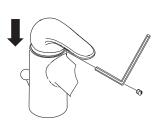

6

hansgrohe

interaktiv

Install the hose weight:

- Proper installation of the hose weight will insure that the handspray hose retracts smoothly.
- On the handshower side of the hose, use a ruler to measure 15" down from the body of the faucet. Install the hose weight at this point.
- Pull out on the handspray, and guide it back into the faucet. It should move easily and retract smoothly. Reposition the hose weight if necessary.
- At this point, also make sure that the hot and cold supply hoses do not interfere with move-

ment of the hose. They can be repositioned slightly if necessary. Turn on the water. Check all connections for leaks. Check

Troubleshooting Information:


the faucet for proper operation.

Problem	Possible Cause	Solution	
too little water	debris in aerator	remove and clean aerator	
	debris in hose filter	remove and clean hose filter	
	kinked handspray hose	straighten handspray hose	
handle hard to turn	cartridge dirty or faulty	replace cartridge	
faucet drips	cartridge dirty or faulty	replace cartridge	
too little hot water	high temperature limit stop set incorrectly	re-set high temperature limit stop	
water under sink	handspray hose connection loose	tighten hose to handspray	
	pinhole in hose	replace hose	
	crack in handspray	replace handspray	



15"

Replacement Parts:

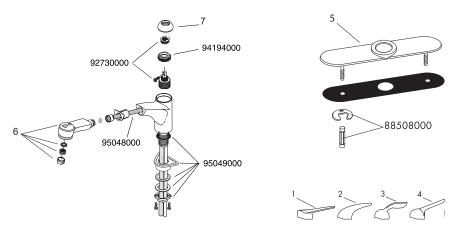

8

Cleaning Recommendation for Hansgrohe Products

Modern faucetry and shower products utilize a combination of materials to comply with the needs of the market with regard to design and functionality.

To avoid damage, it is necessary to use some caution when cleaning. Damage caused by improper treatment is not covered under the Hansgrohe warranty.

Cleaning Materials for Faucets and Showers

- To remove lime scale, use only products made specifically for that purpose.
 Always follow the manufacturer's instructions when using.
- Do not use cleaners that contain hydrochloric, formic, acetic, or phosphoric acids, as these will cause considerable damage to finishes and to plastic components.
- Never mix cleaning materials.
- Never use cleaners containing abrasives. Do not use abrasive cleaning cloths, pads, or sponges.

Cleaning Procedures

- Clean your faucets and shower products as and when required. Regular cleaning will prevent scale buildup and water spotting.
- Follow the label instructions. Do not allow any cleaner to remain on the product for longer than necessary.
- When using spray cleaners, spray first onto a sponge or cloth do not spray directly onto the product.
- After cleaning, rinse thoroughly with clear water to remove any cleaner residue.

Important

- Soap and shampoo residue can also cause damage to the product. Rinse well with clean water after use.
- If the surface is already damaged, harsh cleaning materials with cause further damage.

Limited Lifetime Consumer Warranty

This product has been manufactured and tested to the highest quality standards by Hansgrohe, Inc. ("Hansgrohe"). This warranty is limited to Hansgrohe products which are purchased by a consumer in the United States after March 1, 1996, and installed in either the United States or Canada.

WHO IS COVERED BY THE WARRANTY

This warranty extends to the original consumer purchaser only.

WHAT IS COVERED BY THE WARRANTY

This warranty covers only your Hansgrohe manufactured product. Hansgrohe warrants this product against defects in material or workmanship as follows: Hansgrohe will repair at no charge for parts only or, at its option, replace any product or part of the product which proves defective because of improper workmanship and/or material, under normal installation, use, service and maintenance. If Hansgrohe is unable to provide a replacement and repair is not practical or cannot be timely made, Hansgrohe may elect to refund the purchase price in exchange for the return of the product.

LENGTH OF WARRANTY

Replacement or repaired parts of products will be covered for the term of this warranty as stated in the following two sentences. If you are a consumer who purchased the product for use primarily for personal, family, or household purposes, this warranty extends for as long as you own the product and the home in which the product is installed. If you purchased the product for use primarily for any other purpose, including, without limitation, a commercial purpose, this warranty extends only (i) for 1 year, with respect to Interaktiv and Retroaktiv products, and (ii) for 5 years, with respect to AXOR, ShowerPower and Pharo products.

THIS WARRANTY DOES NOT COVER, AND HANSGROHE WILL NOT PAY FOR:

- Conditions, malfunctions or damage not resulting from defects in material or workmanship.
- B. Conditions, malfunctions or damage resulting from (1) improper installation, improper maintenance, misuse, abuse, negligence, accident or alteration, or (2) the use of abrasive or caustic cleaning agents or "no rinse" cleaning products, or the use of the product in any manner contrary to the product instructions.
- C. Labor or other expenses for the disconnection or return of the product for warranty service, or for installation or reinstallation of the product.
- D. Accessories or related products not manufactured by Hansgrohe.

TO OBTAIN WARRANTY SERVICE

Contact your Hansgrohe retailer, or write to Technical Service at:

Hansgrohe Inc. 1492 Bluegrass Lakes Parkway Alpharetta GA 30004

> hansgrohe interaktiv

Or, call Hansgrohe toll-free at (800) 334-0455.

In requesting warranty service, you will need to provide

- 1. The sales receipt or other evidence of the date and place of purchase.
- 2. A description of the problem.
- 3. Delivery of the product or the defective part, postage prepaid and carefully packed and insured, to Hansgrohe Inc. 1492 Bluegrass Lakes Parkway, Alpharetta, Georgia 30004, Attention: Technical Service, if required by Hansgrohe.

When warranty service is completed, any repaired or replacement product or part will be returned to you postage prepaid.

EXCLUSIONS AND LIMITATIONS

REPAIR OR REPLACEMENT (OR, IN LIMITED CIRCUMSTANCES, REFUND OF THE PURCHASE PRICE) AS PROVIDED UNDER THIS WARRANTY IS THE EXCLUSIVE REMEDY OF THE PURCHASER. HANSGROHE NEITHER ASSUMES NOR AUTHORIZES ANY PERSON TO CREATE FOR IT ANY OBLIGATION OR LIABILITY IN CONNECTION WITH THIS PRODUCT.

HANSGROHE SHALL NOT BE LIABLE TO PURCHASER OR ANY PERSON FOR ANY INCIDENTAL, SPECIAL, OR CONSEQUENTIAL DAMAGES, ARISING OUT OF BREACH OF THIS WARRANTY OR ANY IMPLIED WARRANTY (INCLUDING MERCHANTABILITY).

Some States do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you.

This warranty gives you specific legal rights, and you may have other rights which vary from State to State.

You may be required by law to give us a reasonable opportunity to correct or cure any failure to comply before you can bring any action in court against us under the Magnuson-Moss Warranty Act.

PRODUCT INSTRUCTIONS AND QUESTIONS

Upon purchase or prior to installation, please carefully inspect your Hansgrohe product for any damage or visible defect. Prior to installing, always carefully study the enclosed instructions on the proper installation and the care and maintenance of the product. If you have questions at any time about the use, installation, or performance of your Hansgrohe product, or this warranty, please call or write to us at the toll-free number and address printed above.

hansgrohe

Hansgrohe Inc.
1490 Bluegrass Lakes Parkway
Alpharetta GA 30004
Phone 770 360 9880 Internet www.Hansgrohe-USA.com