

# Installation Instructions / Warranty

**hansgrohe**



**Retroaktiv Showerhead 06126XX0**  
**Retroaktiv Handshower 06127XX0**  
**1901 Showerhead 06625XX0**  
**1901 Handshower 06626XX0**

 
**interaktiv**

**hansgrohe**


**retroaktiv**

**hansgrohe**


# Retroaktiv Showerhead and Handshower Interaktiv 1901 Showerhead and Handshower

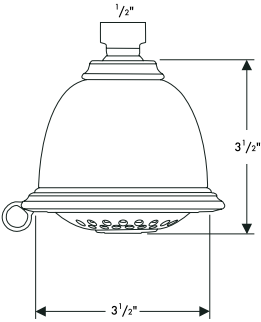


06126XX0

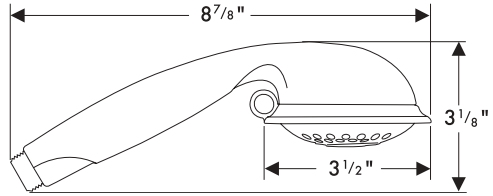 

06127XX0

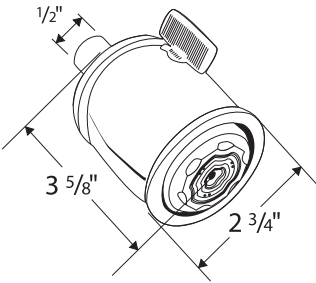 

06625XX0

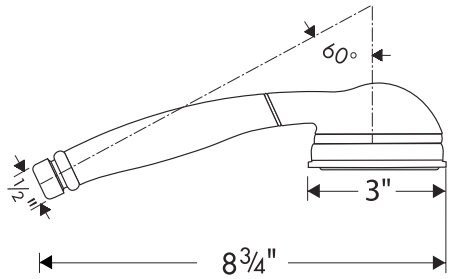 

06626XX0

## Product Specification

 
Maximum Flow Rate	2.5 gpm
Spray Modes	full spray Turbo <sup>3</sup> massage

## Rubi™! Self Cleaning System

The Retroaktiv™ showerhead and handshower use the Rubi™! self cleaning system. If scale deposits are noticeable in the normal spray channels, turn the water on lightly and rub across the spray channels with a sponge or a finger to dislodge the deposits.


## Remove the old showerhead

- While holding the shower arm, remove the existing showerhead by turning counter-clockwise with an adjustable wrench.
- Thoroughly clean the threads on the shower arm with a wire brush.

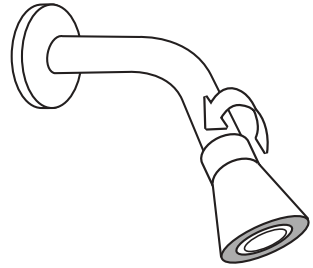

## Showerhead Installation Instructions

 
- Slide decorative rubber boot onto the shower arm, narrow end first. Push it up and out of the way.
- Make sure that the self-sealing filter gasket is fully seated in the showerhead by grasping the black tab and turning clockwise as far as it will go without forcing it.
- Screw the showerhead onto the arm, taking care not to cross thread.
- Finish tightening with wrench, taking care not to over-tighten or showerhead and / shower arm may be damaged. Turn on the water and check for leaks. Pull boot down over showerhead ball joint.

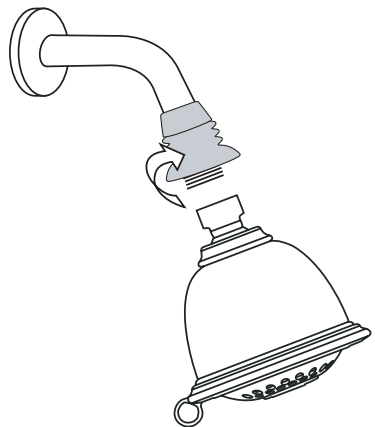

## Install the Hose\* and Handshower


- Wrap the threads on the shower arm with 2-3 layers of good quality plumbers' thread tape.
- Place a black rubber washer in the short hose connector end. Screw it firmly to the shower arm.
- Place the screen washer in the long hose connector end. Screw it firmly to the handshower, taking care not to cross-thread. Tighten hand-tight only – use of a wrench may damage the decorative finish.
- Feed the hose through the cradle on the shower arm mount, wall-mounted handshower holder, or wallbar slider. Lower the handshower until the hose connector end is seated firmly.
- Note: if protection against back siphonage is desired, or is required by local code, and is not provided by other means, a backflow preventer such as Hansgrohe model 06510 should be installed between the shower arm and the hose.

 \* a hose is not included with the Retroaktiv handshower model 06127XX0 or Interaktiv handshower model 06626XX0. Hansgrohe suggests the use of either a Hansgrohe Techniflex or Novaflex handshower hose.

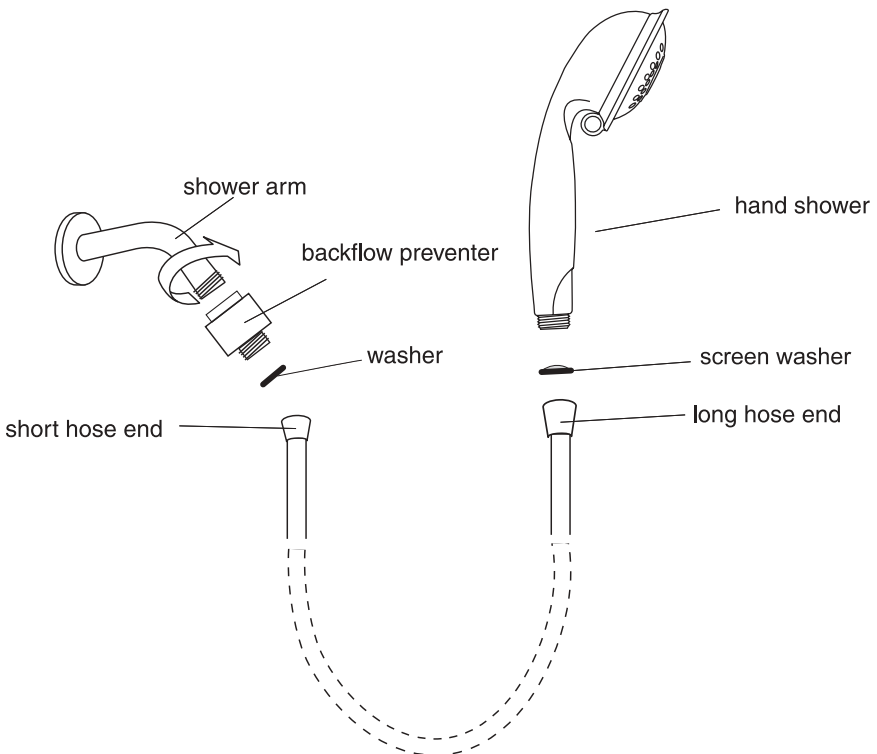

## Using the Retroaktiv showerhead and handshower
 
### Changing the spray mode

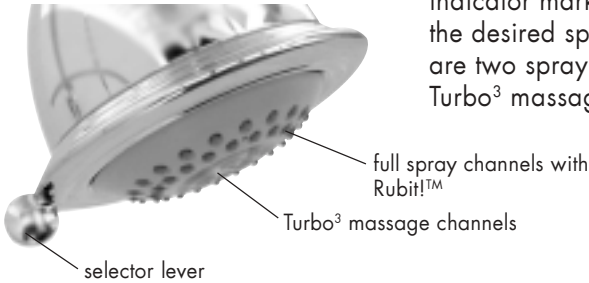


Push the selector lever until the indicator mark is next to the name of the desired spray function. There are two spray modes: full spray and Turbo<sup>3</sup> massage.

## Using the Interaktiv 1901 showerhead and handshower

 
### Using the 1901 Showerhead

The 1901 Showerhead has two spray functions – full spray and pulsating massage. Turn the function key on the side of the showerhead until the desired spray function is achieved.

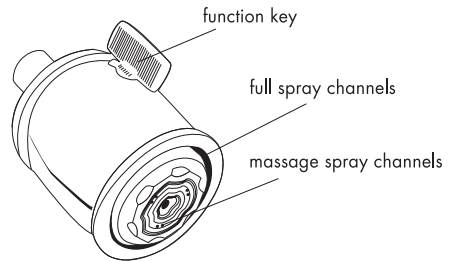

### Using the 1901 Handshower

 The 1901 Handshower has two spray functions – full spray and pulsating massage. Turn the function ring counter-clockwise for massage, clockwise for full spray.

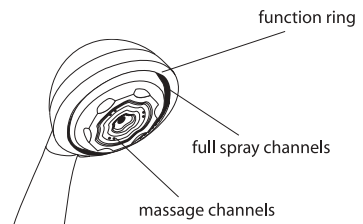

# Cleaning Recommendation for Hansgrohe Products

Modern faucetry and shower products utilize a combination of materials to comply with the needs of the market with regard to design and functionality.

To avoid damage, it is necessary to use some caution when cleaning. Damage caused by improper treatment is not covered under the Hansgrohe warranty.

## Cleaning Materials for Faucets and Showers

- To remove lime scale, use only products made specifically for that purpose. Always follow the manufacturer's instructions when using.
- Do not use cleaners that contain hydrochloric, formic, acetic, or phosphoric acids, as these will cause considerable damage to finishes and to plastic components.
- Never mix cleaning materials.
- Never use cleaners containing abrasives. Do not use abrasive cleaning cloths, pads, or sponges.

## Cleaning Procedures

- Clean your faucets and shower products as and when required. Regular cleaning will prevent scale buildup and water spotting.
- Follow the label instructions. Do not allow any cleaner to remain on the product for longer than necessary.
- When using spray cleaners, spray first onto a sponge or cloth – do not spray directly onto the product.
- After cleaning, rinse thoroughly with clear water to remove any cleaner residue.

## Important

- Soap and shampoo residue can also cause damage to the product. Rinse well with clean water after use.
- If the surface is already damaged, harsh cleaning materials will cause further damage.

# Limited Lifetime Consumer Warranty

This product has been manufactured and tested to the highest quality standards by Hansgrohe, Inc. ("Hansgrohe"). This warranty is limited to Hansgrohe products which are purchased by a consumer in the United States after March 1, 1996, and installed in either the United States or Canada.

## WHO IS COVERED BY THE WARRANTY

This warranty extends to the original consumer purchaser only.

## WHAT IS COVERED BY THE WARRANTY

This warranty covers only your Hansgrohe manufactured product. Hansgrohe warrants this product against defects in material or workmanship as follows: Hansgrohe will repair at no charge for parts only or, at its option, replace any product or part of the product which proves defective because of improper workmanship and/or material, under normal installation, use, service and maintenance. If Hansgrohe is unable to provide a replacement and repair is not practical or cannot be timely made, Hansgrohe may elect to refund the purchase price in exchange for the return of the product.

## LENGTH OF WARRANTY

Replacement or repaired parts of products will be covered for the term of this warranty as stated in the following two sentences. If you are a consumer who purchased the product for use primarily for personal, family, or household purposes, this warranty extends for as long as you own the product and the home in which the product is installed. If you purchased the product for use primarily for any other purpose, including, without limitation, a commercial purpose, this warranty extends only (i) for 1 year, with respect to Interaktiv and Retroaktiv products, and (ii) for 5 years, with respect to AXOR, ShowerPower and Pharo products.

## THIS WARRANTY DOES NOT COVER, AND HANSGROHE WILL NOT PAY FOR:

- A. Conditions, malfunctions or damage not resulting from defects in material or workmanship.
- B. Conditions, malfunctions or damage resulting from (1) improper installation, improper maintenance, misuse, abuse, negligence, accident or alteration, or (2) the use of abrasive or caustic cleaning agents or "no rinse" cleaning products, or the use of the product in any manner contrary to the product instructions.

- C. Labor or other expenses for the disconnection or return of the product for warranty service, or for installation or reinstallation of the product.
- D. Accessories or related products not manufactured by Hansgrohe.

### **TO OBTAIN WARRANTY SERVICE**

Contact your Hansgrohe retailer, or write to Technical Service at:

Hansgrohe Inc.  
1492 Bluegrass Lakes Parkway  
Alpharetta GA 30004

Or, call Hansgrohe toll-free at (800) 334-0455.

In requesting warranty service, you will need to provide

1. The sales receipt or other evidence of the date and place of purchase.
2. A description of the problem.
3. Delivery of the product or the defective part, postage prepaid and carefully packed and insured, to Hansgrohe Inc. 1492 Bluegrass Lakes Parkway, Alpharetta, Georgia 30004, Attention: Technical Service, if required by Hansgrohe.

When warranty service is completed, any repaired or replacement product or part will be returned to you postage prepaid.

### **EXCLUSIONS AND LIMITATIONS**

**REPAIR OR REPLACEMENT (OR, IN LIMITED CIRCUMSTANCES, REFUND OF THE PURCHASE PRICE) AS PROVIDED UNDER THIS WARRANTY IS THE EXCLUSIVE REMEDY OF THE PURCHASER. HANSGROHE NEITHER ASSUMES NOR AUTHORIZES ANY PERSON TO CREATE FOR IT ANY OBLIGATION OR LIABILITY IN CONNECTION WITH THIS PRODUCT.**

**HANSGROHE SHALL NOT BE LIABLE TO PURCHASER OR ANY PERSON FOR ANY INCIDENTAL, SPECIAL, OR CONSEQUENTIAL DAMAGES, ARISING OUT OF BREACH OF THIS WARRANTY OR ANY IMPLIED WARRANTY (INCLUDING MERCHANTABILITY).**

Some States do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you.

This warranty gives you specific legal rights, and you may have other rights which vary from State to State.

You may be required by law to give us a reasonable opportunity to correct or cure any failure to comply before you can bring any action in court against us under the Magnuson-Moss Warranty Act.

### **PRODUCT INSTRUCTIONS AND QUESTIONS**

Upon purchase or prior to installation, please carefully inspect your Hansgrohe product for any damage or visible defect. Prior to installing, always carefully study the enclosed instructions on the proper installation and the care and maintenance of the product. If you have questions at any time about the use, installation, or performance of your Hansgrohe product, or this warranty, please call or write to us at the toll-free number and address printed above.

**Hansgrohe Inc.**

1490 Bluegrass Lakes Parkway  
Alpharetta GA 30004

Phone 770 360 9880 Internet [www.Hansgrohe-USA.com](http://www.Hansgrohe-USA.com)