

POPCORN MAKER INSTRUCTION MANUAL

IMPORTANT SAFEGUARDS

- READ ALL INSTRUCTIONS BEFORE USING YOUR POPCORN MACHINE.
- Do not touch hot surfaces. Always use handles or knobs to operate.
- To avoid any risk of electrical shock, do not immerse cord or plug in while water is present.
- Close supervision is necessary when being used near children.
- Unplug main power cord from outlet while not in use and before cleaning.
- Allow hot parts to cool down before moving.
- Do not operate the appliance with damaged cord or plug, malfunction or with any mechanical damages.
- Send the unit to the nearest authorized service center for examination and repair. (ONLY technicians should open up the unit)
- Injury may occur if using any accessories or attachments not provided or recommended by manufacturer.
- Do not pop the kernels in a dry pot (without oil).
- Do not immerse popping pot into water.
- Pot surface is **HOT** and should **NOT** be touched during popping or just after use.
- Unplug, clean and cover the unit and store in a dry and safe place if not being used for long periods of time.
- Do not leave the power cord hanging over edge of table or counter.
- **DO NOT** place the unit on or near a hot gas or electric burner or in a heated oven.
- Extreme caution must be used when moving any appliance containing hot oil or other hot liquids.
- Turn ALL switches to "OFF" position before disconnecting power plug from the outlet.
- Not recommended for outdoor use.
- Do not use appliance for anything other than the indicated usage.
- To avoid overheating, always have oil and kernels ready before operating.
- Extreme caution must be used when unloading heated pot, always use oven mitt.
- Always place the unit over a counter-top so that residual hot oil or water running out will not cause injury.
- **KEEP OUT OF REACH OF CHILDREN.**
- Do not clean using any abrasive material.
- Never force any parts or brackets into position.
- No parts are intended for the dishwasher.
- Save these instructions for future reference.

Congratulations! You have purchased our best selling popcorn popper for your home or business.

This industrial-strength popper is the same one used by sport stadiums, convenience stores and mini-marts.

We use only the finest grade material and workmanship when manufacturing our poppers. If for any reason our popper doesn't live up to these standards described, please write us at service@greatamericanpopcorn.com.

G r e a t A m e r i c a n P o p c o r n . c o m

 
complete selection of concession supplies

©2006 copyright Great American Popcorn All rights reserved.


Assembling Procedures:

1. Use bolts & washers (Package B) provided to connect the Long stand (F) and the 2 pcs square pole (E) together.
2. Connect the completed above (1) with the short stand (G) by the bolts & washers (Package B).
3. Insert axis (H) into short stand. Place sleeves and washers (Package C) onto each side of wheels (J) and then fix it with round cap nuts by wrenches provided (Package D).
4. Turn the storage cabinet (K) up side down for convenience assembling. Insert both ends of the short and long stand into the bottom of (H) and then fix by bolts in (Package B).
5. Turn the complete unit back to up-right position. Install the handrail (D) onto the left hand & the working platform (C) on the right hand by bolts & nuts with washers included in (Package A).
6. Place the main unit (A) onto the topside of the storage cabinet. (Caution: Power cord outlet should be inserted into the u-shape position.)
7. Hook up the Pot (B) onto the hanger.
8. Connect the power plug from the ceiling with the socket on the bottom on the bottom of the pot.
9. Open the door of the storage cabinet and release the spring shaft beneath the main unit in order to fix the main unit with the storage base.

Remark: Main unit alone could be used and placed onto stable counter top for operation.

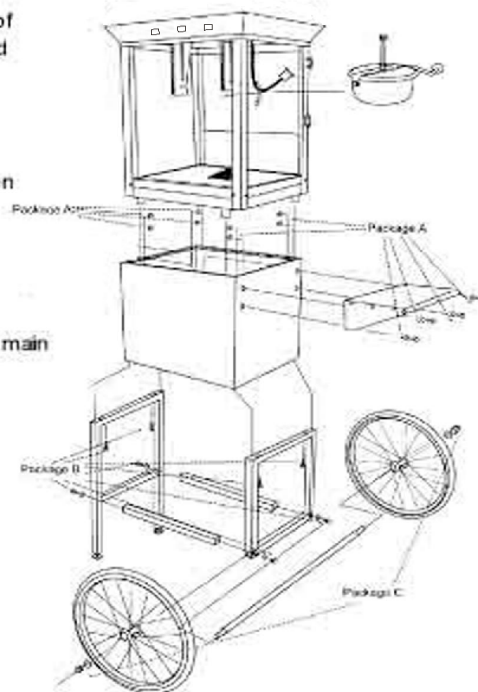

Assembling Manual

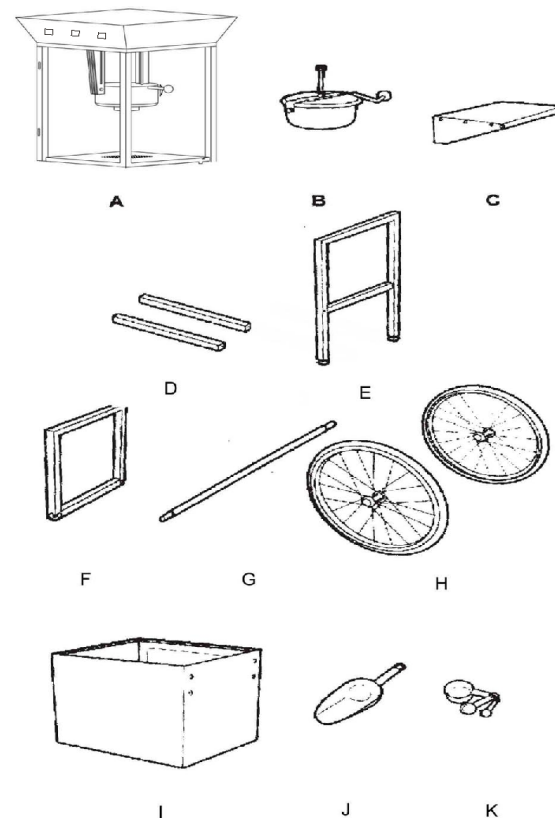 

A. Main unit x 1 pc.
C. Working platform x 1 pc.
D. Square pole x 2 pcs.
F. Short stand x 1 pc.
H. Wheels x 2 pcs.
K. Popcorn scoop x 1 pc.
M. Parts x 1 box include:

B. Popping pot x 1 pc.
E. Long stand x 1 pc.
G. Wheel axis x 1 pc.
J. Storage cabinet x 1 pc.
L. Kernel scoop Oil scoop set

- Package A, gold plated bolts x 8 pcs. nuts x 8 pcs. washers x 8 pcs.
- Package B, bolts x 8 pcs. - washers x 4 pcs.
- Package C, nuts with round cap x 2 pcs. - washers x 2 pcs.
- Package D, wrench x 2 pcs.

Using Manual

User should follow the procedures:

- 1) Make sure the popcorn maker is unplugged before you do any of the following.
- 2) Before using the unit, please check carefully if voltage is suitable to the country. (Please check if the voltage is matching with rating label specified next to the power cord).
- 3) Clean the internal surface of the popping pot and main unit surfaces.
- 4) Main unit has 3 function switches as follows:



Spot light and warmer (i)



Stirrer (ii)



Stainless steel Pot heater (iii)

- 5) Hook up the Pot onto the hanger of the main unit.
- 6) Plug in the power cord to the popcorn maker.
- 7) Switch on the light and heater (I & III), and then fill in suitable amount of butter or oil (Fig. 1). Consumer could fill amount of oil (Max. 15g) subject to your own choice.
- 8) Popping pot should be pre-heat for 3 to 4 minutes with oil (until steam comes out from the pot). Please prepare kernels with sugar. (Measure amount of kernels by measuring scoop provided and amount of sugar subject to your own choice. liquid sugar and honey are prohibited to be used.)
- 9) Open the lid and then pour in pre-mixed kernel and sugars. (Fig. 2) **Caution: Lid might be hot and recommend contacting with oven mitten.**
- 10) Switch ON the Stirrer (II) so that it starts stirring. (Fig. 3)
- 11) Close the door carefully.
- 12) Popcorn starts popping out through the lid after about 2 to 3 minutes. (Fig. 4)
- 13) Switch OFF the stirrer & heater (II & III) when popping completed (No more popping sound from pot). Rotate the roller bar of the pot and pour out all remaining popcorn from pot.
- 14) Keep heater switch (III) OFF if the unit is not continuously using. Remain only the spot light and warmer ON, thus could keep the popcorn warm, dry and tasty.
- 15) Serve your popcorn with popcorn scoop provided.
- 16) Remove plug from power supply if the unit is not being used for long time.
- 17) Repeat step 7 to 10 for continue popping.

Order Now - For Immediate Delivery

GreatAmericanPopcorn.com

complete selection of concession supplies

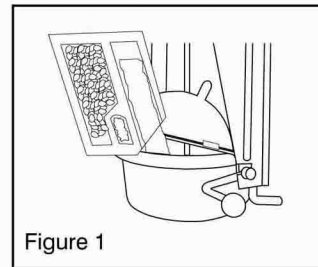 


Figure 1

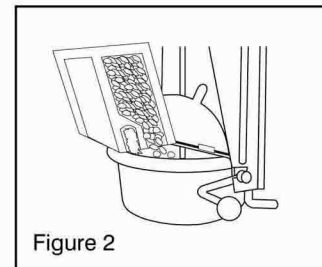 


Figure 2

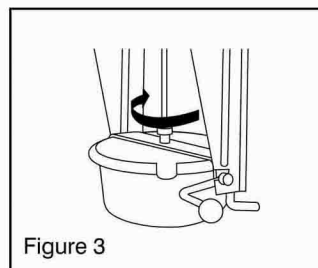 


Figure 3

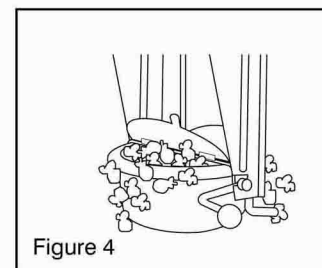 


Figure 4

CLEANING AND MAINTENANCE

- To maintain quality taste and popping conditions in your popper, it is recommended that you thoroughly clean the heat pot after using 3 to 4 times or before prolonged periods of storage.
- Switch OFF (II & III). Pour 6 to 10 oz. of water (NO detergent is necessary) into inner pot.
- Switch ON the stirrer (II) and heater (III) to boil the water and allow the stirrer to rotate that will help remove debris on kettle surface. Pour out the water after about 1 to 2 minutes of boiling. **Caution:** Hot kettle! Handle with oven mitts. Keep children at a safe distance from popper during procedure.
- Repeat the same procedure 2 to 3 times to get better result.
- Switch off the machine and wait for the popping pot to cool. Clean the inside and outside of the pot by brush and wet towel. **Caution:** DO NOT immerse the heat pot into water.)
- After using the popcorn machine, users should use wet towel to clean up the main unit, main body and glasses; It is strongly recommended to tidy up rubbish tray frequently so that there is no food spoilage left behind.

Caution

- After popping cycle is complete, the popping pot will be very hot. Use extreme care when handling.
- Remember to turn the heat switch to off position after the finish of the pop cycle.
- Unplug unit **BEFORE** removing heat pot from hanger. Use caution not to bump heat lamp bulb during pot removal.