


FP-9830 Flat Panel Television Stand ASSEMBLY INSTRUCTIONS

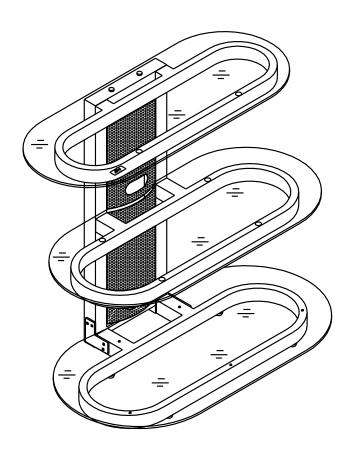

Patent Pending Italian Designed A Product of China

Parts List

NO.	SKETCH	QTY.
A		1
В		1
С		1
D		1
Е	=	1
F	=	1
G	=	1
Н		2
I		2

NO.	SKETCH	QTY.
1		5
2	55 mm	12
3		2
4		5
5	3 12 mm	8
6	35 mm	2
7	J	2
8	10 mm	8
9		1

Bell'O International Corp. will not be responsible for failure to assemble as directed or for the improper assembly, use or handling of this stand.

FOR YOUR SAFETY, PLEASE FOLLOW THESE PRECAUTIONS:

! ALWAYS REMOVE THE TV AND OTHER EQUIPMENT FROM THE FURNITURE PRIOR TO MOVING THE ASSEMBLED UNIT.




- ! WHEN IN USE, THIS FURNITURE MUST BE PLACED ON A FLAT, SOLID AND LEVEL SURFACE.
- ! DO NOT LEAN ON THE TV WHEN IT IS ON THE TV STAND.
- ! DO NOT CLIMB OR STEP ON THE STAND.
- ! DO NOT BANG OR PLACE YOUR OWN WEIGHT ON THE GLASS SHELF.
- ! DO NOT PLACE ITEMS ON THE SHELVES WHICH EXCEED THE MAXIMUM WEIGHT LIMITS OF 100 LBS. FOR TOP SHELF AND 50 LBS. FOR MIDDLE AND LOWER SHELVES

Assembly Instructions

NOTE: TWO PEOPLE ARE RECOMMENDED TO ASSEMBLE THIS TABLE.

- A. **PLACE** the bottom shelf frame (C) on the floor upsidedown, with the five holes in the frame's underside facing up. This shelf frame is the largest of the three shelf frames. **SCREW** the five adjustable leveling feet (1) into the frame.
- B. **PLACE** the CMS® (Cable Management System) post (D) upright with the two holes in the top edge of the post frame facing upward. **SECURE** the bottom shelf frame (C) to the CMS® post as shown in Fig. 1 using four 55mm bolts (2) and the supplied Allen wrench. Tighten fully.
- C. **SECURE** the middle shelf frame (B) to the CMS[®] using four 55mm bolts (2) and the supplied Allen wrench as shown in Fig. 1. Tighten fully.
- D. **SECURE** the top shelf frame (A) to the CMS® using four 55mm bolts (2) and the supplied Allen wrench as shown in Fig. 1. The top shelf frame is the smallest of the three shelf frames. Tighten fully.
- E. ATTACH two "L" support plates (I) to the bottom sides of the CMS® post (D) and rear bars of the bottom shelf frame (C) as shown in Fig. 2 using four 12mm bolts (5) for each plate. Tighten fully.
- F. **ATTACH** two triangular brackets (H) to the top front sides of the CMS® post (D) and undersides of the arms of the top shelf support frame (A) using four 8mm bolts (8) for each plate as shown in the Fig. 2 insets. Tighten fully.
- G. **PLACE** five of the smaller glass pads (4) onto the top edge of the bottom shelf frame (C) and two larger glass pads (3) onto the rear of the middle shelf frame (B) as shown in Fig. 1.
- H. Move the stand to the location it will occupy when fully assembled and in use.
- I. **CAREFULLY PLACE** the bottom glass shelf (F), (the deepest shelf), onto the bottom shelf frame (C) and **SLIDE** the edge with the hole through the slot in the CMS®. Working from the rear of the CMS® post, **PLACE** the plastic T-pin (7) through the hole in the glass to prevent the shelf from falling out of place.
- J. CAREFULLY PLACE the middle glass shelf (E), (the second deepest shelf), onto the middle shelf frame (B) and SLIDE the edge with the hole through the slot in the CMS®. Working from the rear of the CMS® post, PLACE the plastic T-pin (7) through the hole in the glass to prevent the shelf from falling out of place. ADJUST the preinstalled adjustable glass pads in the front of the shelf frame by turning them to ensure the glass shelf is level. Do this before placing items on it.
- K. CAREFULLY PLACE the top glass shelf (G), (the least deep shelf and the one with the two silver discs), onto the top shelf frame (A) and PLACE the two silver discs into the holes located on the top edge of the CMS® post. Working from behind and below the top of the CMS® post, SECURE the shelf to the CMS® with two 35mm bolts (6). ADJUST the preinstalled adjustable glass pads in the front of the shelf frame by turning them to ensure the glass shelf is level. Do this before placing the TV on it.

NOTE: ADJUST THE FIVE ADJUSTABLE FEET (1) UNDER THE BOTTOM SHELF FRAME (C) TO ENSURE THAT THE FURNITURE IS LEVEL.

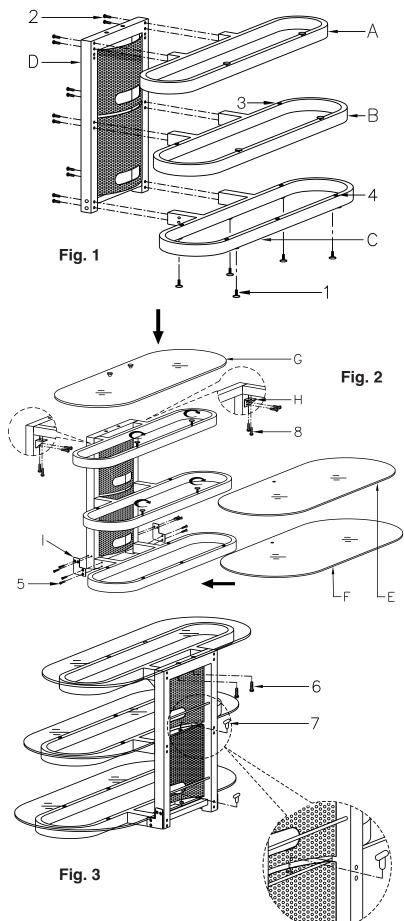



Warranty One (1) Year Limited Warranty

All Bell'O International products are warranted, with the exception of glass, to the original purchaser at the time of purchase and for a period of one (1) year thereafter. Glass is warranted to the original purchaser at the time of purchase and for a period of thirty (30) days thereafter. Warranty is only valid in the United States of America.

In order to provide you with timely assistance, please thoroughly inspect your furniture for missing or defective parts immediately after opening the carton. To receive replacement or missing part(s) under this warranty, go to our website at www.bello.com or call our **Customer Service Department at 1-888-235-7646**. Please have the model number and part number(s) for reference. You will also need your sales receipt or other proof of purchase. Replacement part(s) will be shipped to you at no charge with Bell'O International assuming all shipping and handling expense.

We warrant to you, the original purchaser, that our furniture and all of its parts and components are free of defects in material or workmanship. "Defects", as used in this warranty, is defined as any imperfections that impair the use of the furniture or product.

Our warranty is expressly limited to the replacement of furniture parts and components. For one (1) year after the date of purchase, Bell'O International will replace any part described on the enclosed furniture parts list that is defective in material or workmanship.

This warranty applies under conditions of normal use. Our furniture products are not intended for outdoor use. The warranty does not cover: 1) defects caused by improper assembly or disassembly; 2) defects caused by shipping, claims for damage during transit to you should be placed immediately by you to the transportation company; 3) defects occurring after purchase due to product modification, intentional damage, accident, misuse, abuse, negligence or exposure to the elements; 4) cosmetic damage and 5) labor or assembly costs.

There are no warranties, express or implied, including without limitation merchantability or fitness for particular use, except as (I) contained herein or (II) required by applicable law in the state whose law governs (which shall be New Jersey absent controlling law imposing the law of another state in lieu thereof as governing law). All warranties of whatsoever derivation shall be limited to the term set forth above, unless otherwise required by applicable law.

Manufacturer's employees or representatives' oral or other written statements do not constitute warranties, shall not be relied upon by Buyer, and are not a part of the contract for sale or this limited warranty.

Except as provided herein, Bell'O International shall have no liability or responsibility to the purchaser or any other person or entity with respect to any liability, loss or damage caused directly or indirectly by use of the product, including, but not limited to, any incidental or consequential damages. Some states do not allow limitation on how long an implied warranty can last or the exclusion of limitation of incidental or consequential damages, so the above limitation and exclusion may not apply to you.

This warranty gives you specific legal rights. You may also have other rights, which vary from state to state.