

 


IF PARTS ARE MISSING AND OR DEFECTIVE, IF INSTRUCTIONS ARE NOT CLEAR
OR IF YOU ARE EXPERIENCING PROBLEMS ASSEMBLING OUR PRODUCT.

**BEFORE YOU RETURN THE PRODUCT TO THE STORE,
PLEASE CALL US TOLL FREE FOR CUSTOMER SERVICE ASSISTANCE
(888) 777-8250**

 
 
 
 
 
 
 
**OR SEND US EMAIL AT
help@spartakent.com**

PLEASE HAVE ITEM NUMBER READY, AND A REPRESENTATIVE WILL GLADLY ASSIST YOU

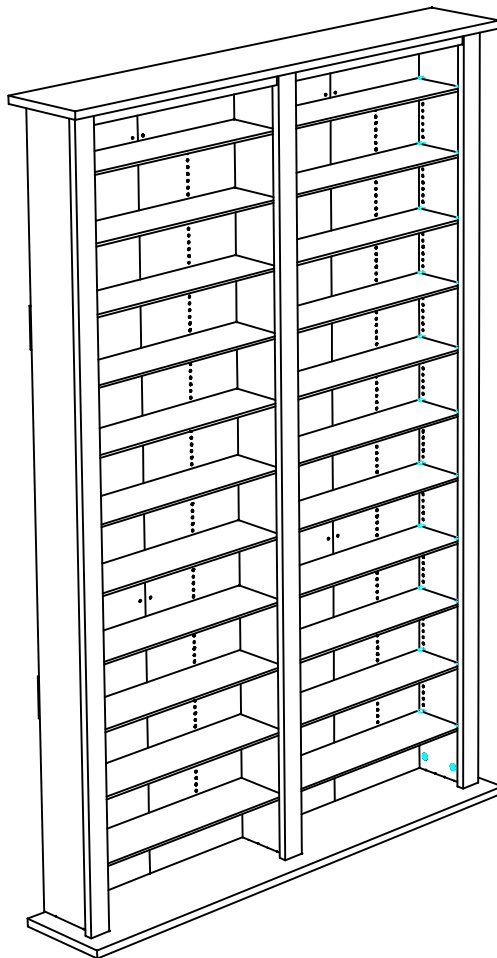


 


 
 
 

 

PARTS IDENTIFICATION

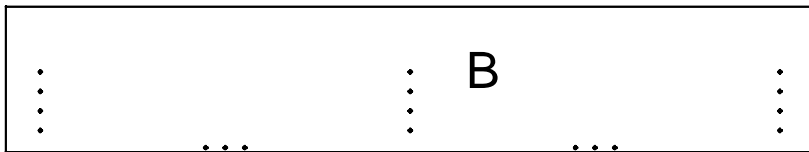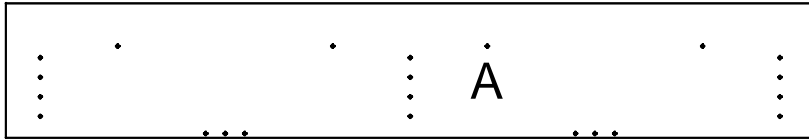NOTE: FIRST MAKE SURE THAT YOU HAVE ALL OF THE PARTS LISTED ON THIS SHEET. IF YOU ARE MISSING ANY PIECE(S), DO NOT ASSEMBLE THE UNIT. INSTEAD, CALL OUR CUSTOMER SERVICE NUMBER AT: (888) 777-8250. WE WILL BE HAPPY TO ASSIST YOU.





2402A-Top	1pc	2411F _L -Back Panel Left	2pcs
2402B-Base	1pc	2411F _R -Back Panel Right	2pcs
2411C-Molding	3pcs	2402G-Stretcher	2pcs
2411D-Back Support	2pcs	2411K-Shelf	24pcs
2411E-Outer Side	2pcs	2401I-Brace	2pcs
		2412J-Inner Divider	1pc






PARTS ARE USUALLY MARKED ON THE RAW EDGE.

HARDWARE	PART #	DESCRIPTION	QTY
	SFH845A	WOOD SCREW	12
	BM25	BRACKET ANGLE	4
	SPE610BL	EURO SCREW	8
	BPXX54	SHELF SUPPORT	144
	DOWW525	WOOD DOWEL	41
	CAMLT12	CAMLOCK	16
	CAMBT16	BOLT	16
	SPB1016BL	PAN HEAD SCREW	24
	CCPZXX	CAMLOCK COVER CAP	12
	SHPL5	SHELF LOCK	48

  TOOL REQUIRED

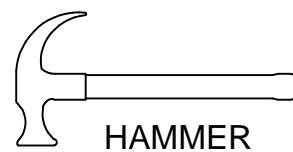



1

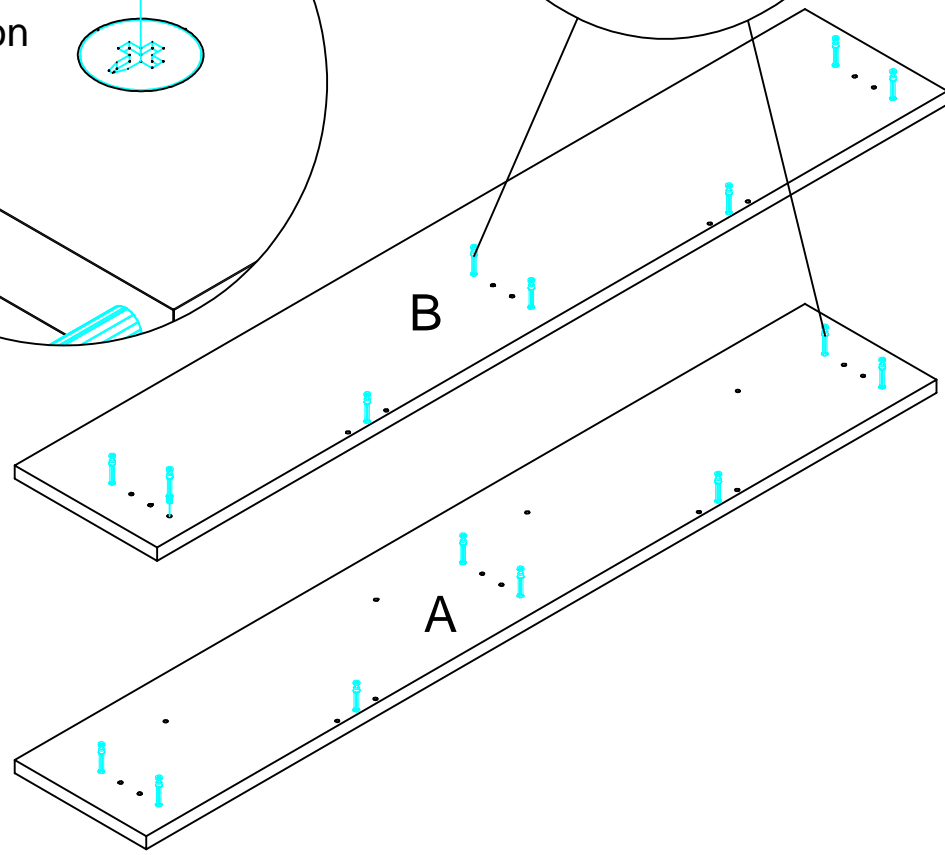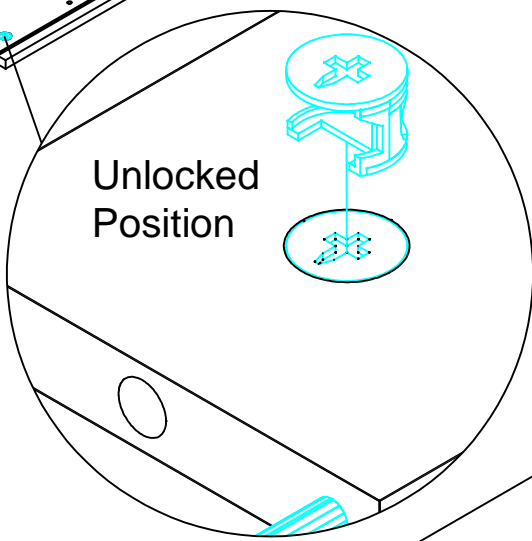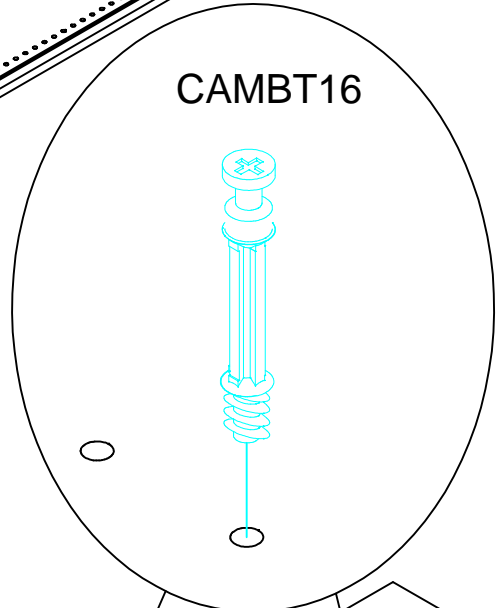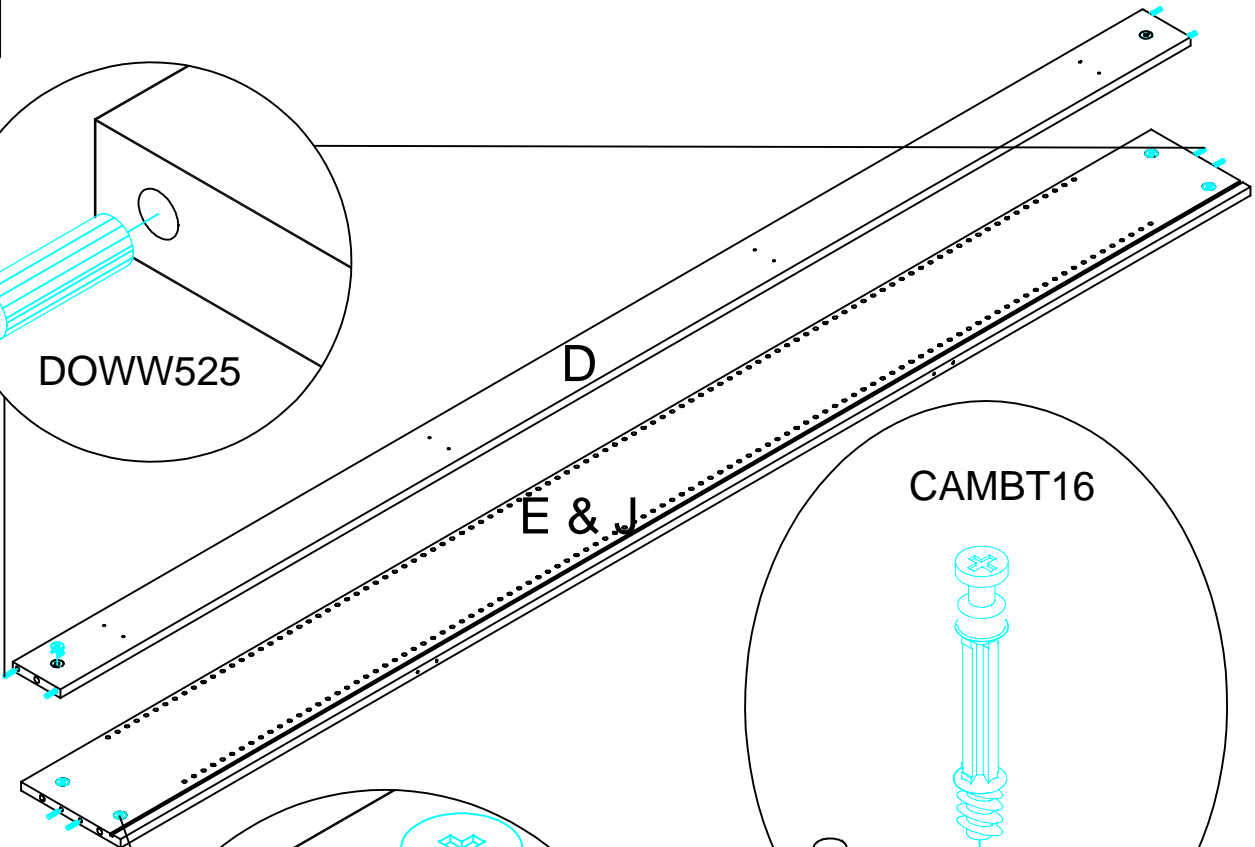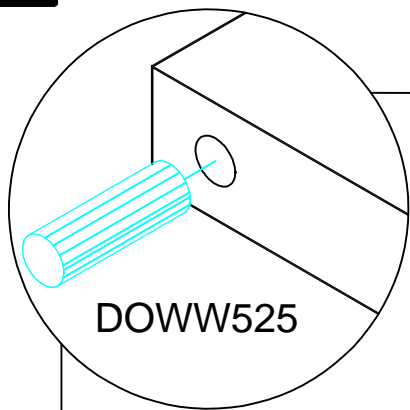     


2

  
Make sure groove on parts E and J should be located at the bottom edge. If it's not- then you had installed it upside down.

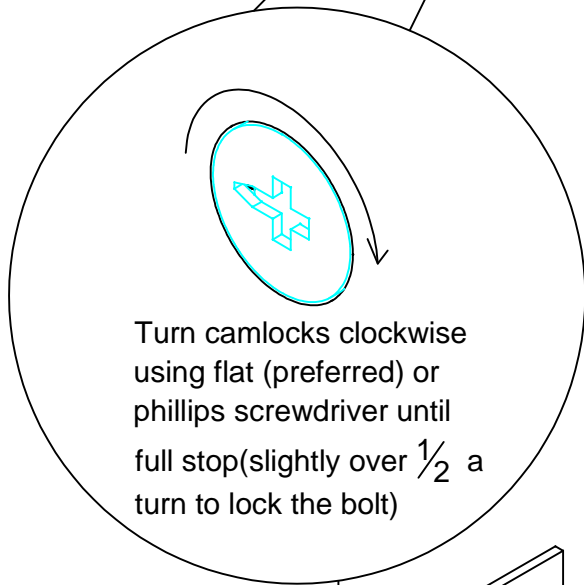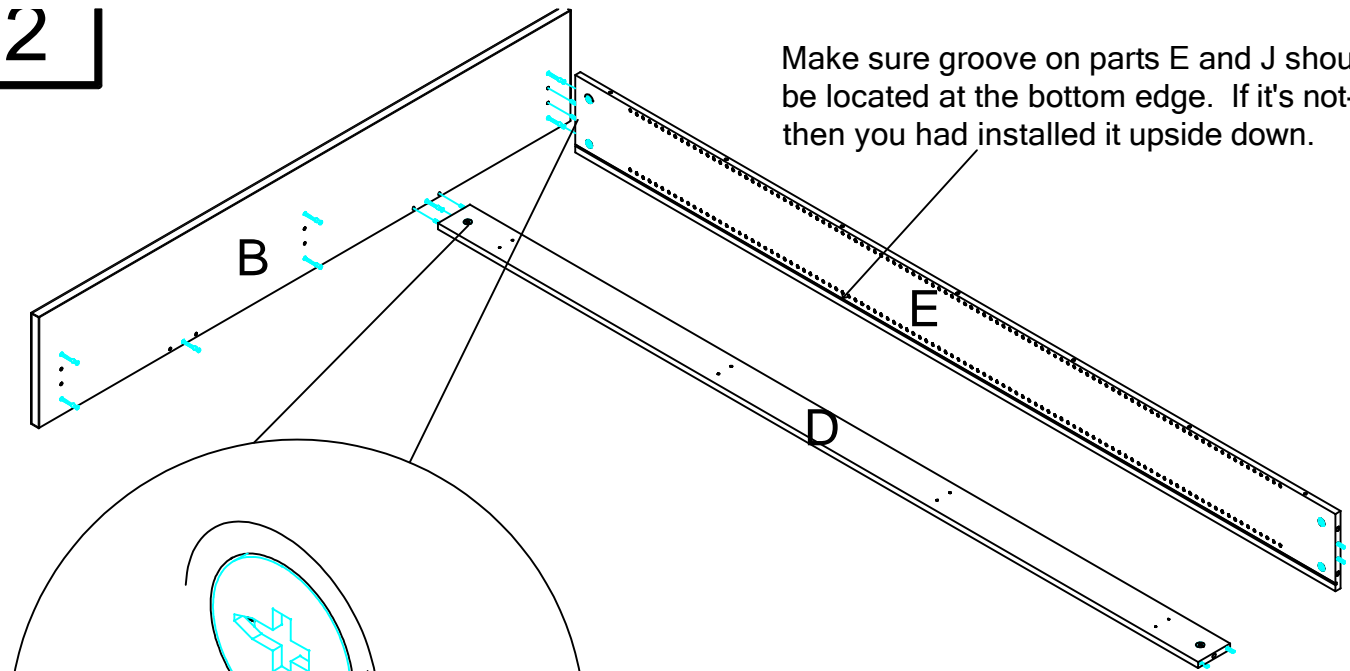

 Turn camlocks clockwise using flat (preferred) or phillips screwdriver until full stop (slightly over $\frac{1}{2}$ a turn to lock the bolt)

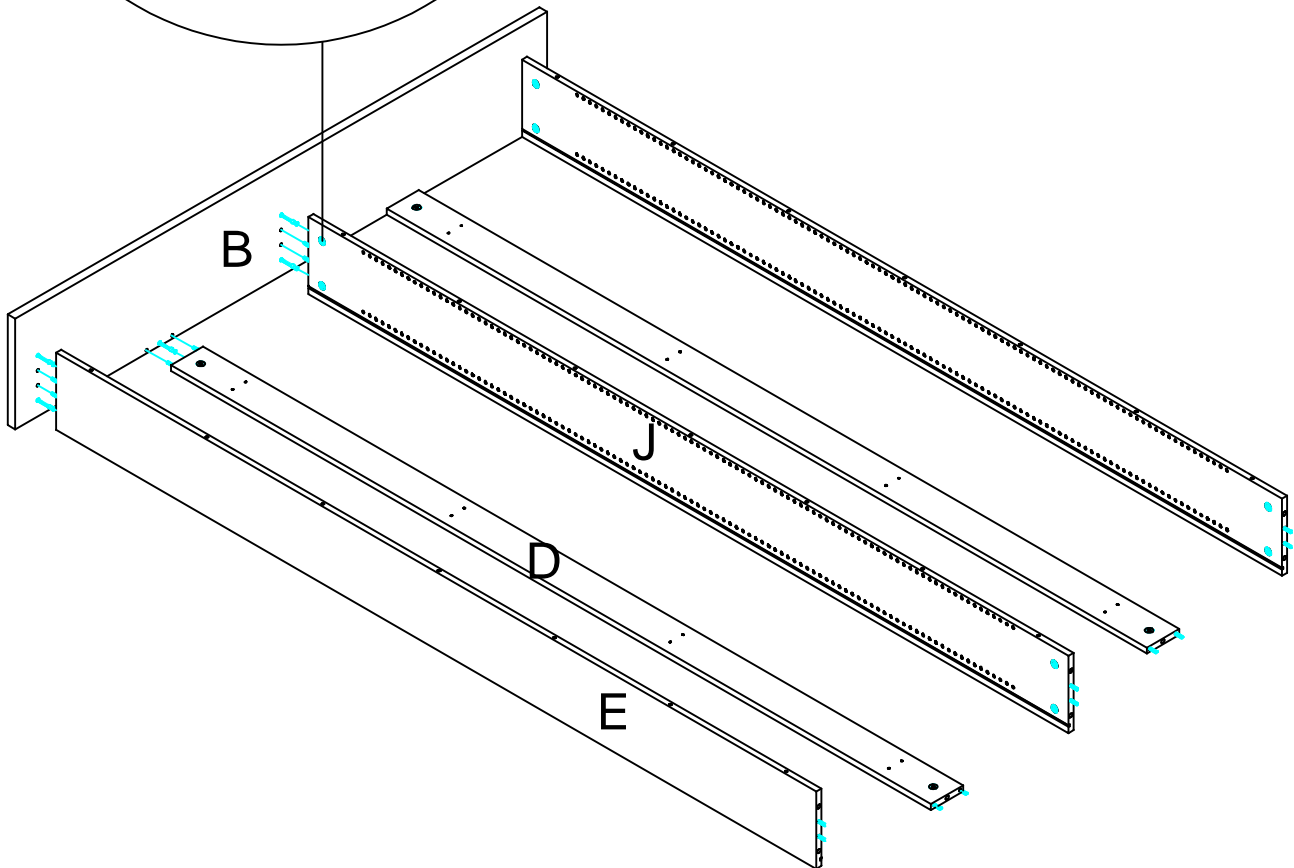


3

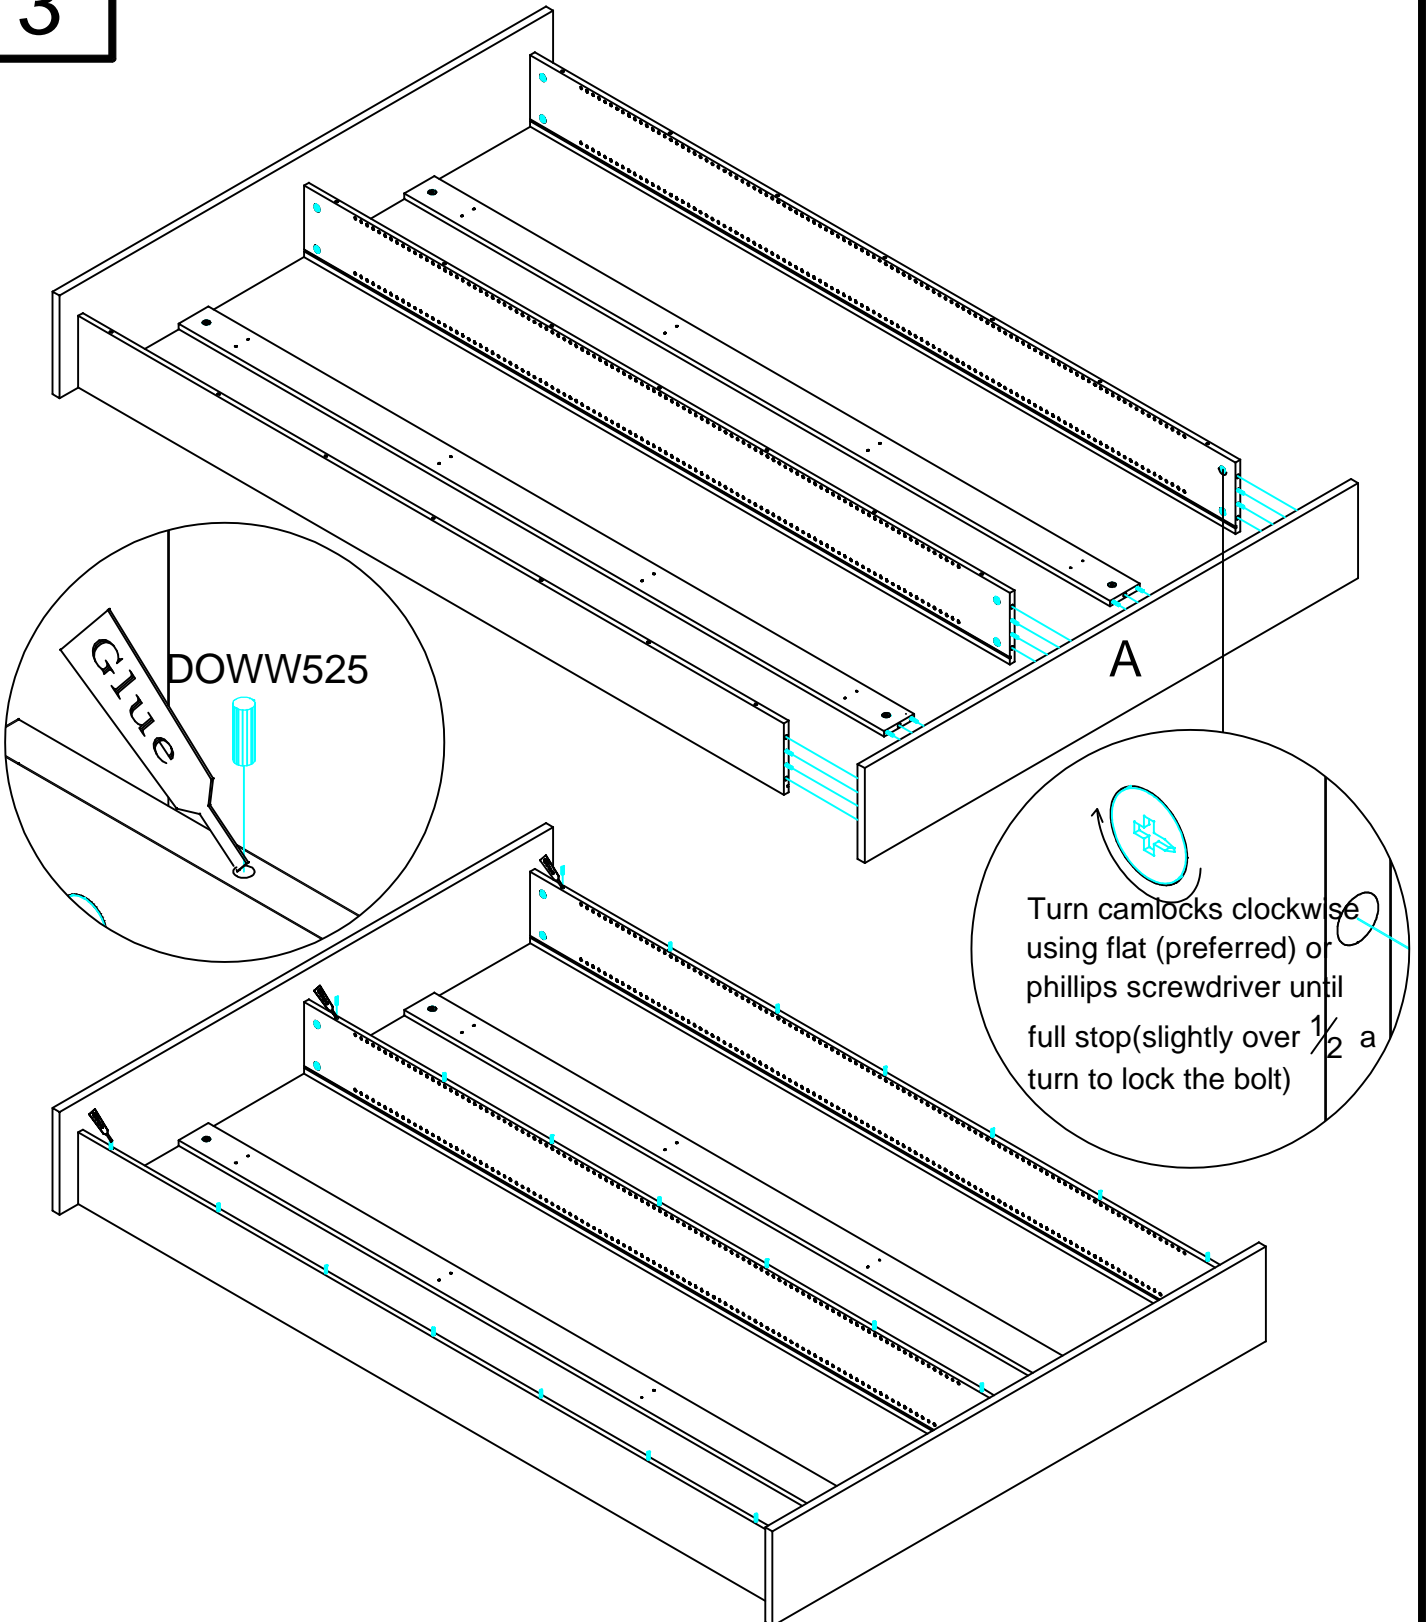 

Make sure the dowels go in as far possible. They should stick out no more than 3/8 of an inch.

Do not use more than one drop of glue as it may cause board to split.


 
4

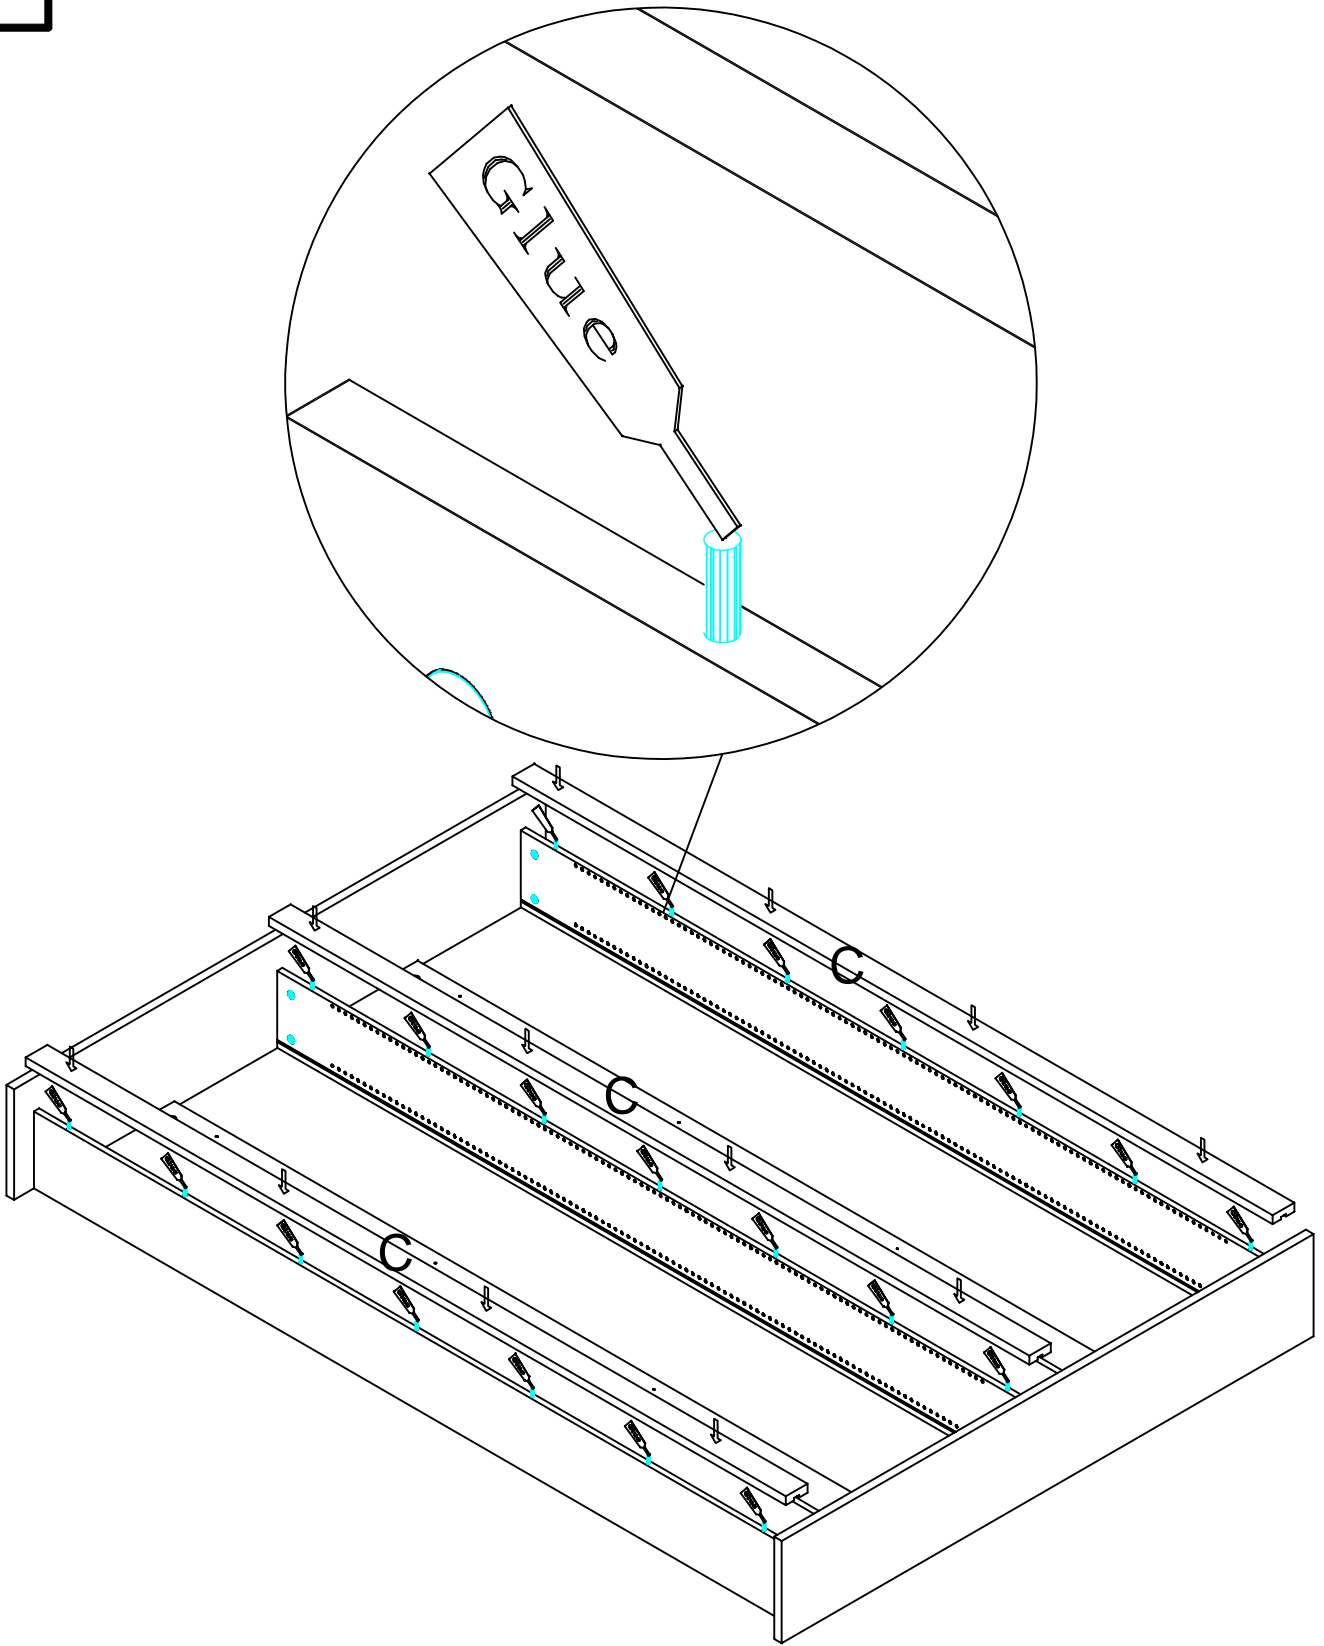

5



Attach part I onto
top A

  SPE610BL

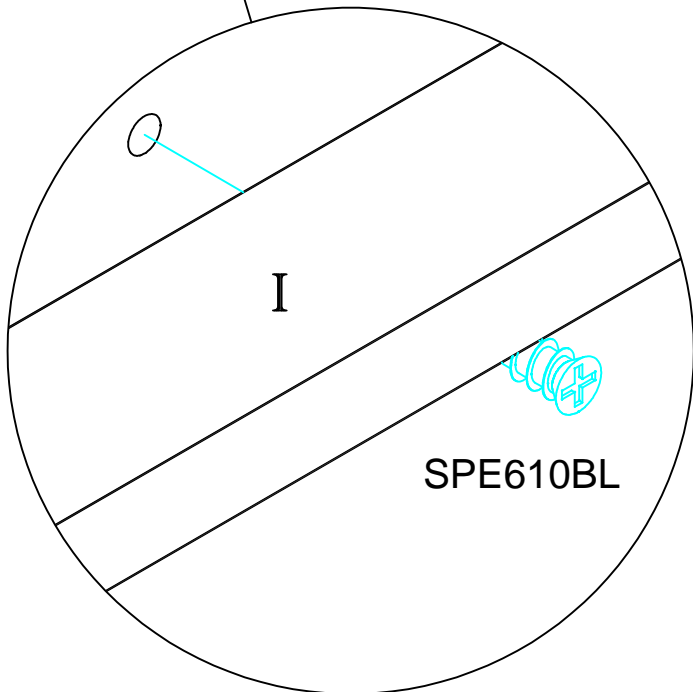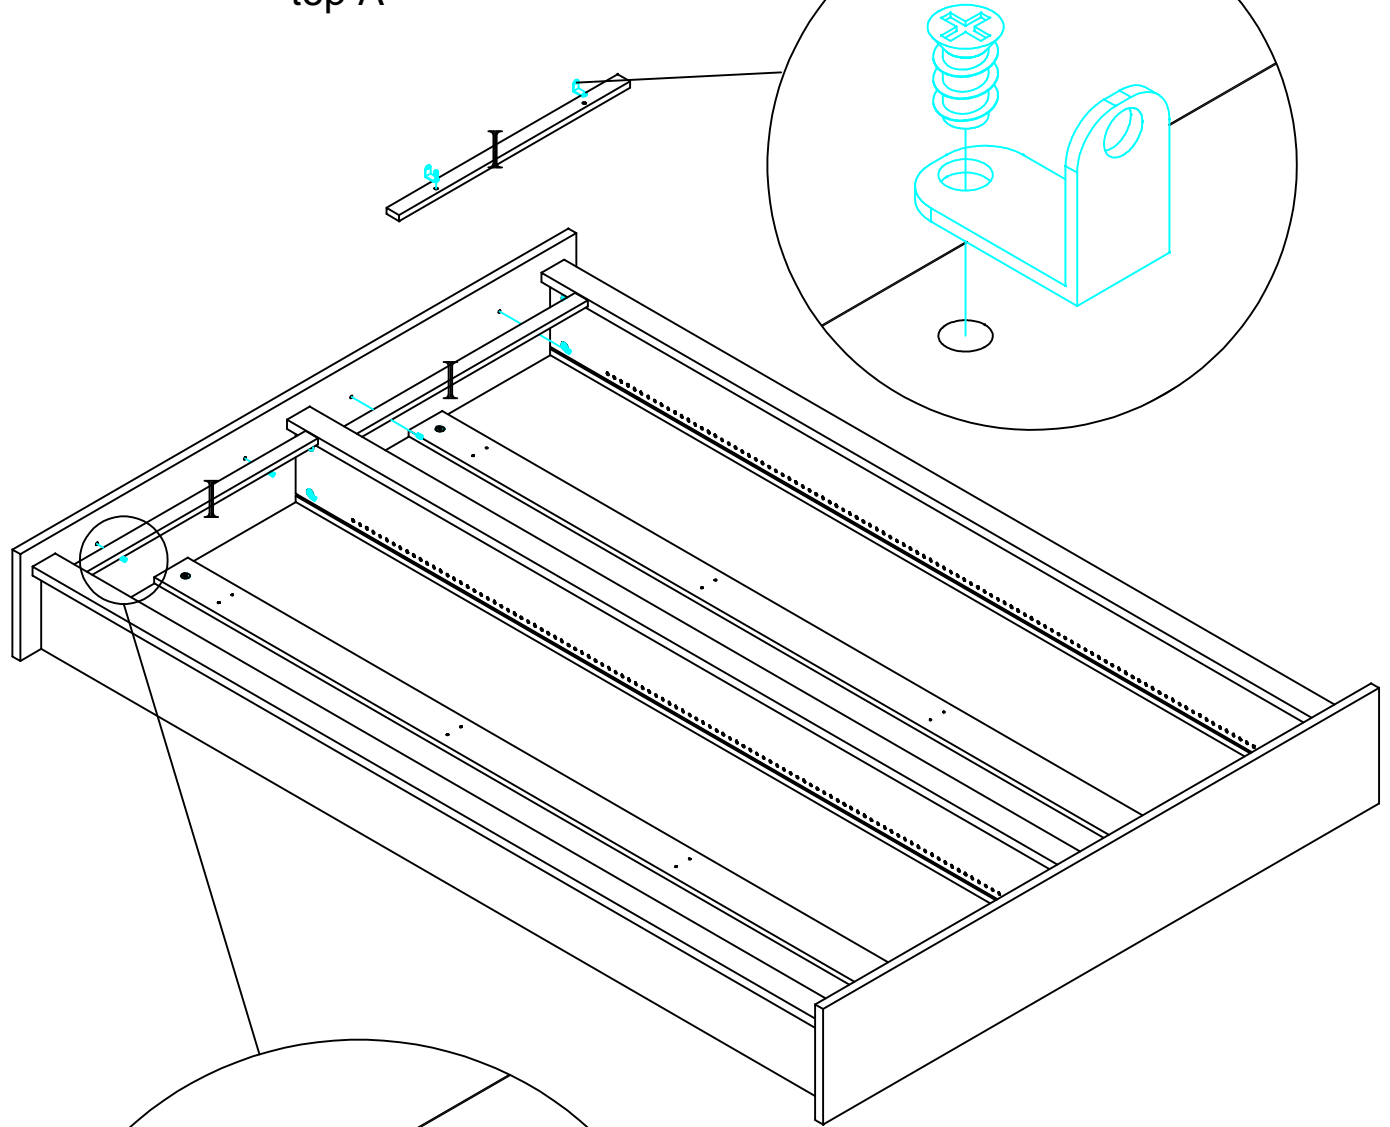


6

  
Use small screws on the back panel between Outer Sides(E) and dividers (J).

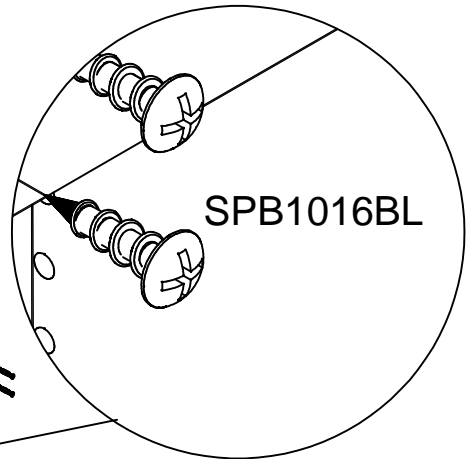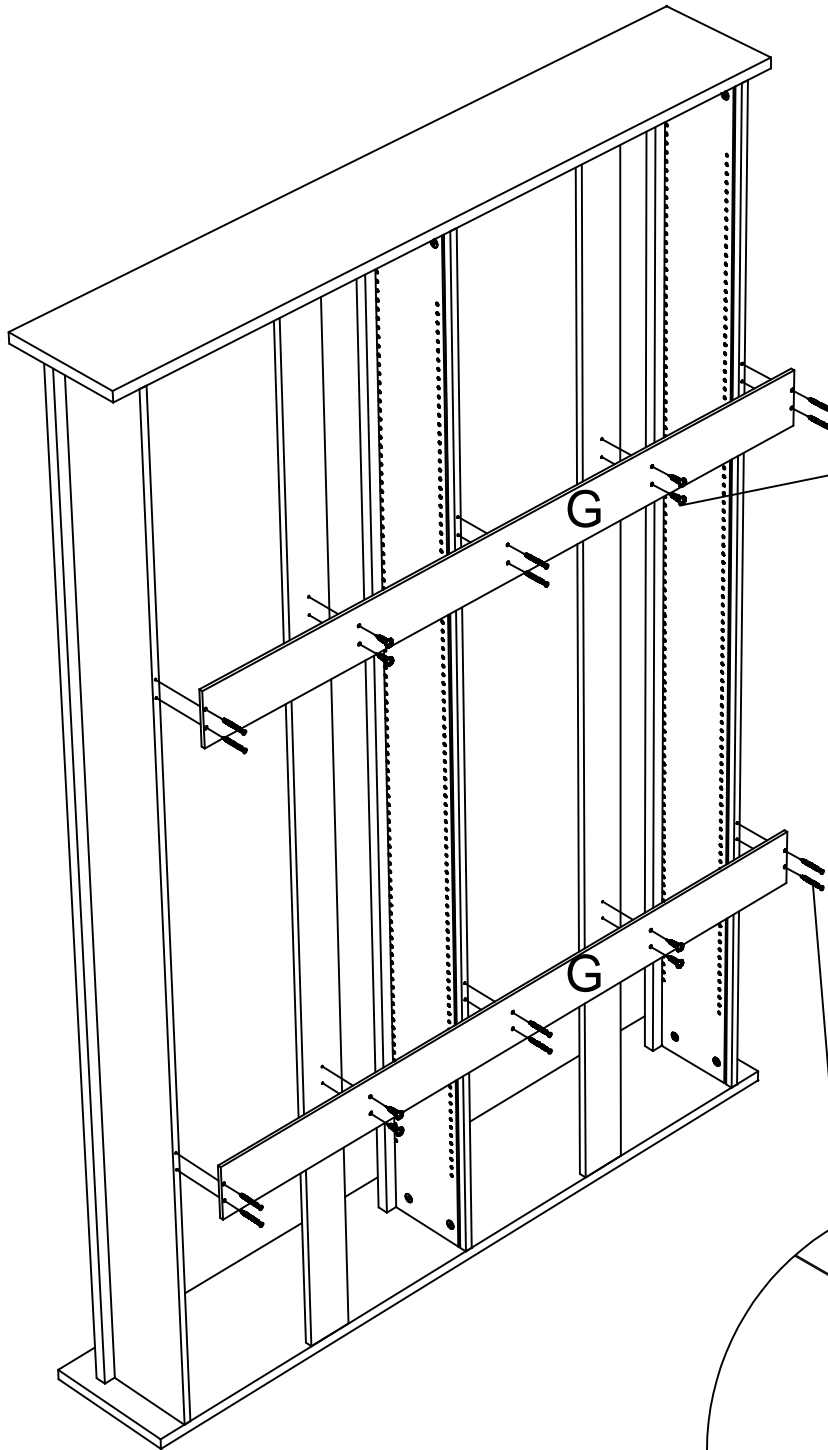

 
Use long screws only on the Outer Sides(E) and dividers (J).

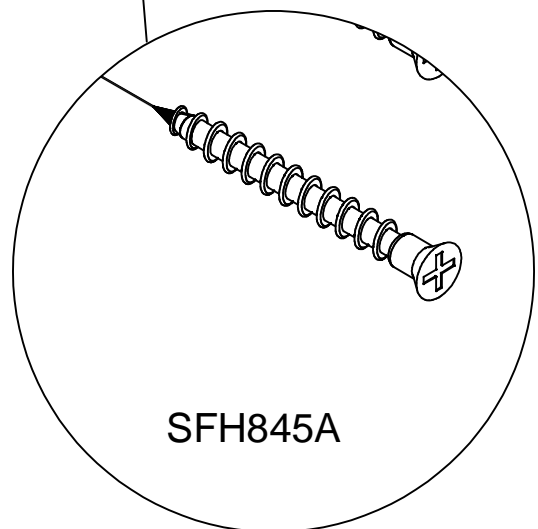

 7 Install Back Panels as shown, with unmarked edges facing down and blue or red marked being atop. Make sure the Blue is on the left side and Red is on the right side of each section. Otherwise you will have problem with leveling of the shelves, they will sag in the middle.

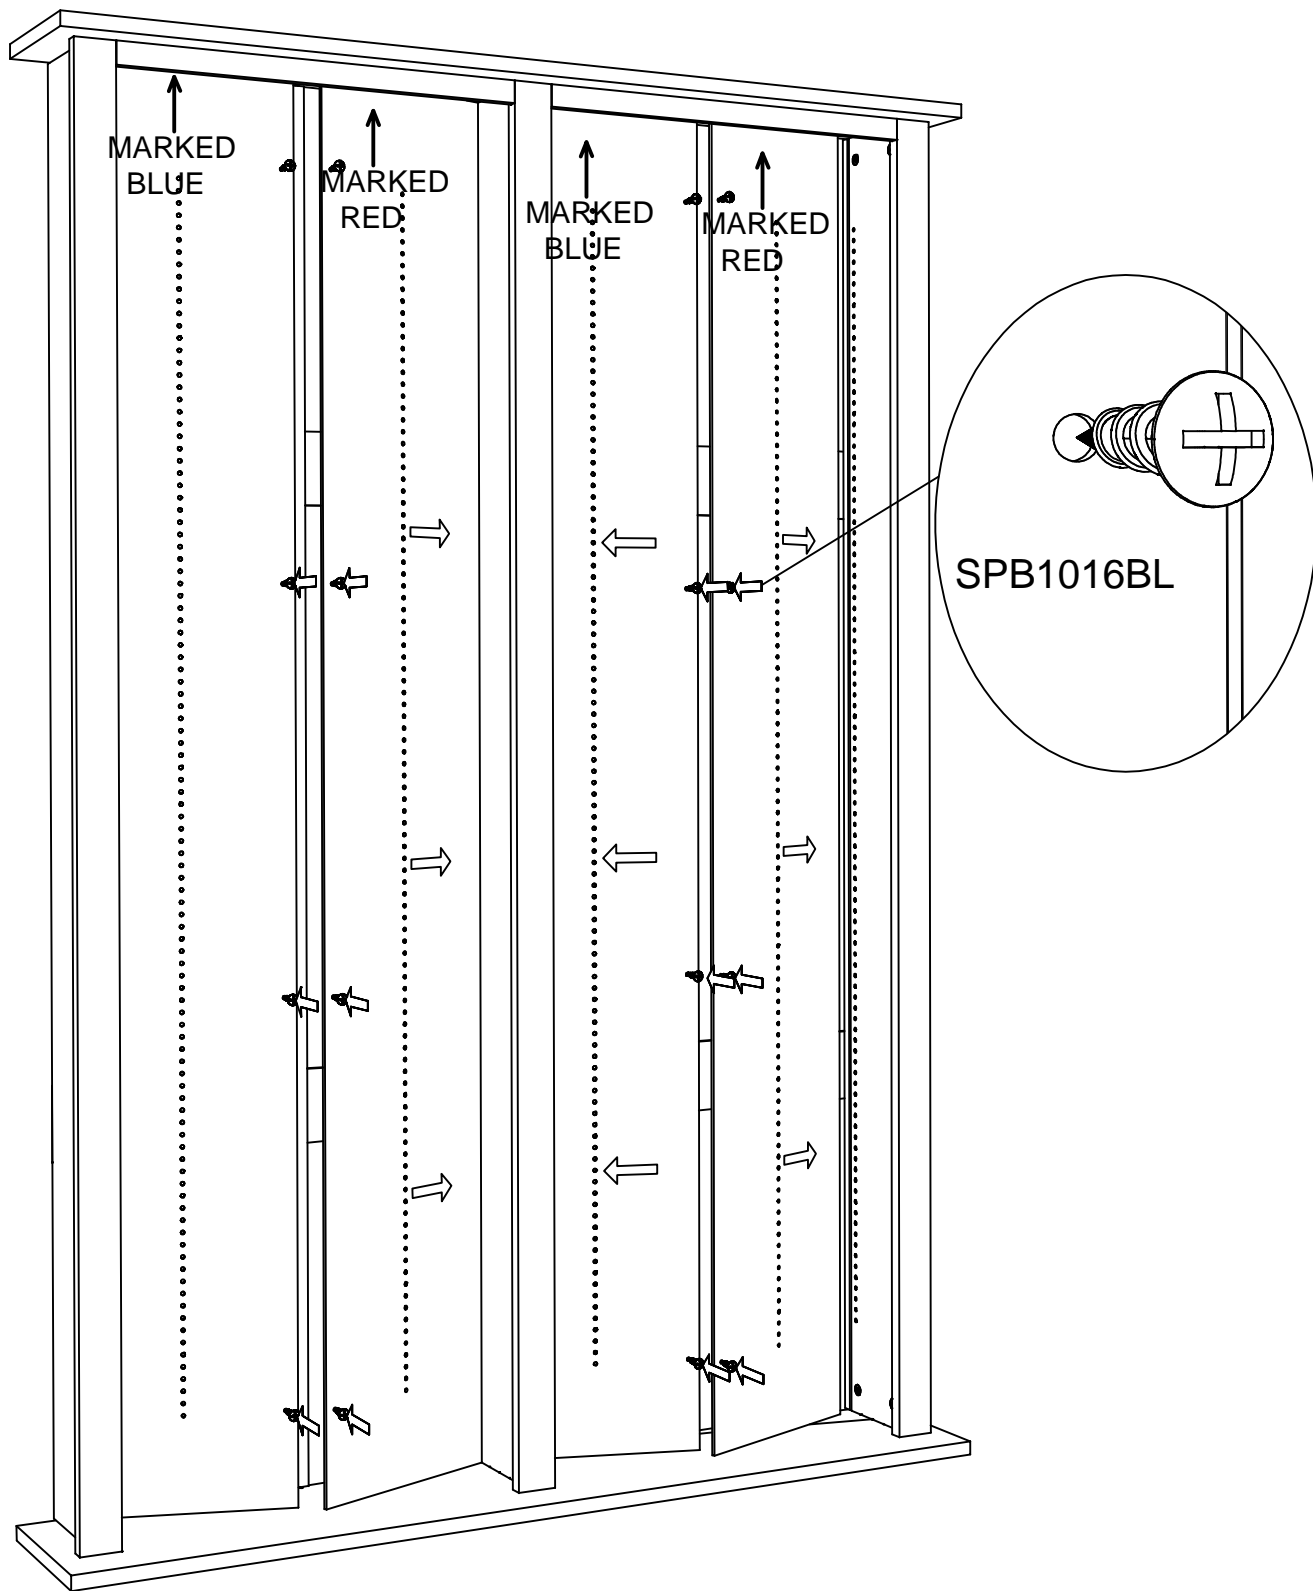


 
8 **OPTIONAL.** If you live in an earthquake zone, we recommend using the anti-toppling device provided to increase the safety in your home. Please follow the diagrams below. We provide two pilot holes in the back of the Top to attach a straps which you can secure to the wall. You can also, at your option secure unit through by screwing the back support (D) to the wall.

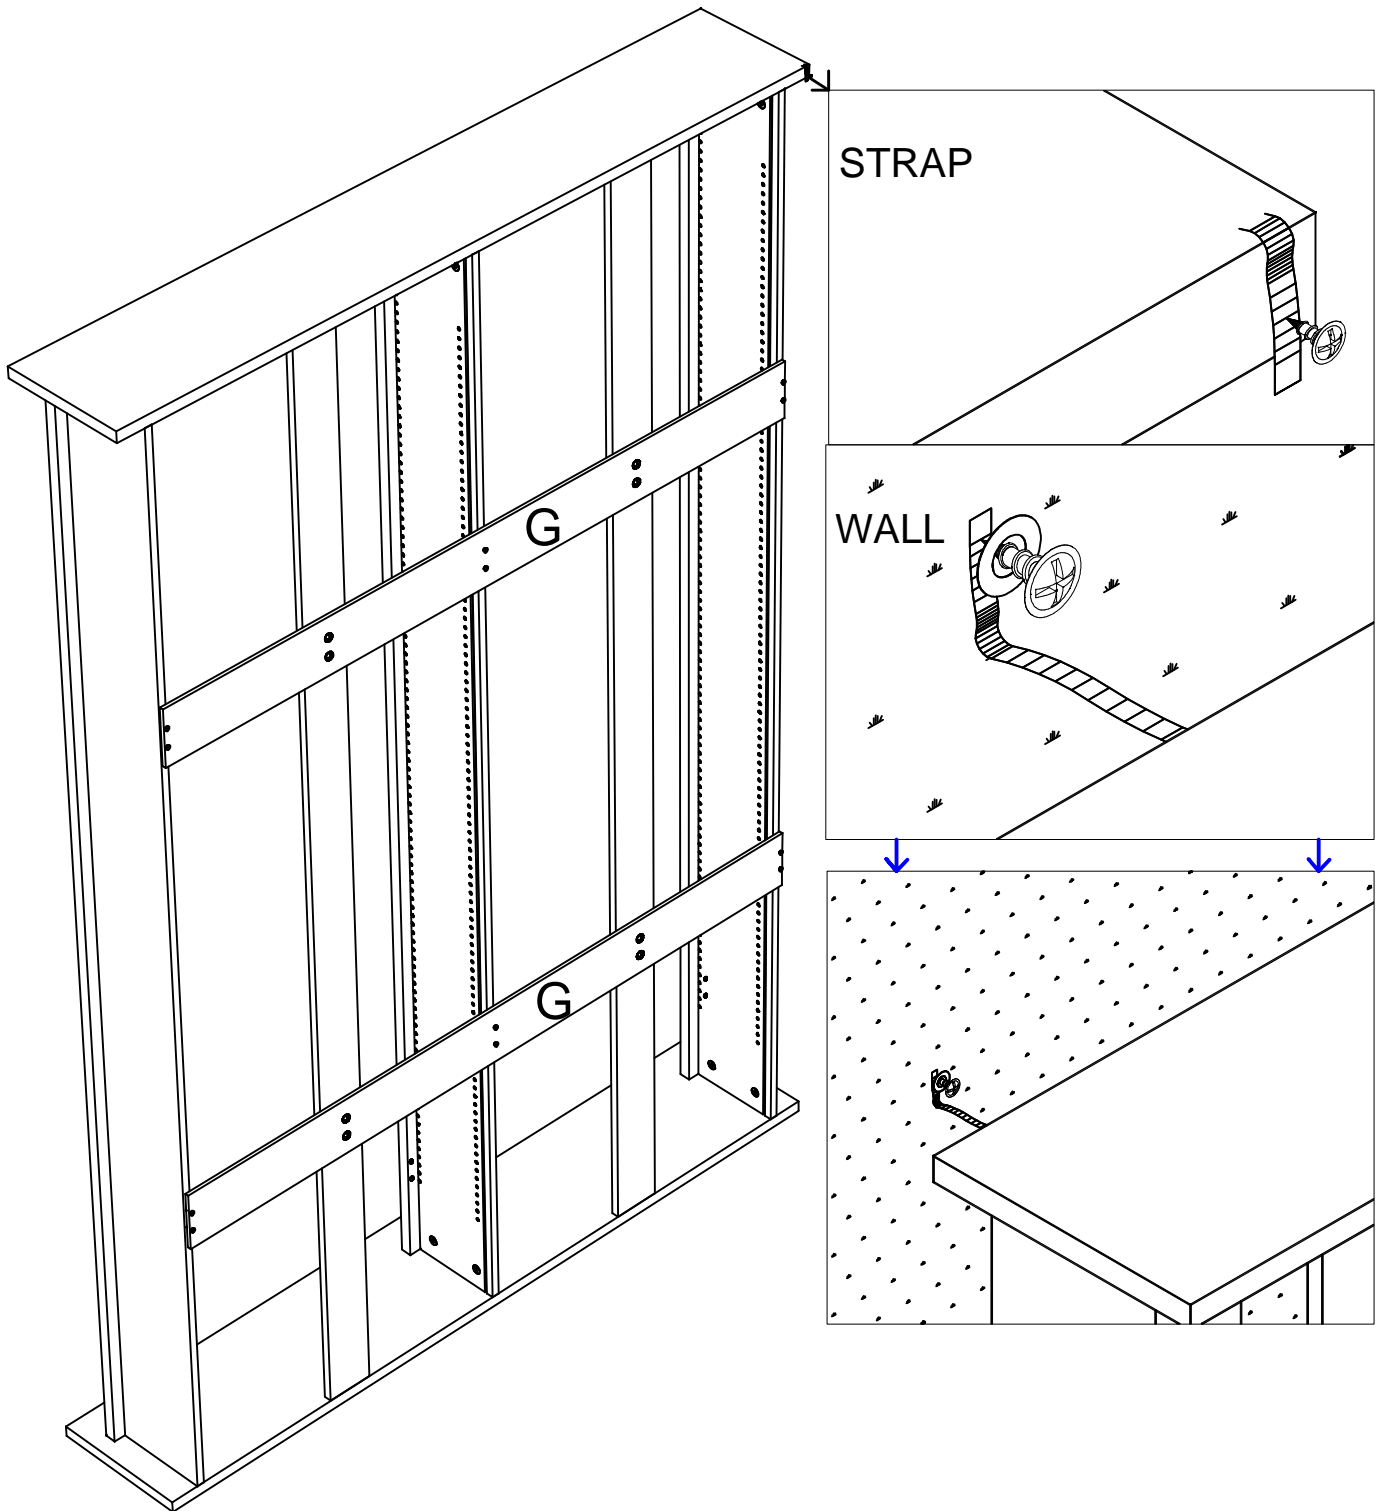

9

Do not tap with hammer onto shelf supports, instead twist them when inserting in. You will be using six shelf supports per shelf, two on each side and two in the back.

  Install shelves at desired locations. Use a case of CD or DVD as a template to locate positions for the shelves. Start from the bottom. If you skip a hole or mix in one section with CD or DVD/VHS cases, you may end up with some unused space at the top. In other words, to get the maximum capacity, don't skip any holes or mix different kinds of media in one section.

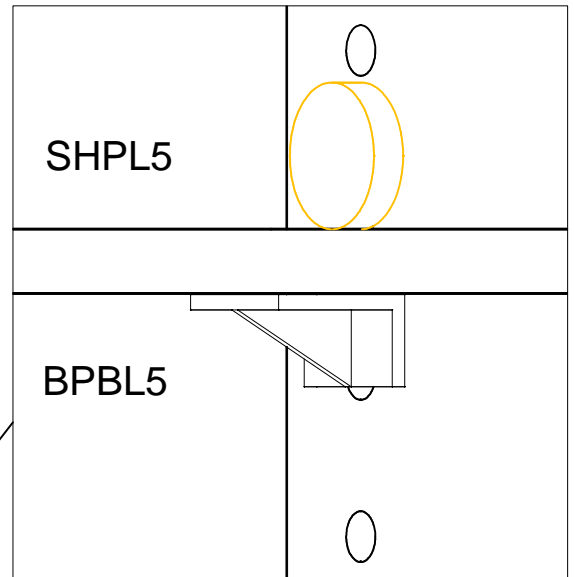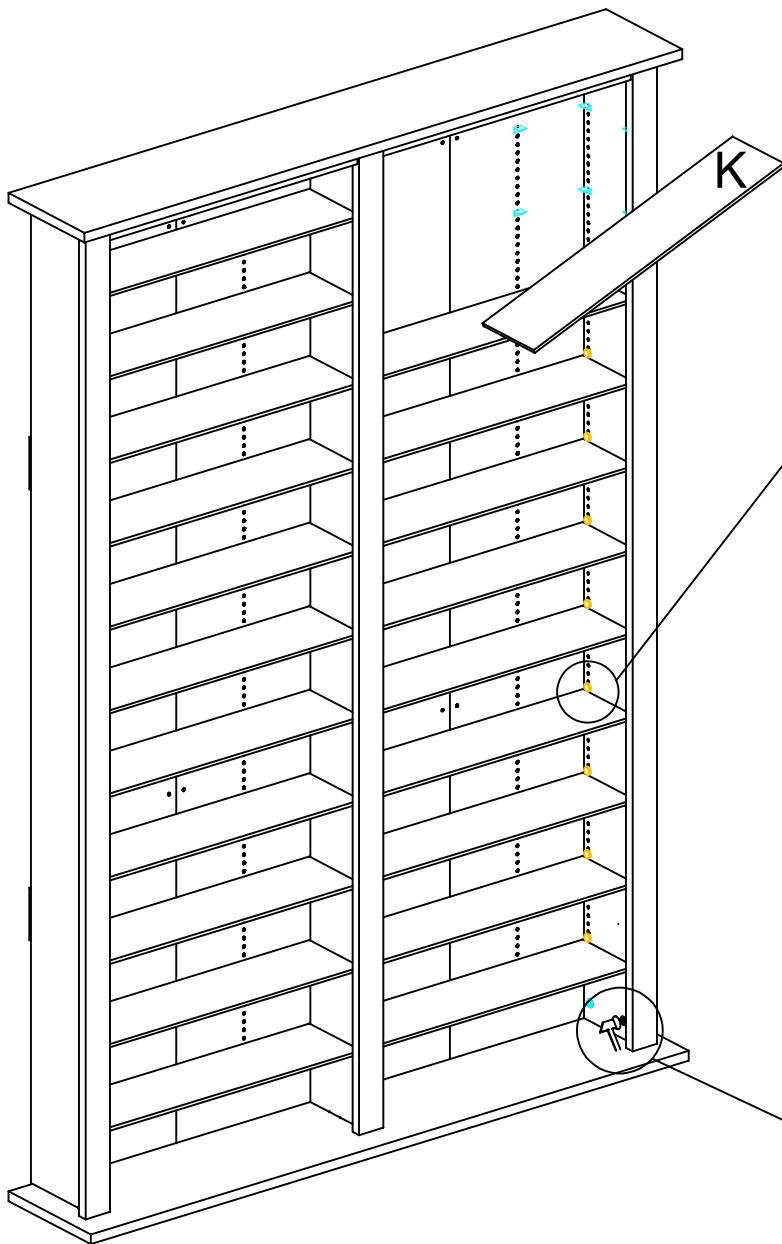

To prevent shelves from sagging, lock the back corners of them from above with two round Shelf Locks.

