


IF PARTS ARE MISSING AND OR DEFECTIVE, IF INSTRUCTIONS ARE NOT CLEAR OR IF YOU ARE EXPERIENCING PROBLEMS ASSEMBLING OUR PRODUCT.

BEFORE YOU RETURN THE PRODUCT TO THE STORE, PLEASE CALL US TOLL FREE FOR CUSTOMER SERVICE ASSISTANCE (888) 777-8250

OR SEND US EMAIL AT

help@spartakent.com

PLEASE HAVE ITEM NUMBER READY, AND A REPRESENTATIVE WILL GLADLY ASSIST YOU

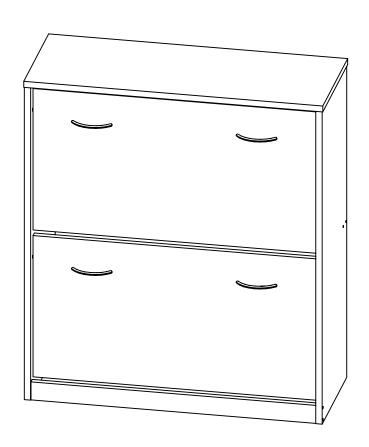



HARDWARE LIST						
HARDWARE	PART#		DESCRIPTION	QTY		
	PUPL128WH		PLASTIC PULL	4		
(F) \(\psi \text{\psi \text	SP825BL		#8 X 1" PAN HEAD SCREW	8		
	SFH833A		#8 X 33 WOOD SCREW	8		
	CAMLT12		CAMLOCK	24		
	CAMBT12		BOLT	24		
	DOWW525		WOOD DOWEL	4		
	SPE610BL		SHORT EURO SCREW	4		
£ccccco	SPE616Z		LONG EURO SCREW	4		
├	NAIL1734		NAIL	30		
A C B D	SHRKWH		SHOE RACK WHITE (components A, B, C, D come attached to the body of plastic rack. Please separate them before proceeding with assembly.)	4		
{###>	SP8	16BL	#8x 5/8-PAN HEAD SCREW	8		
TOOL REQUIRED						
PHILLIPS SCREWDRIVER HAMMER						


PARTS IDENTIFICATION


NOTE: FIRST MAKE SURE THAT YOU HAVE ALL OF THE PARTS LISTED ON THIS SHEET. IF YOU ARE MISSING ANY PIECE(S), DO NOT ASSEMBLE THE UNIT. INSTEAD. CALL CUSTOMER SERVICE NUMBER AT: (888) 777-8250. WE WILL BE HAPPY TO ASSIST YOU.


ASSEMBLE THE UNIT. INSTEAD, CALL CUSTOMER SERVICE NUMBER AT: (888) 777-8250. WE WILL BE HAPPY TO ASSIST YOU.					
		E C			
B	A				
	°	E	•		
F		= ○ H	0 = 0 =		
G		K			
4231A-Left Panel 4231B-Right Panel 4221C-Kick Plate 4221D-Door 4221E-Top Panel	1pc 1pc 1pc 2pcs 1pc	4221F-Divider 4221G-Back Panel 4221H-Stretcher 4221K-Back Divider	6pcs 2pcs 5pcs 2pcs		

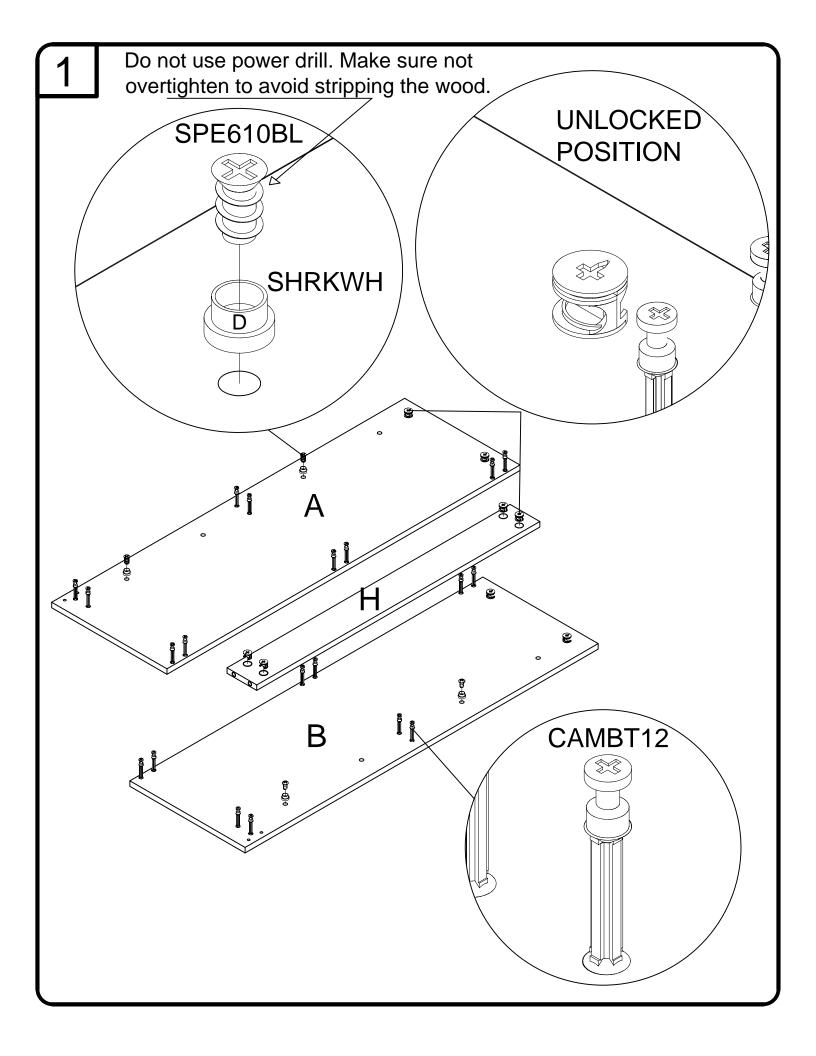

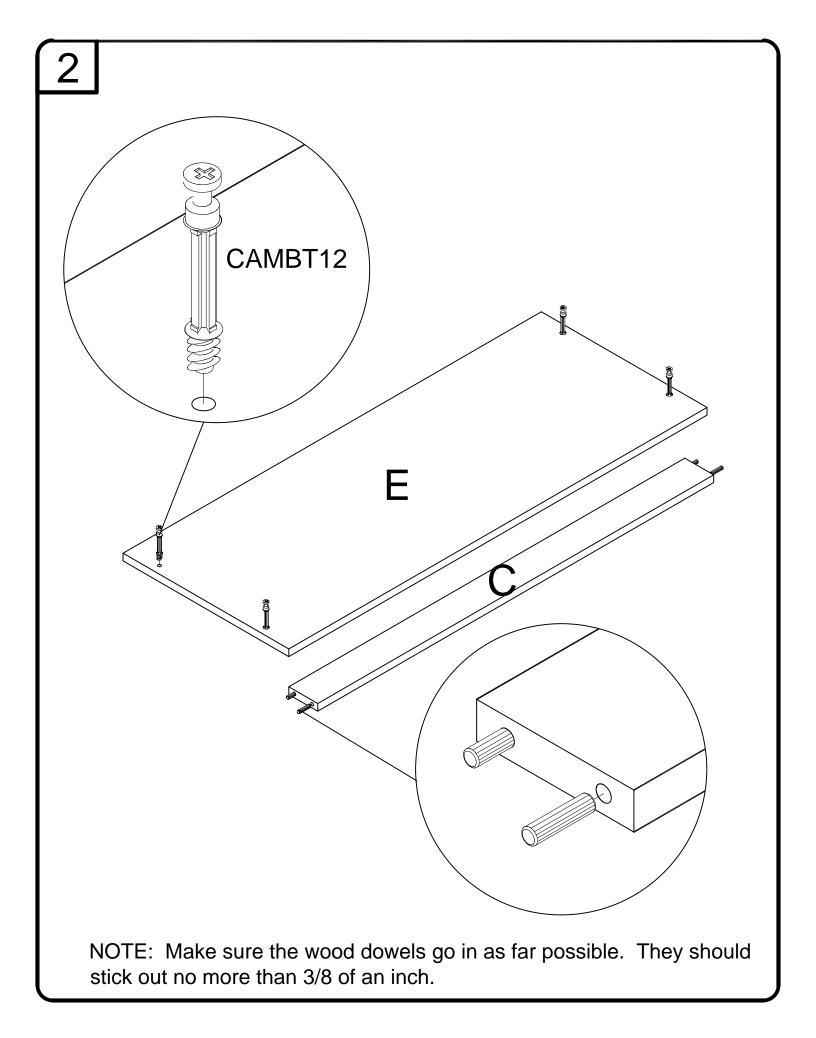


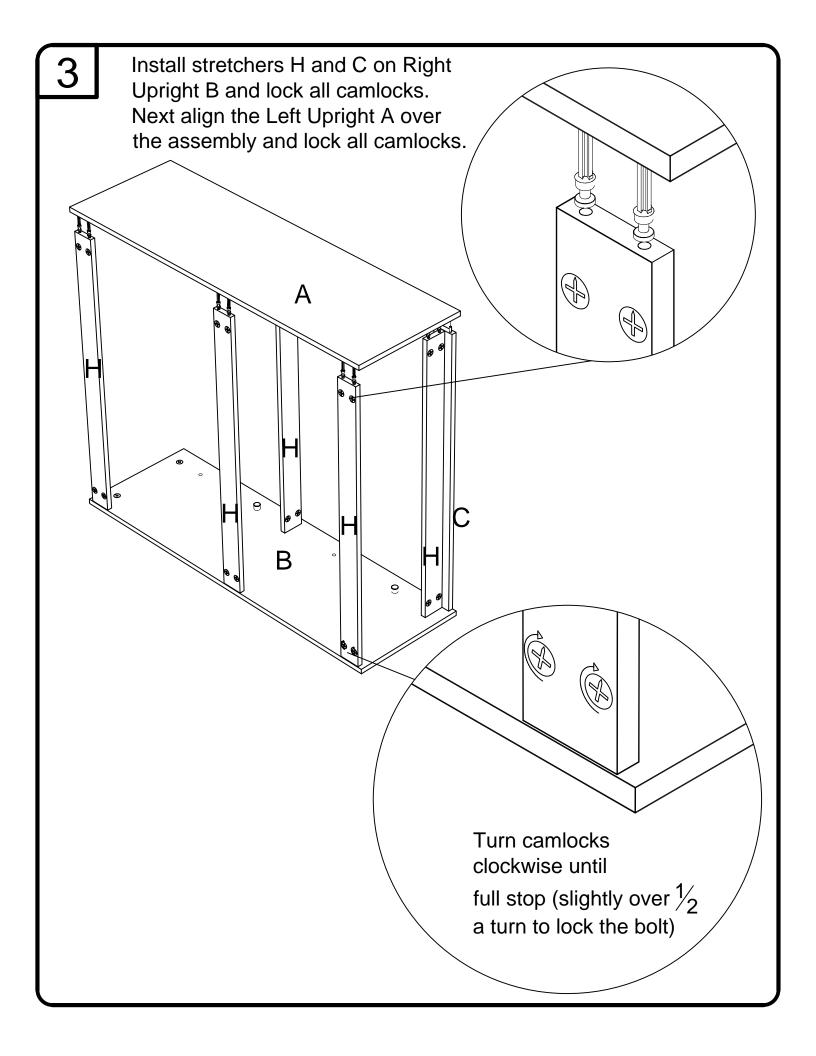


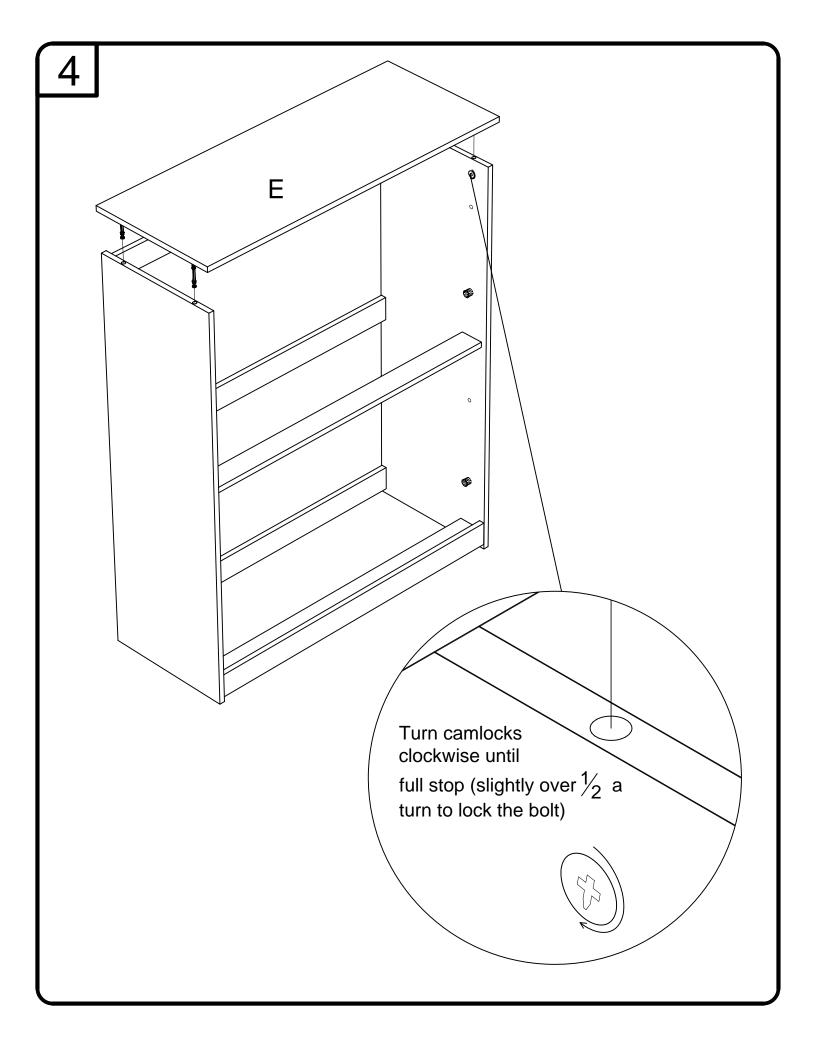


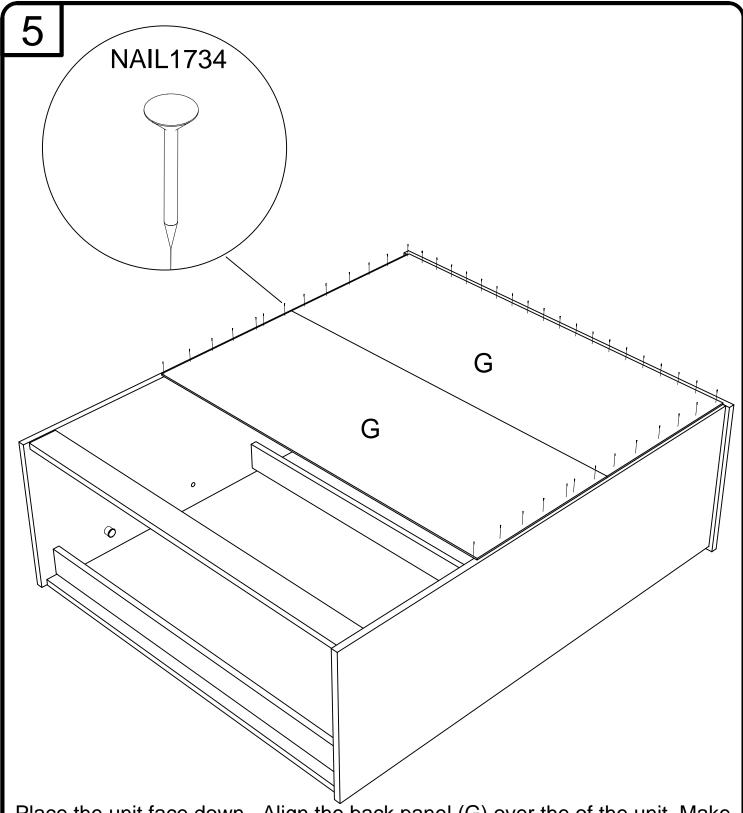

Place the unit face down. Align the back panel (G) over the of the unit. Make sure the assembly is square and leave equal amount of margin all around. Tack the two opposing corners of the back panel down first using nails as shown, then the other two. Next, nail the back panel all around with approximately 2" spacing between the nails. Make sure to keep the nails centered on the edges to avoid splitting of the boards.

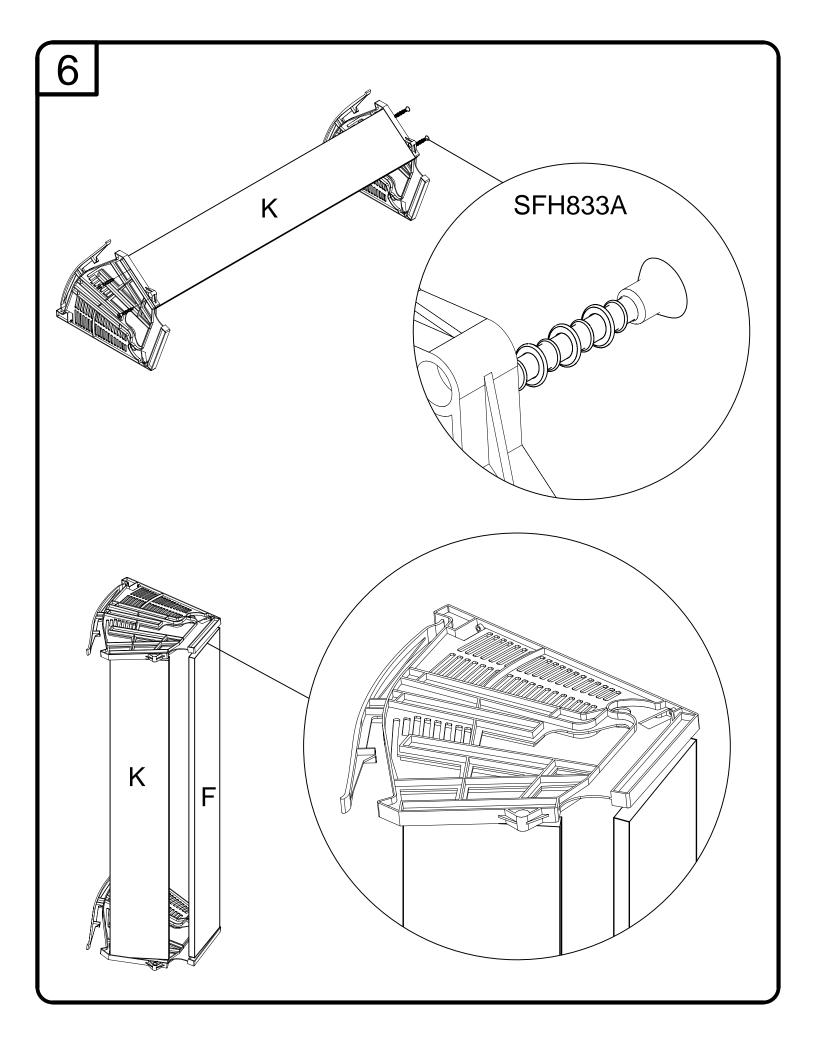


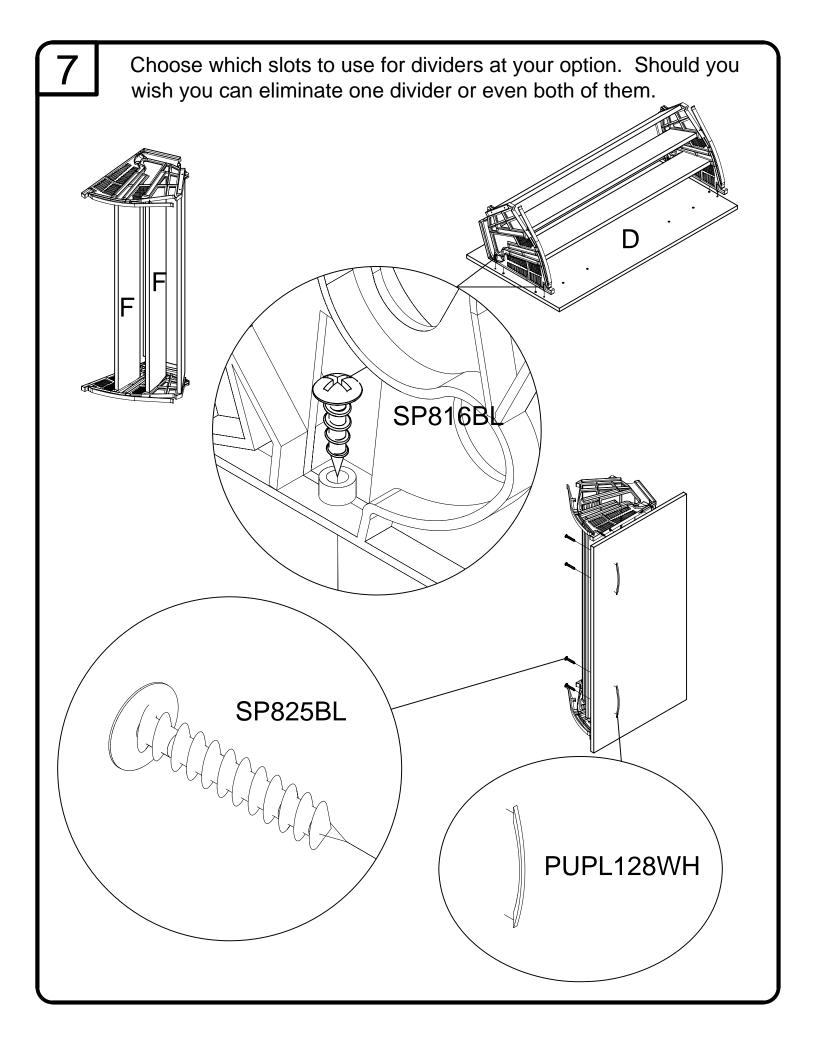


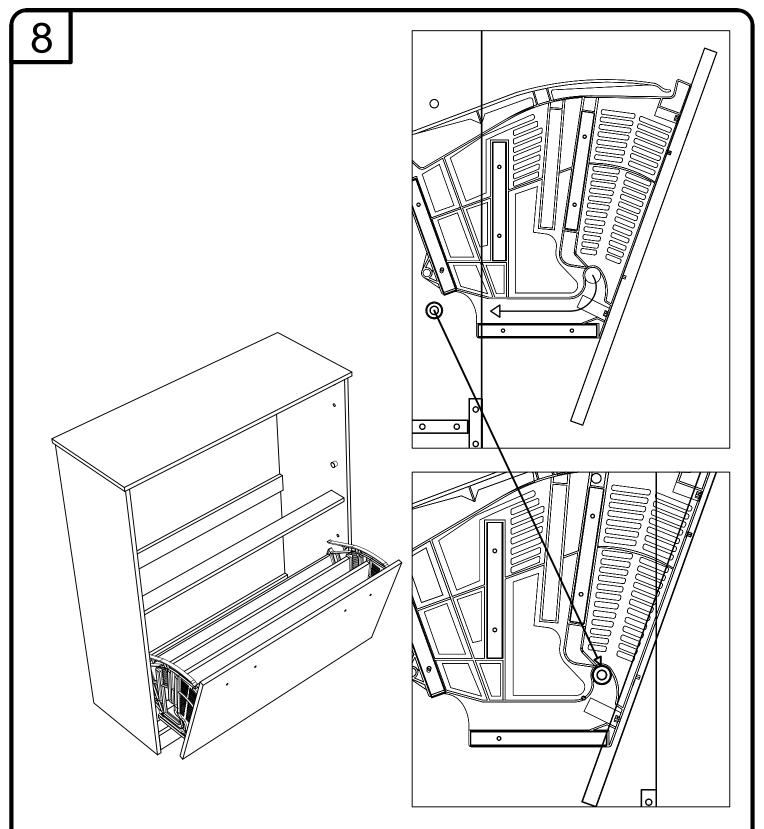

Align the door/shoe rack assembly, tilting it slightly, as shown in the expended view. Pushing slightly inwards on the sides of the plastic shoe rack with both hands, line up both sides of the plastic shoe rack with Part D. Insert and push the door assembly on Part D on both sides simultaneously, using the channel provided on the plastic shoe rack. See the arrow on the diagram to locate the channel/groove. If both sides are inserted correctly, the assembly will drop slightly downwards.

Once the door/show rack has been installed, you will need to assemble A, C, & B which acts as a runner for the racks. Insert A into C. Part A should leave a ½" gap between the lip of C & A. Next, push together B to the protruding portion of A.

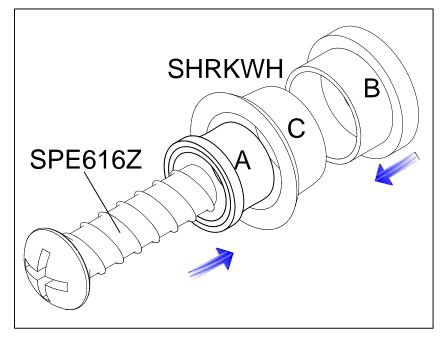

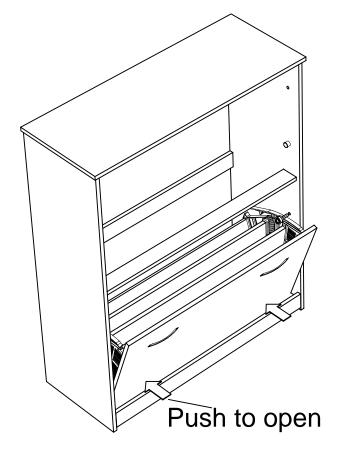

At this point, insert screw through assembled A, B, & C. At least ½" of the screw should be exposed at the end of B. Open door half way and insert assembled A, B, & C on to hole on side panels. Screw the assembled runner tightly to the side panels. The shoe rack should roll smoothly on the runner.

