



IF PARTS ARE MISSING AND OR DEFECTIVE, IF INSTRUCTIONS ARE NOT CLEAR
OR IF YOU ARE EXPERIENCING PROBLEMS ASSEMBLING OUR PRODUCT.

 
**BEFORE YOU RETURN THE PRODUCT TO THE STORE,
PLEASE CALL US TOLL FREE FOR CUSTOMER SERVICE ASSISTANCE**



 




 

 

 


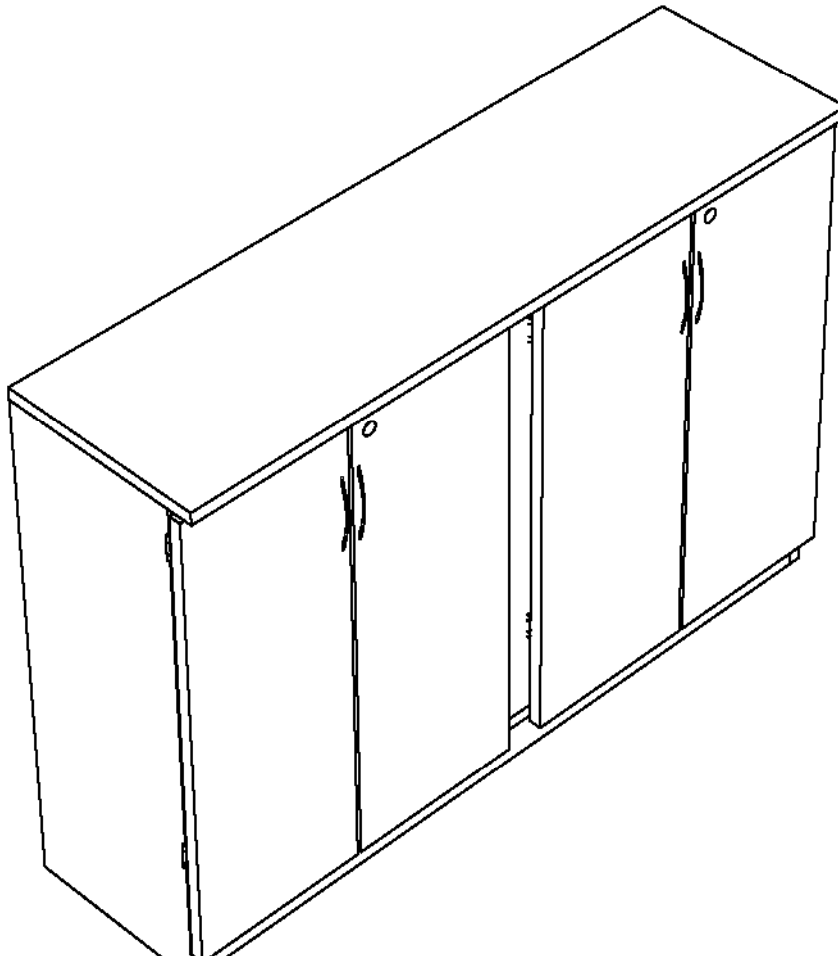


 





(888) 777-8250

OR SEND US EMAIL AT

help@spartakent.com

  PLEASE HAVE ITEM NUMBER READY, AND A REPRESENTATIVE WILL GLADLY ASSIST YOU




HARDWARE	PART#	DESCRIPTION	QTY
	MAGSGBL	SINGLE MAGNET	2
	SP816BL	PAN HEAD SCREW	4
	STPLTBL	MAGNETIC PLATE	4
	SF612A	FLAT HEAD SCREW	8
	HIN50SW	HINGE	8
	GLUE	SUPER GLUE GEL	1
	PUPL128BL	HANDLE	4
	SP825BL	HANDLE SCREW	8
	SHBRBL	SHELF BRACKET	24
	SHRTBL238	SHELF RETAINER CLIP	12
	CAMLT12	CAMLOCK	10
	CAMBT12	BOLT	6
	CAMBTQF	QUICKFIT BOLT	4
	DOWW525	WOOD DOWEL	20
	NAIL1734	NAIL	50
	SP811BL	PAN HEAD SCREW	72
	SFH825A	WOOD SCREW	8
	SFH845A	WOOD SCREW	6
	LOCKPT	LOCK PLATE	2
	BPBL5	SHELF SUPPORT	8
	LOCKBR	LOCK	2
	BM25	BRACKET ANGLE	2
	SP51612BL	EURO SCREW	4

HINGE & SHELF ADJUSTMENT


If you find your doors out of alignment, if gap between doors is uneven, too big, or too small use this diagram to adjust your doors.

 UP-DOWN ADJUSTMENT
Loosen screws. Hinge can now slide up or down as required tighten screws after adjustment is made. Make sure do not overtighten the screws as you may strip the wood. It will be a good idea not to use power drill.

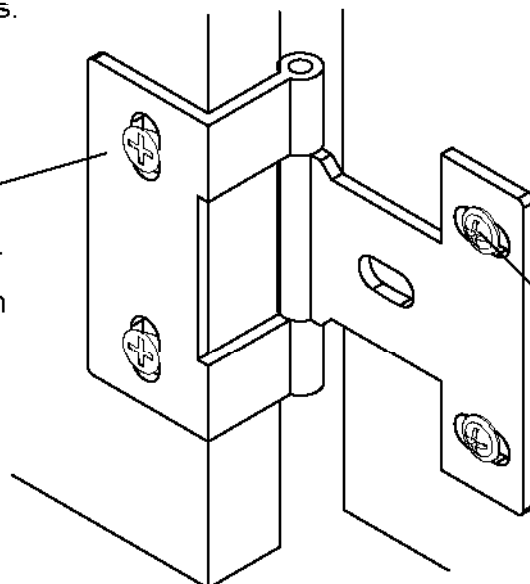


SIDE TO SIDE ADJUSTMENT
Loosen screws. Hinge can now slide side to side as required tighten screws after adjustment is made. Make sure do not overtighten the screws as you may strip the wood. It will be a good idea not to use power drill.

To prevent disk cases or tapes from falling over on the pocket door shelves don't leave open space for to them move around. Fill shelves up or use end blocks.

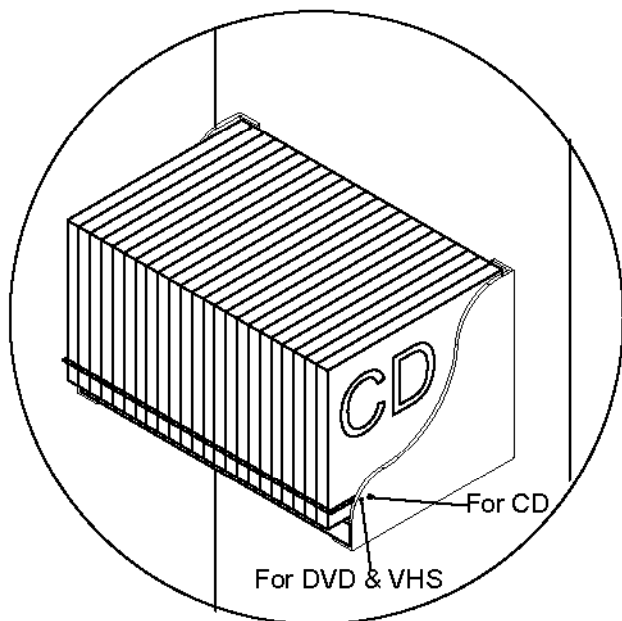


YES

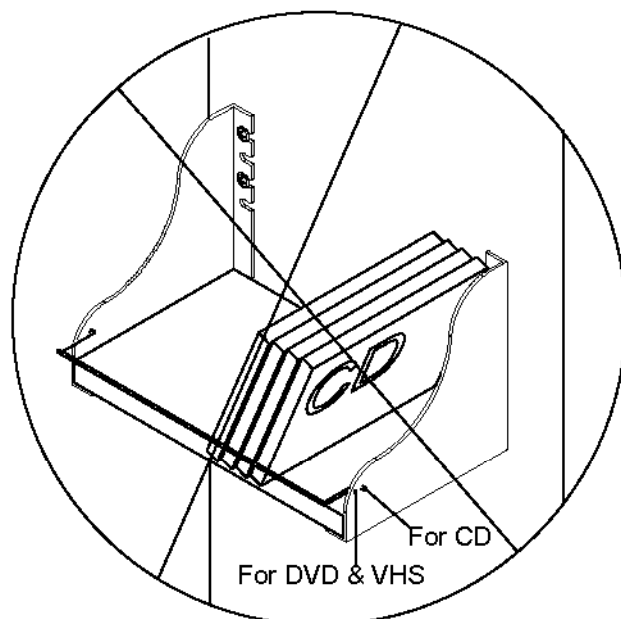

NO

PARTS IDENTIFICATION





 
NOT: FIRST MAKE SURE THAT YOU HAVE ALL OF THE PARTS LISTED ON THIS SHEET. IF YOU ARE MISSING ANY PIECE(S), DO NOT ASSEMBLE THE UNIT. INSTEAD, CALL OUR CUSTOMER SERVICE NUMBER AT: (888) 777-8250. WE WILL BE HAPPY TO ASSIST YOU.

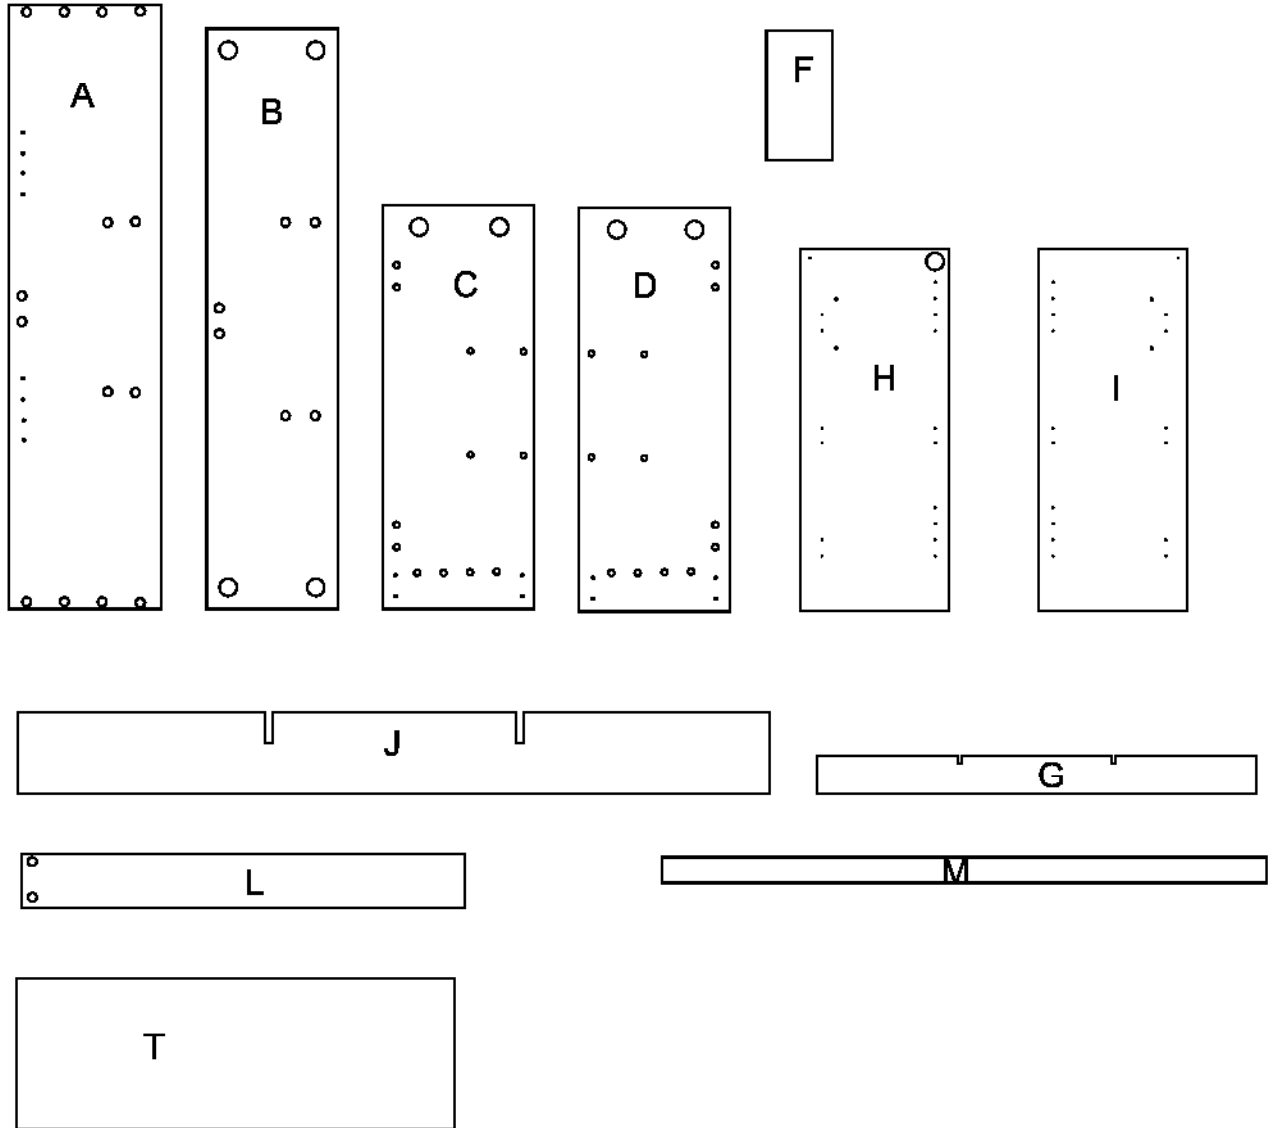

2360A- Top	1pc	2360I-Left Door	2pcs
2368B-Bottom	1pc	2368J-Shelf	2pcs
2360C-Left End Panel	1pc	2362L-Face Frame	1pc
2360D-Right End Panel	1pc	2362M-Brace	2pcs
2360F-Door Shelf	12pcs	2360G-Divider	2pcs
2360H-Right Door	2pcs	2362T-Back Panel	3pcs

PARTS ARE USUALLY MARKED ON THE RAW EDGE.

     1

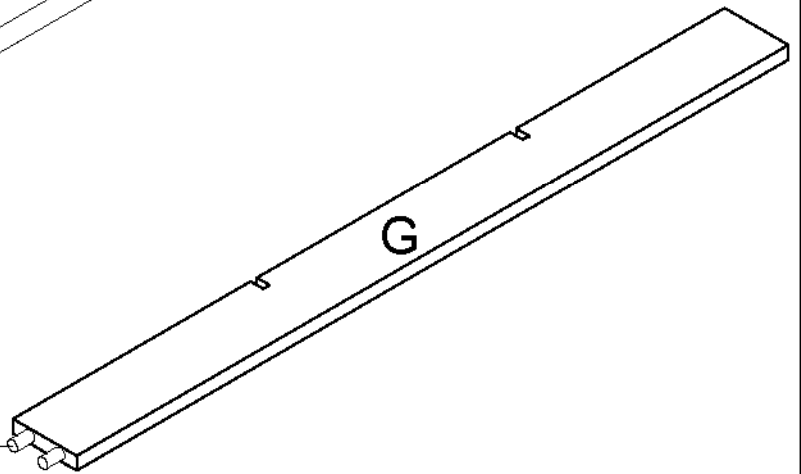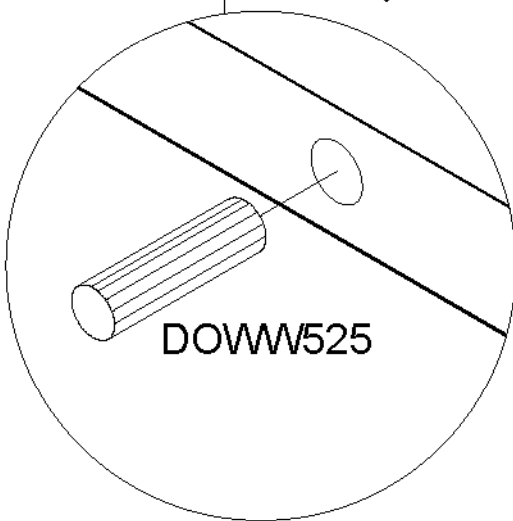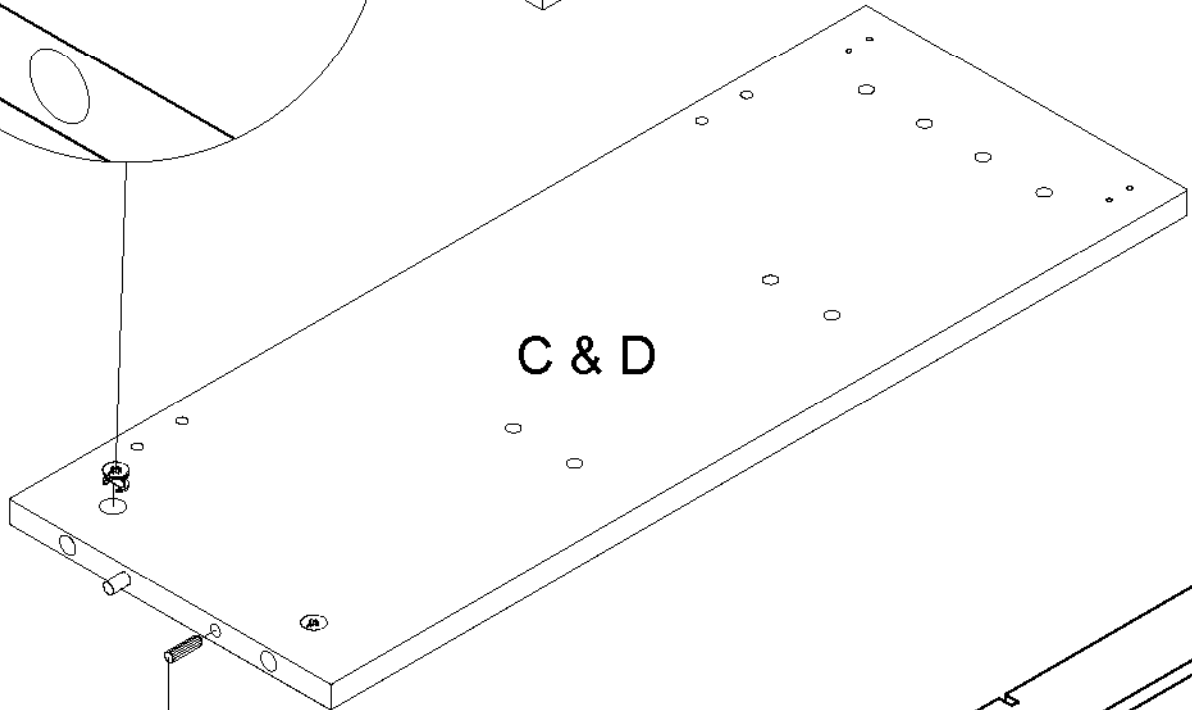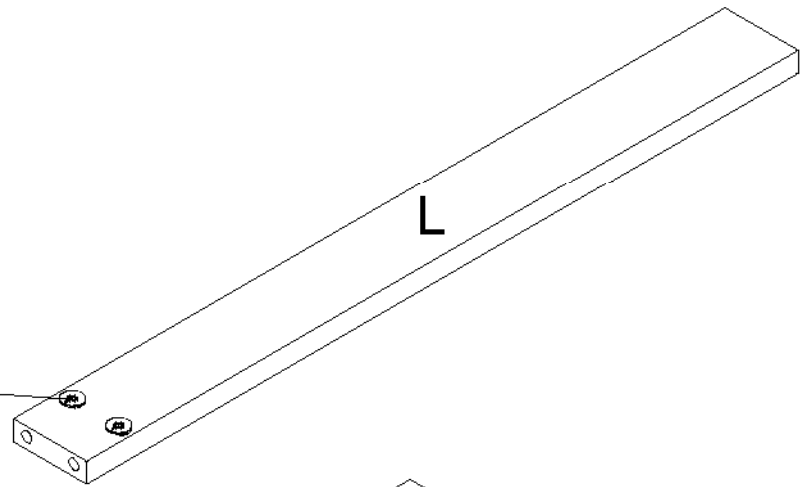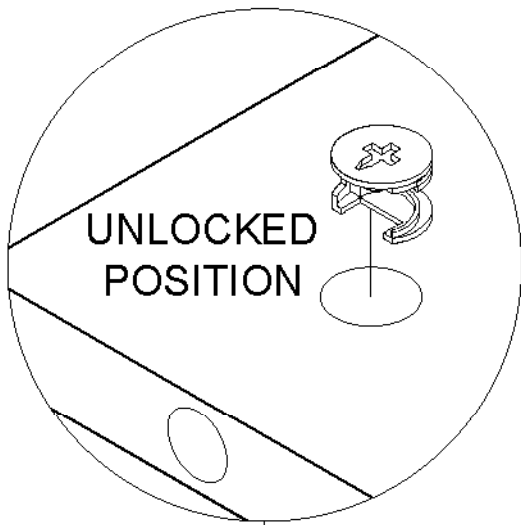


2


SP816BL

SF612A


A

  CAMBT12




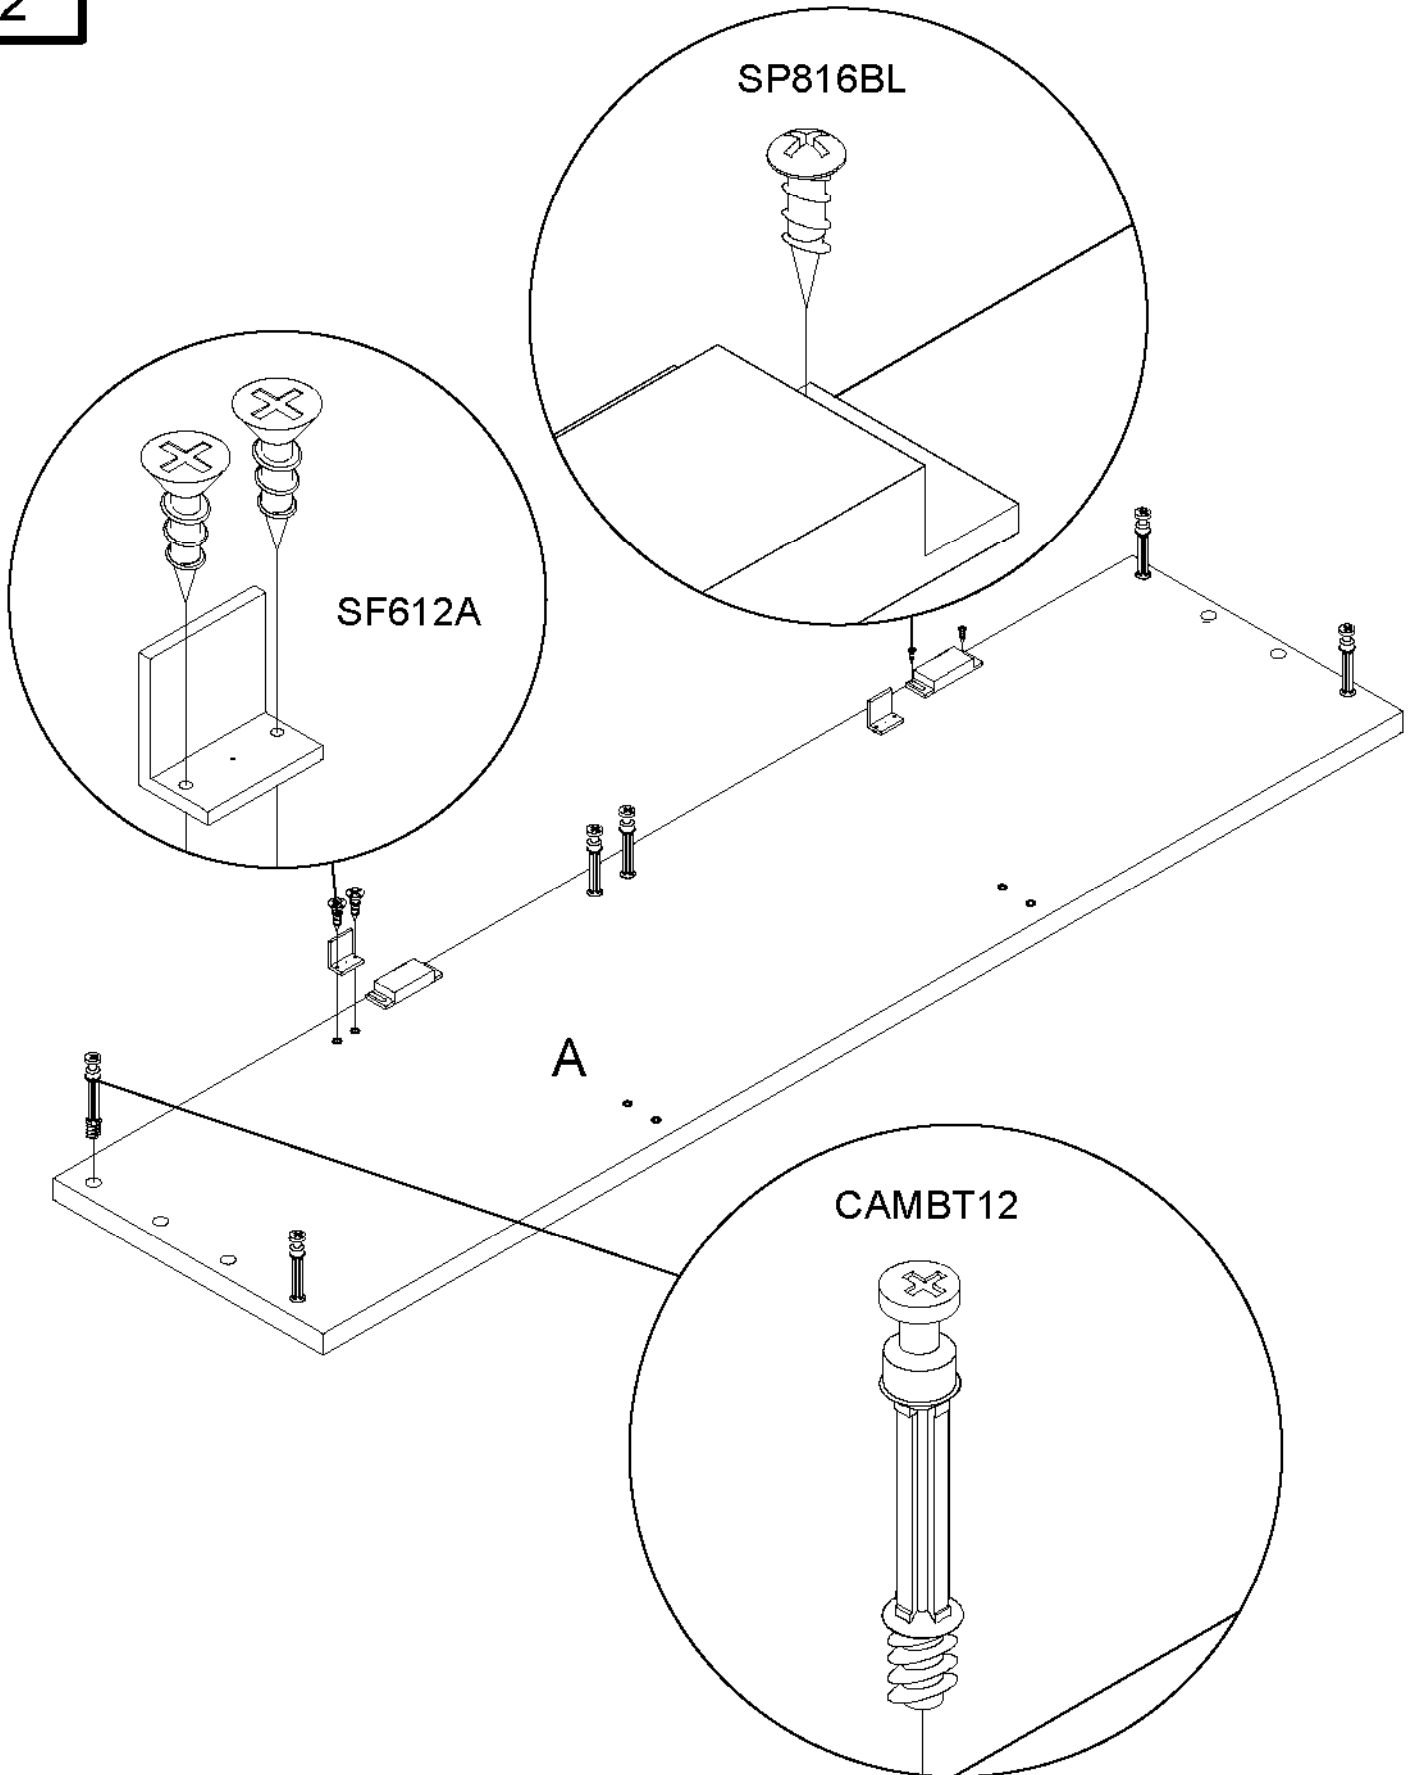


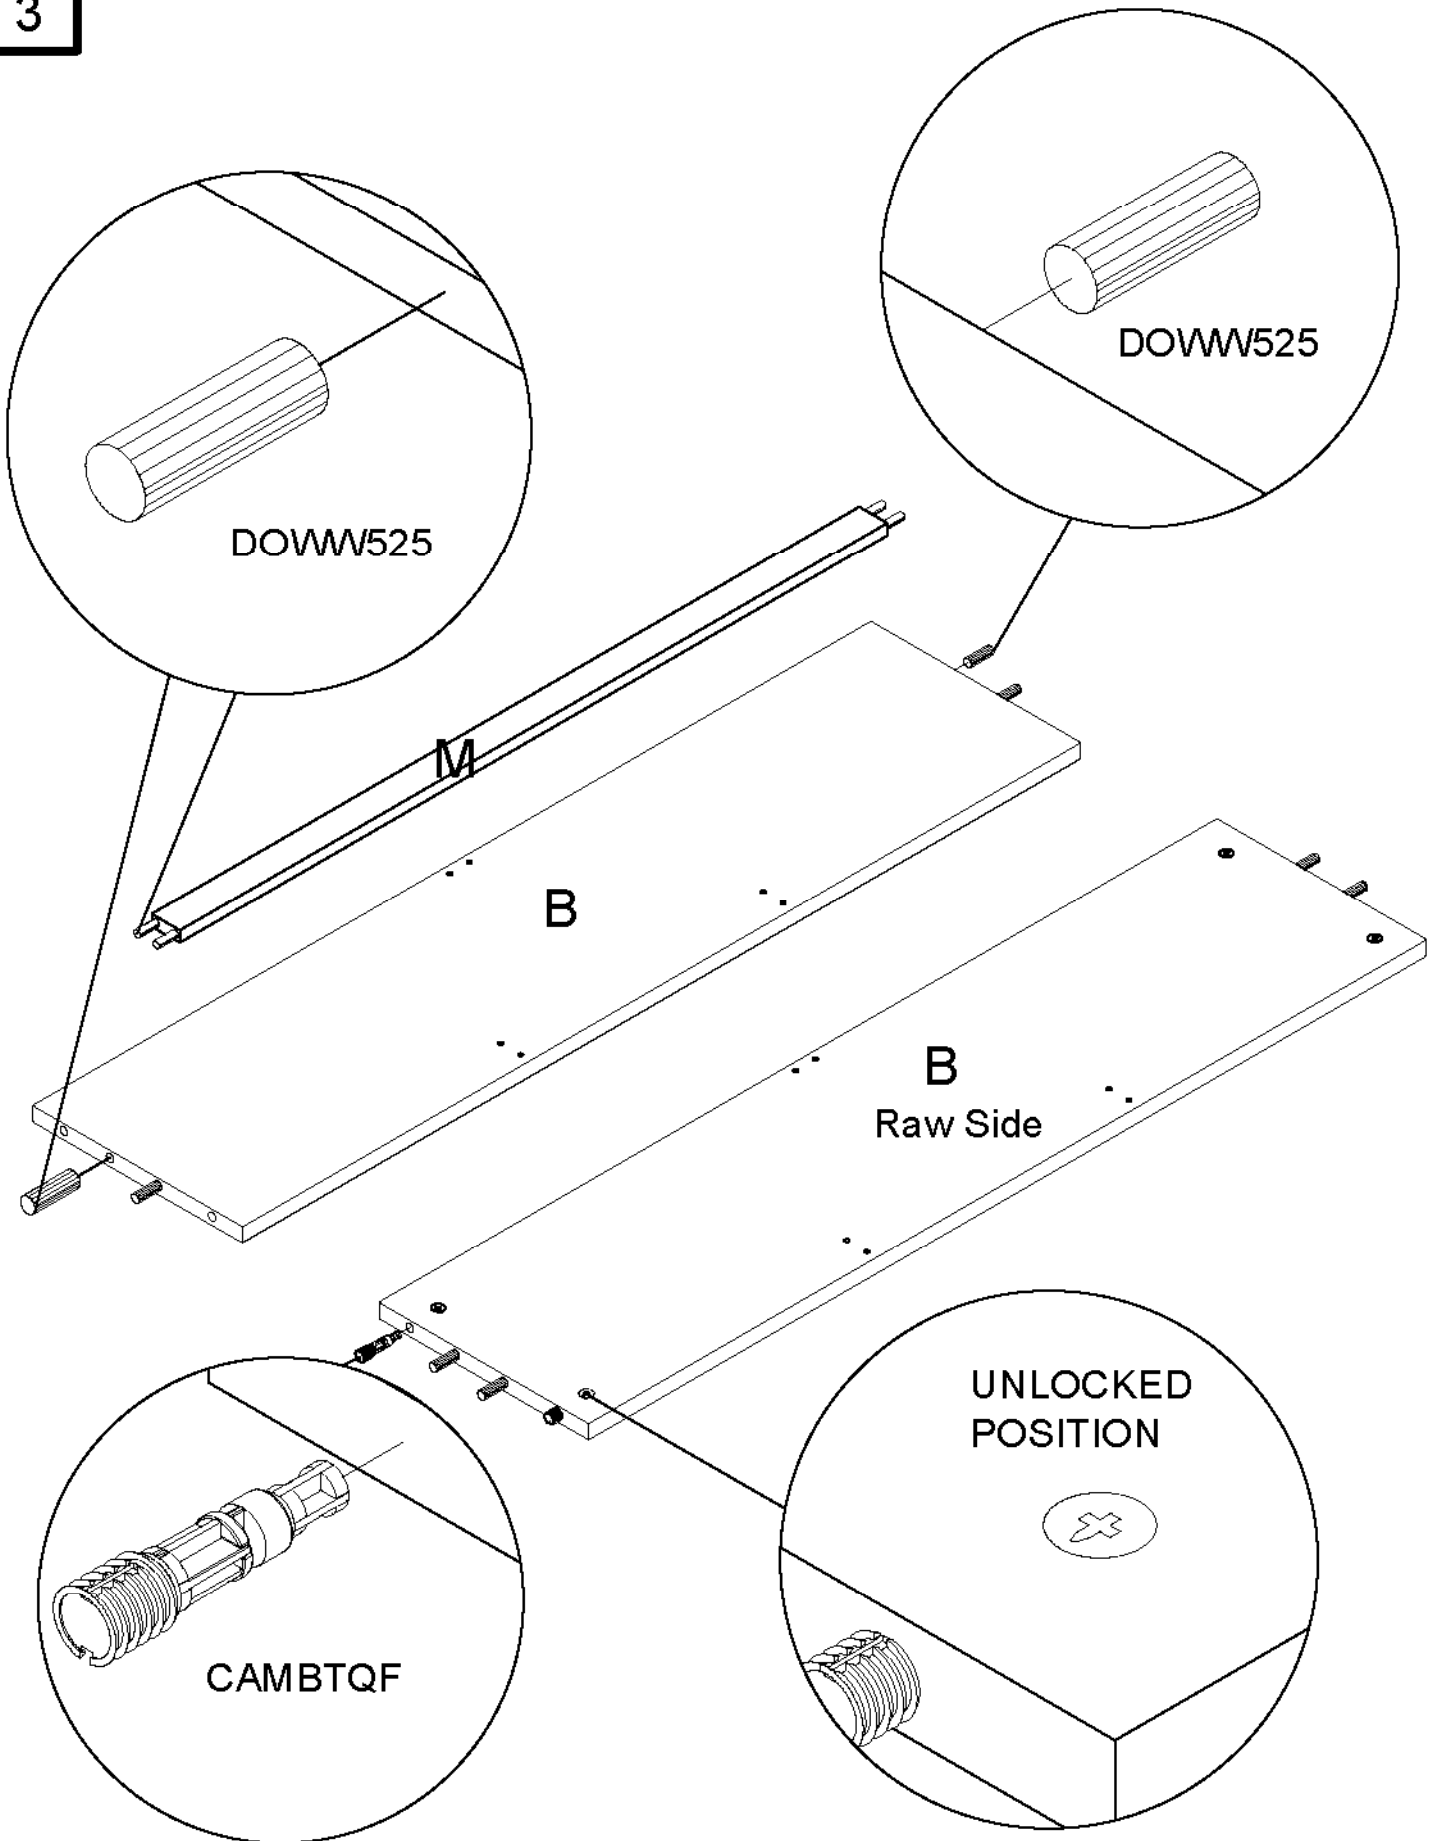




4

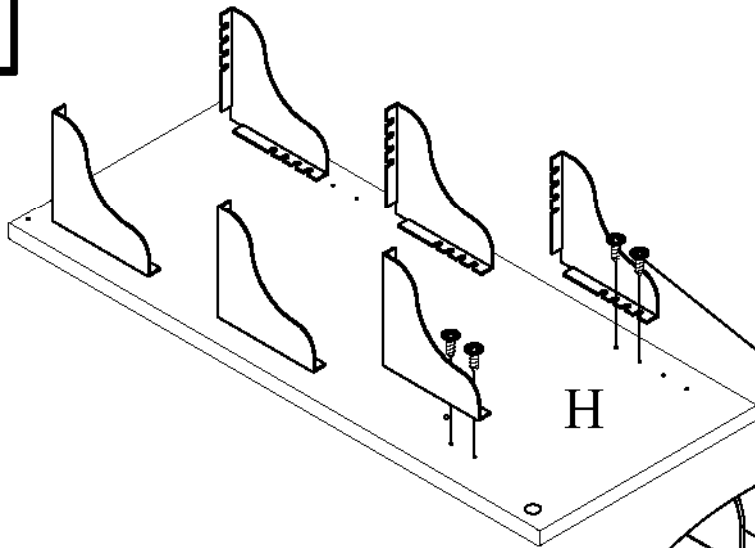 

    If you wish to use this unit for Disney cases you may move second shelf one hole up on the brackets and eliminate top shelf.

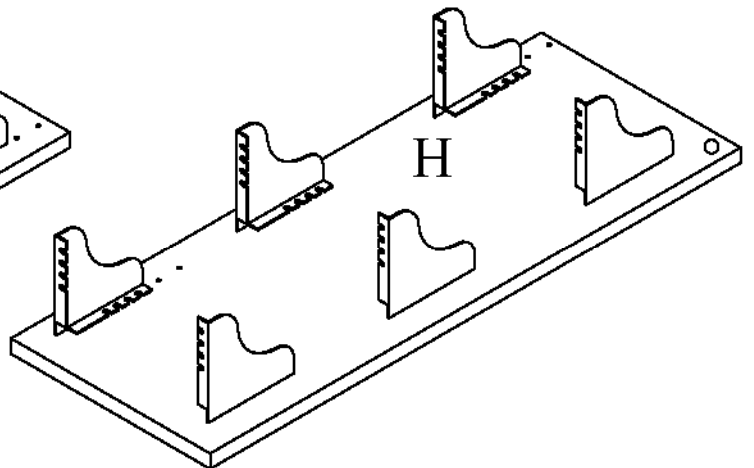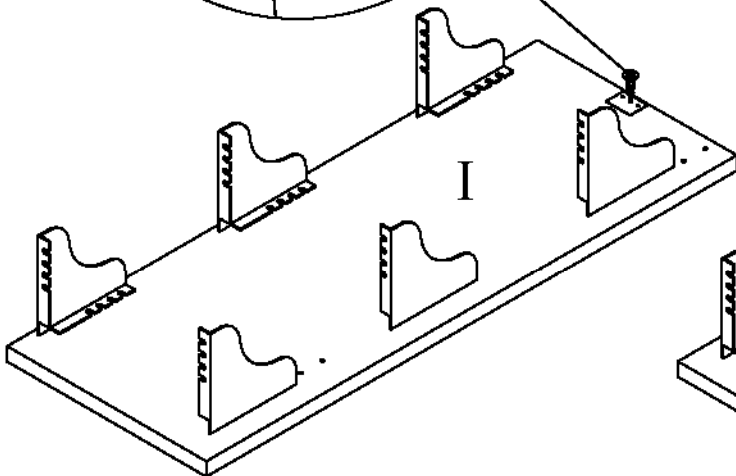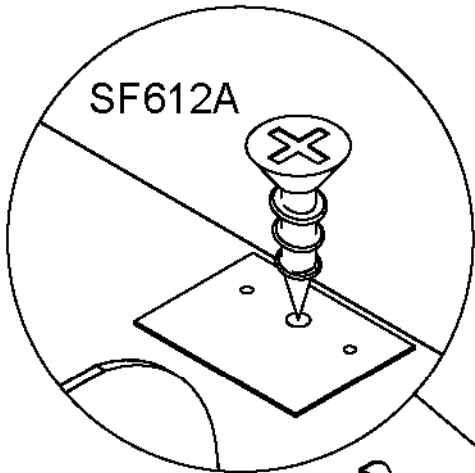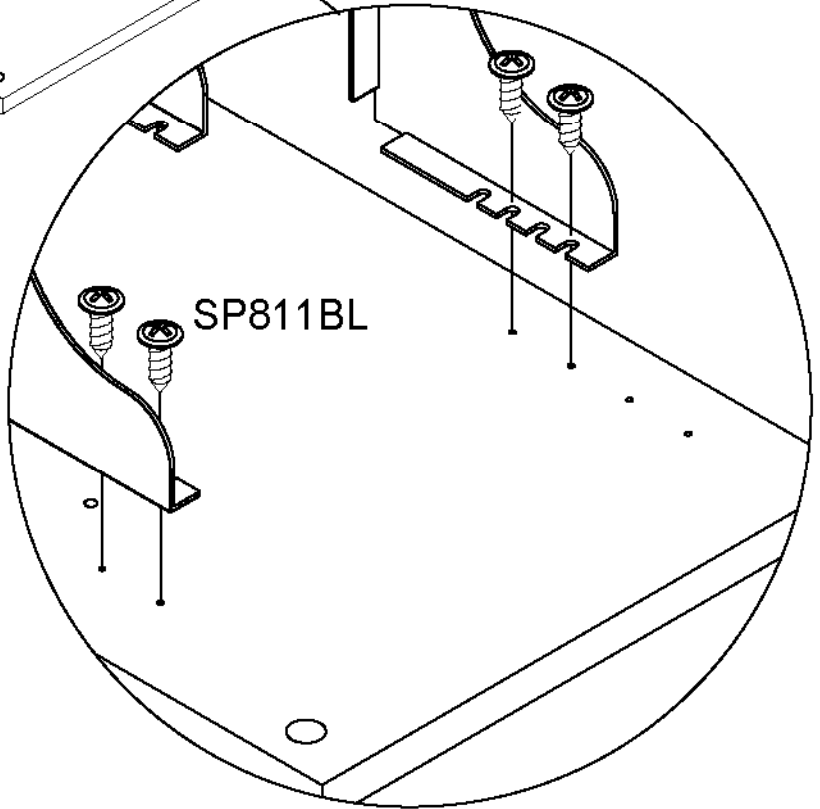


5

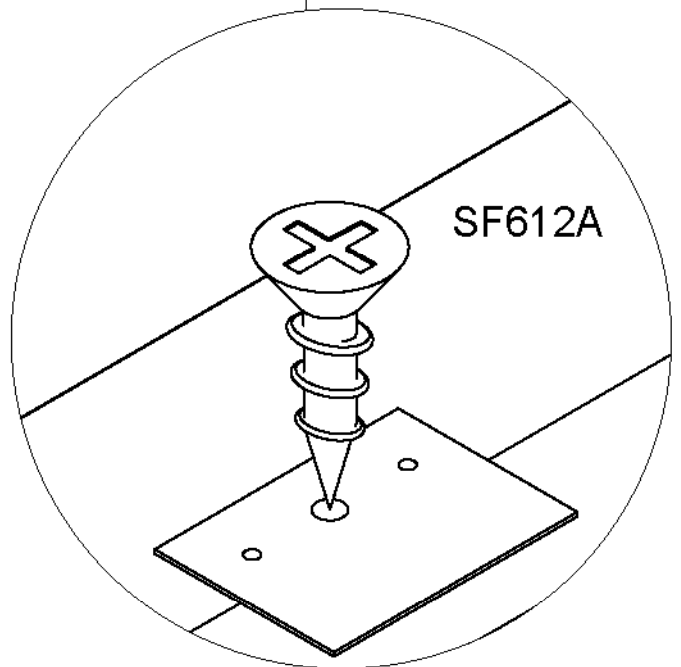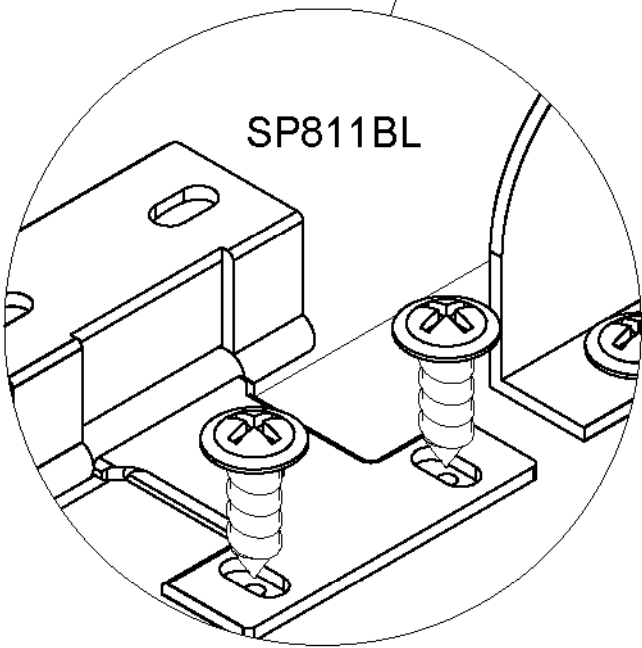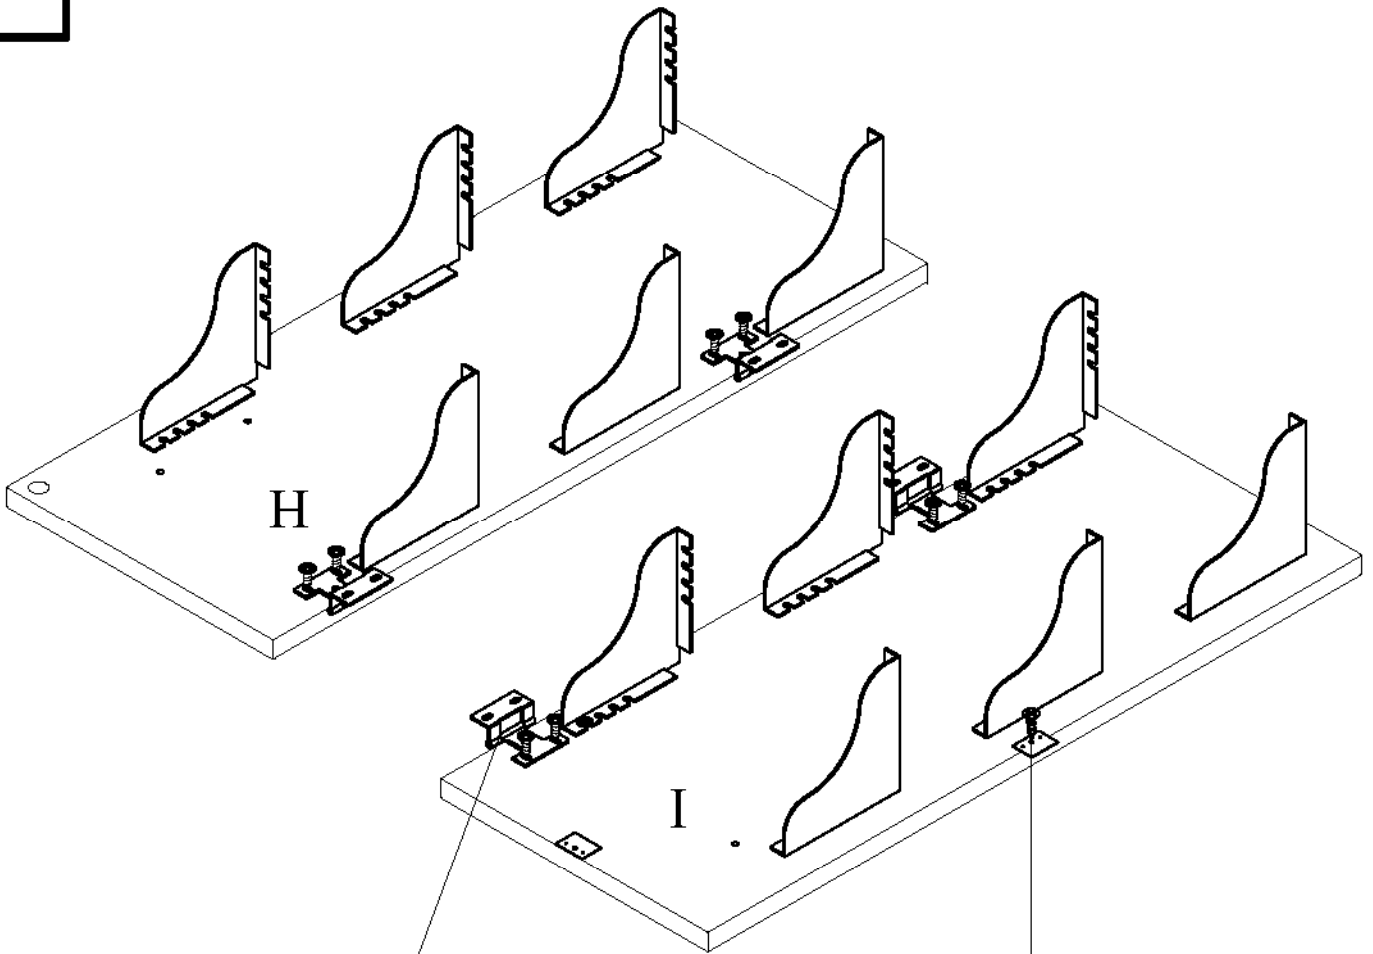   

6

 SFH845A

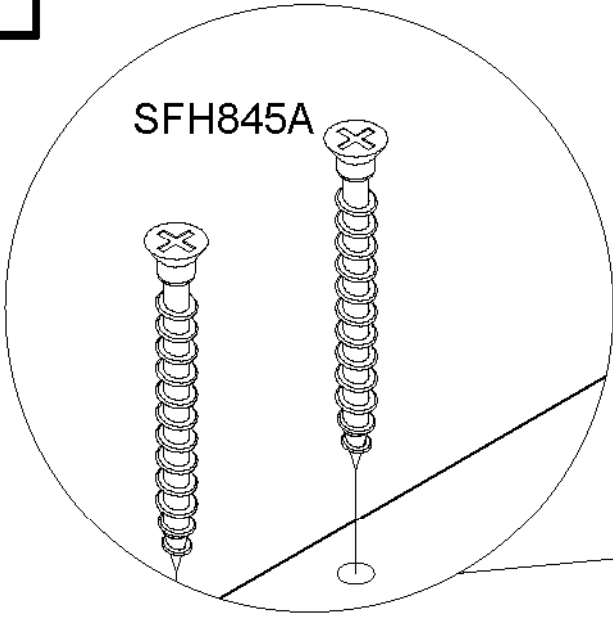

RAW SIDE

B

 
 
L

G

G

A


Turn camlocks clockwise until full stop after you connect sides L and A (slightly over 1/2 a turn to lock the bolt).

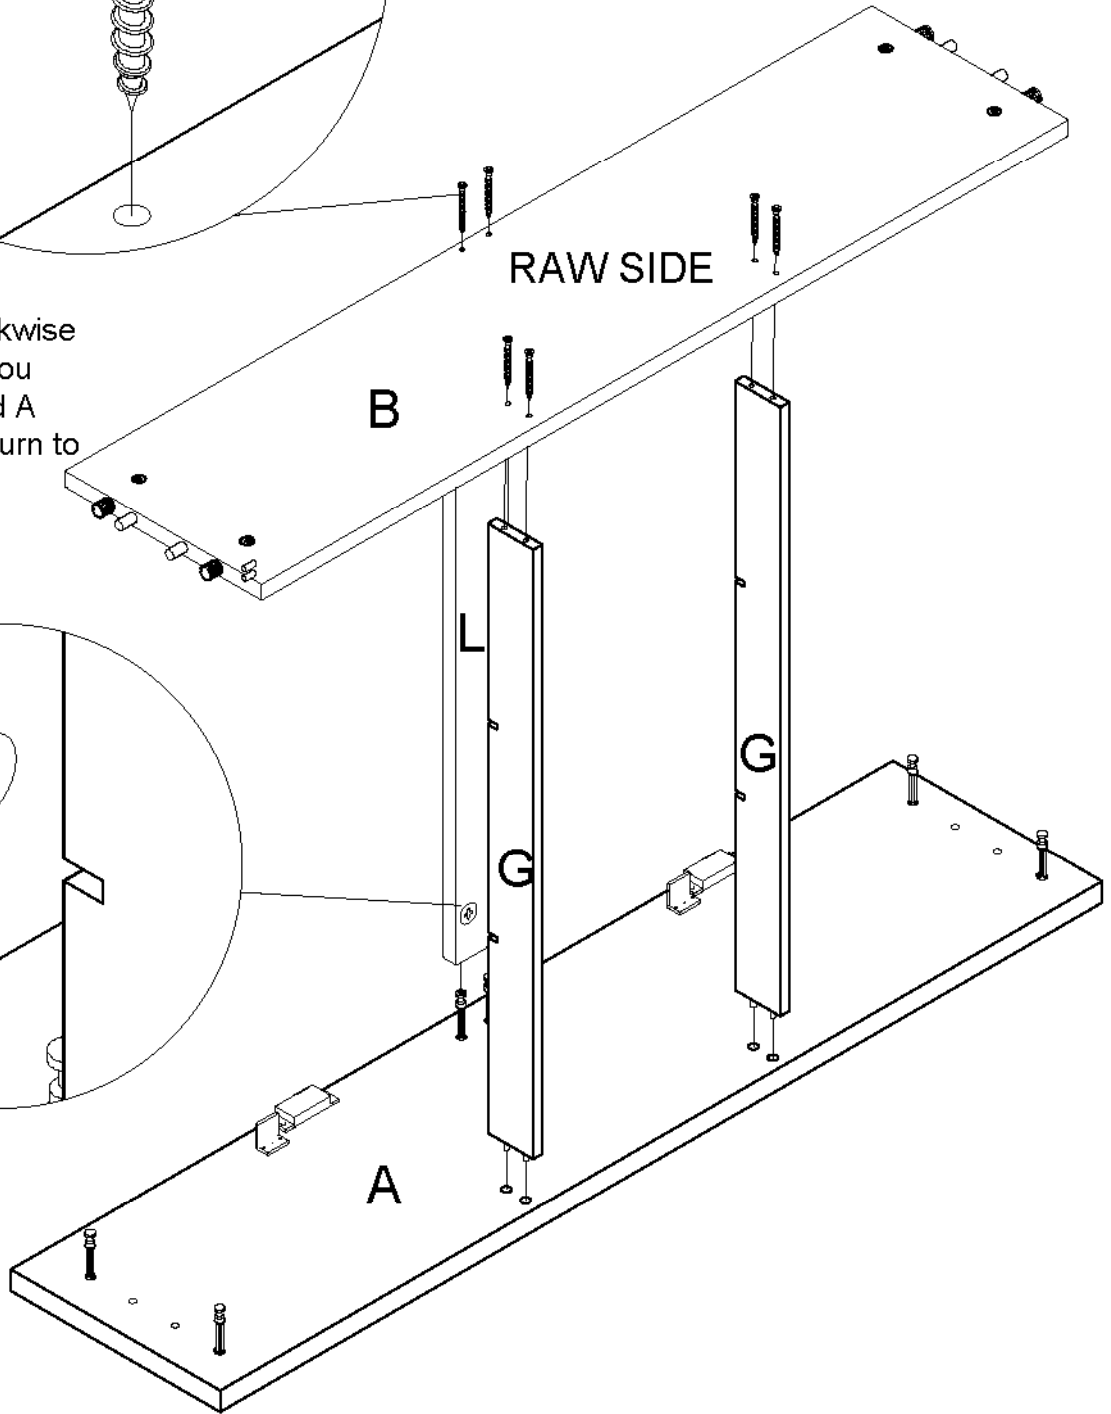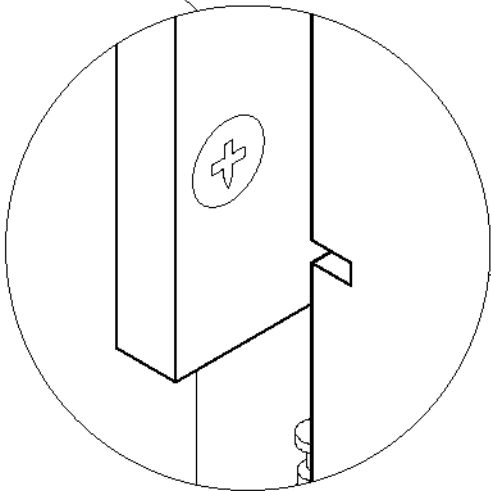

7

ATTENTION: Make sure do not turn camlocks before connecting C & B.

 
Turn camlocks clockwise until full stop after you connect parts C,D and B (slightly over 1/2 a turn to lock the bolt).

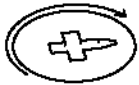

1. Push the sides (C&D) together. Make sure leave no gap between parts.


2. Lock camlocks by turning clockwise until full stop (slightly over 1/2 a turn to lock the bolt).

Laminated side of part M facing forward.

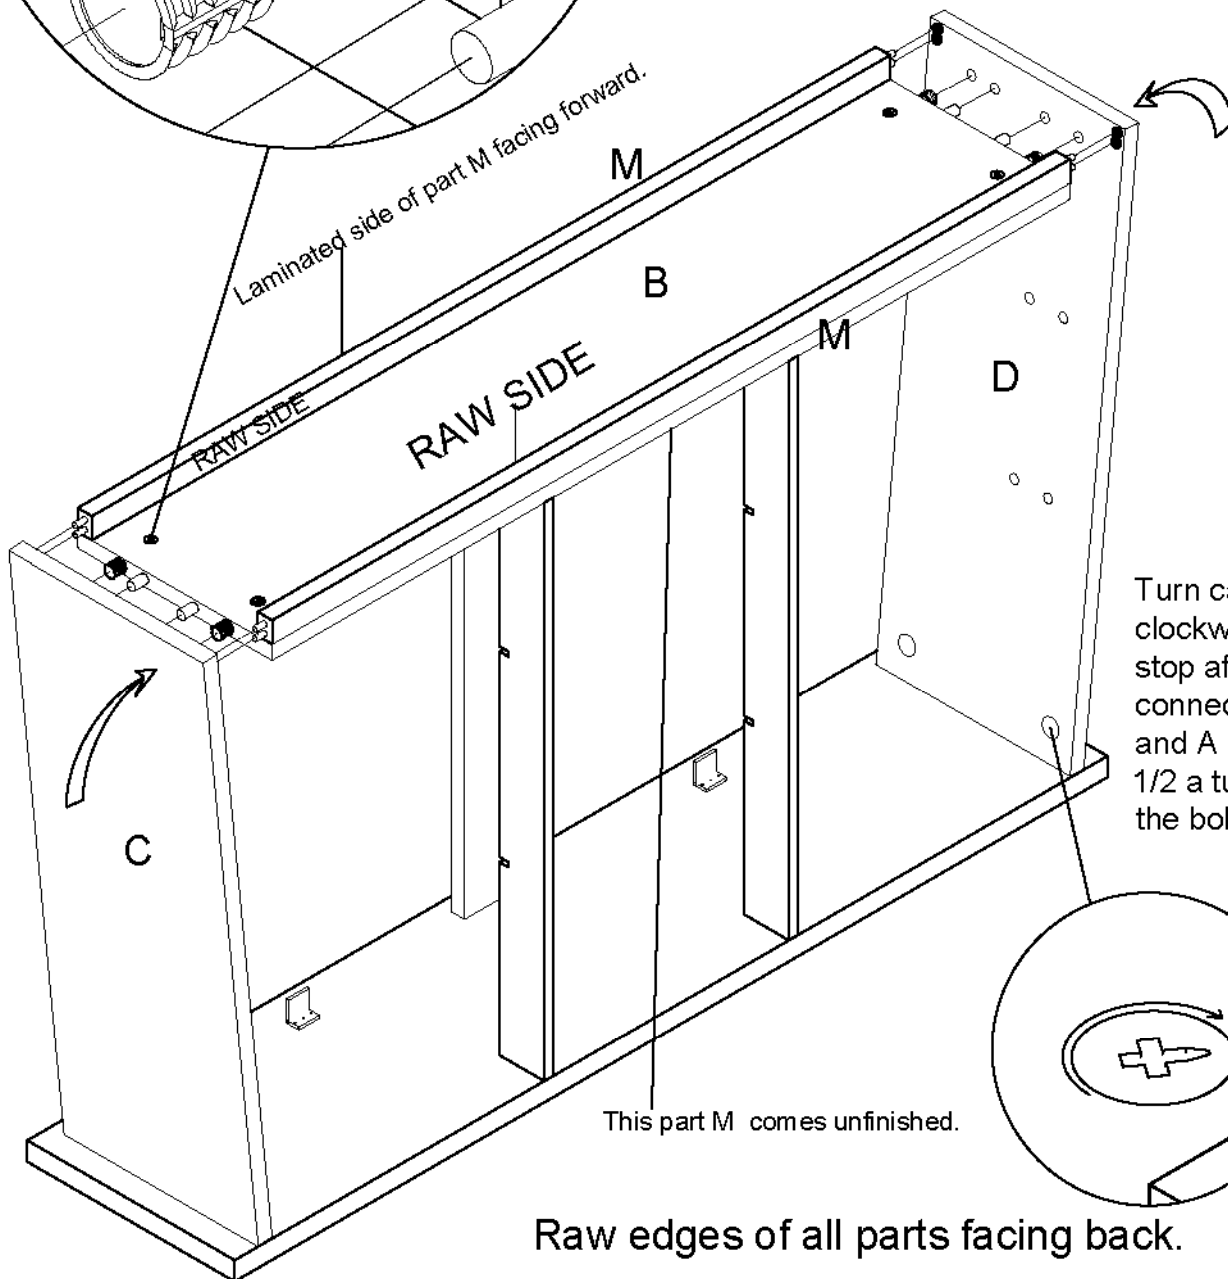


Turn camlocks clockwise until full stop after you connect sides C,D and A (slightly over 1/2 a turn to lock the bolt).

This part M comes unfinished.


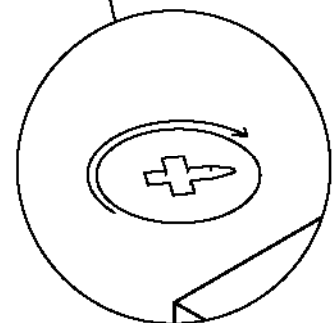


Raw edges of all parts facing back.



8

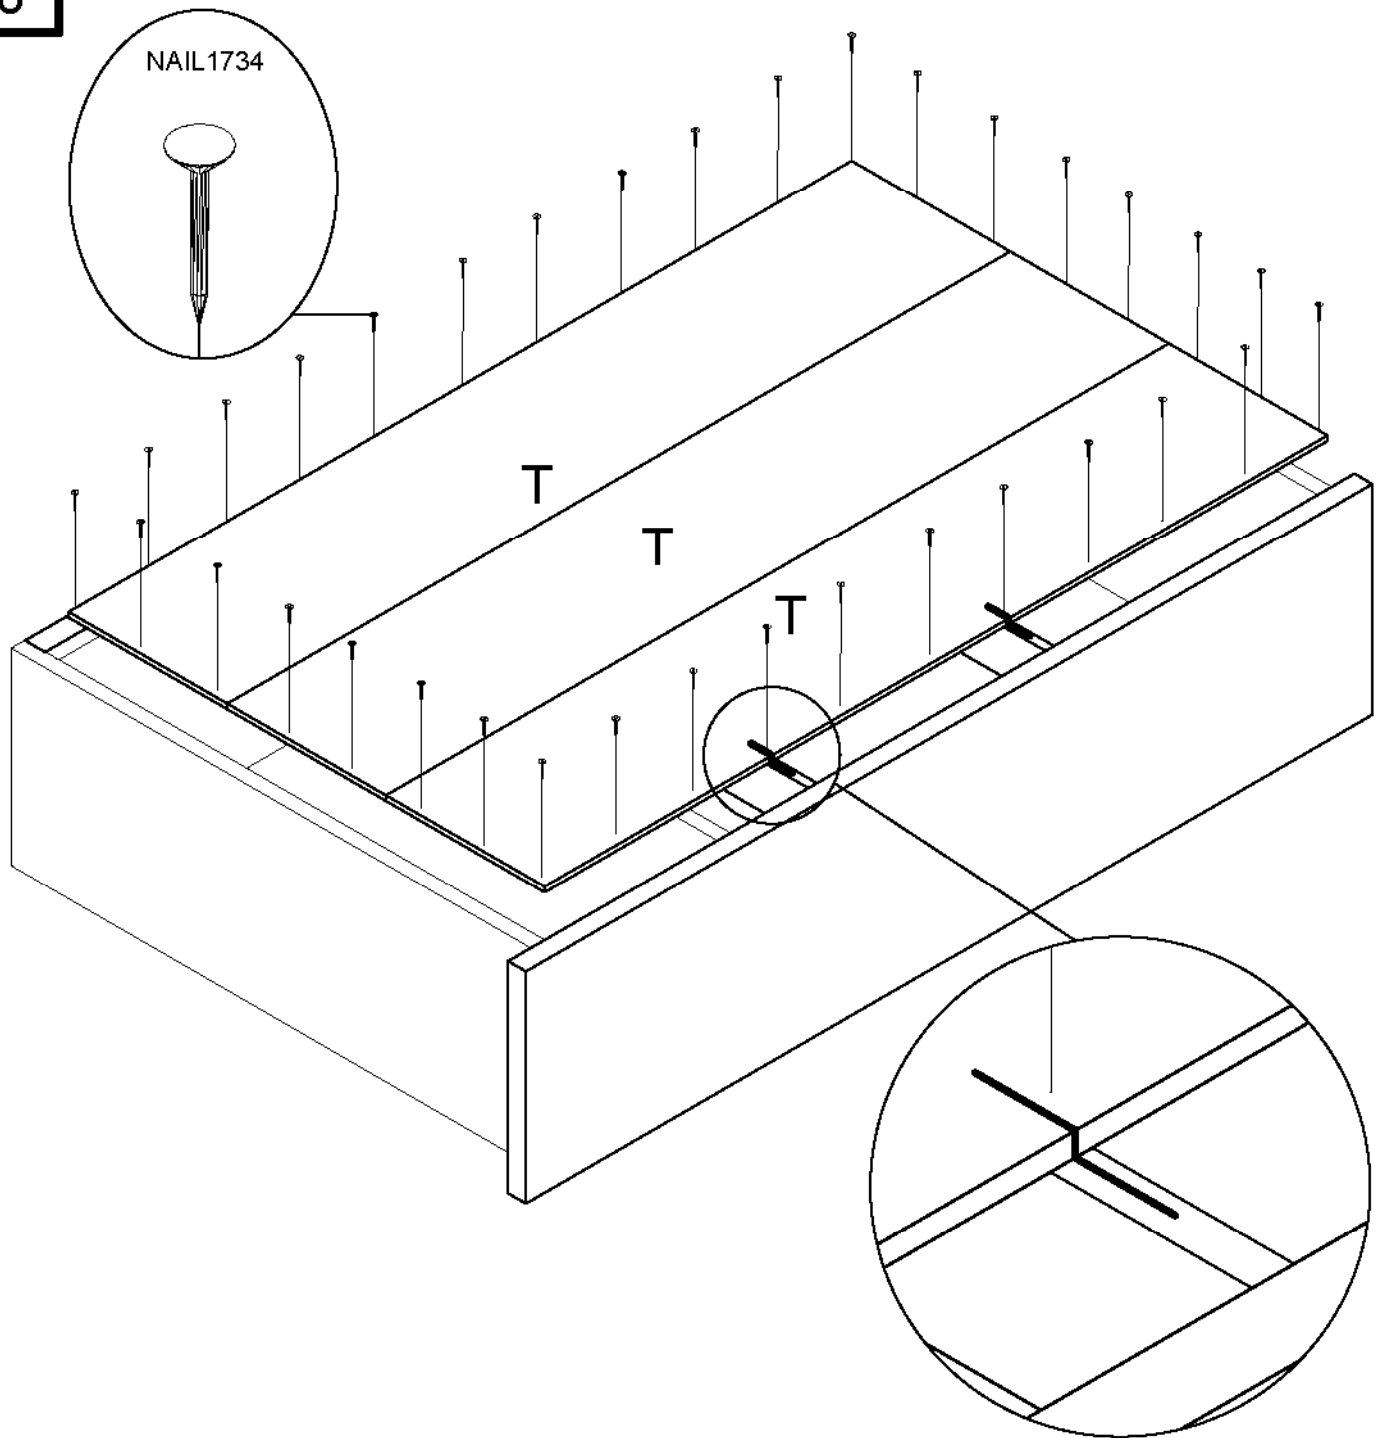





Place the unit face down. Before attempting to nail back panels (T) to the assembly, make marks with pencil or marker pen on the raw edges of panel (B) corresponding to the location of center of the edges of dividers (G). Align the back panels (T) over the unit. Make sure the assembly is square and leave equal amount of margin all around. Tack the two opposing corners of the back panel down, first using nails as shown, then the other two. Next, nail the Back panel all around with approximately 6" spacing between the nails. Make sure to keep the nails centered on the edges to avoid splitting of the boards. To complete installing the back panels (T), you will need to draw a straight line connecting the marks you made earlier on the edge of (B) panel across back panels (T). Make sure to draw the lines in between the marks made. The lines will be your guide for nailing panels (T) to dividers (G) underneath

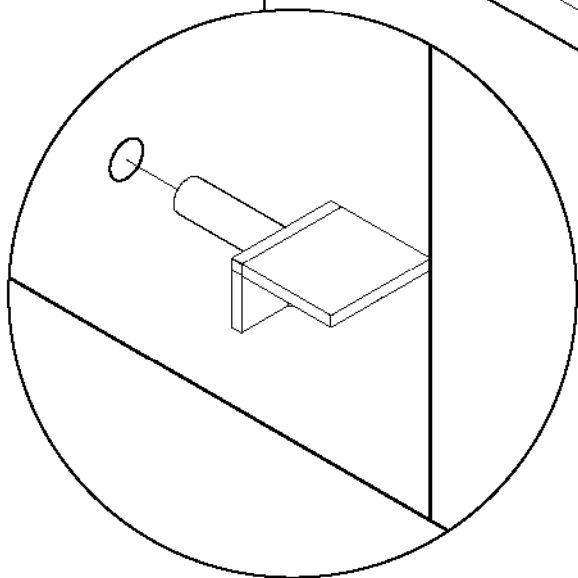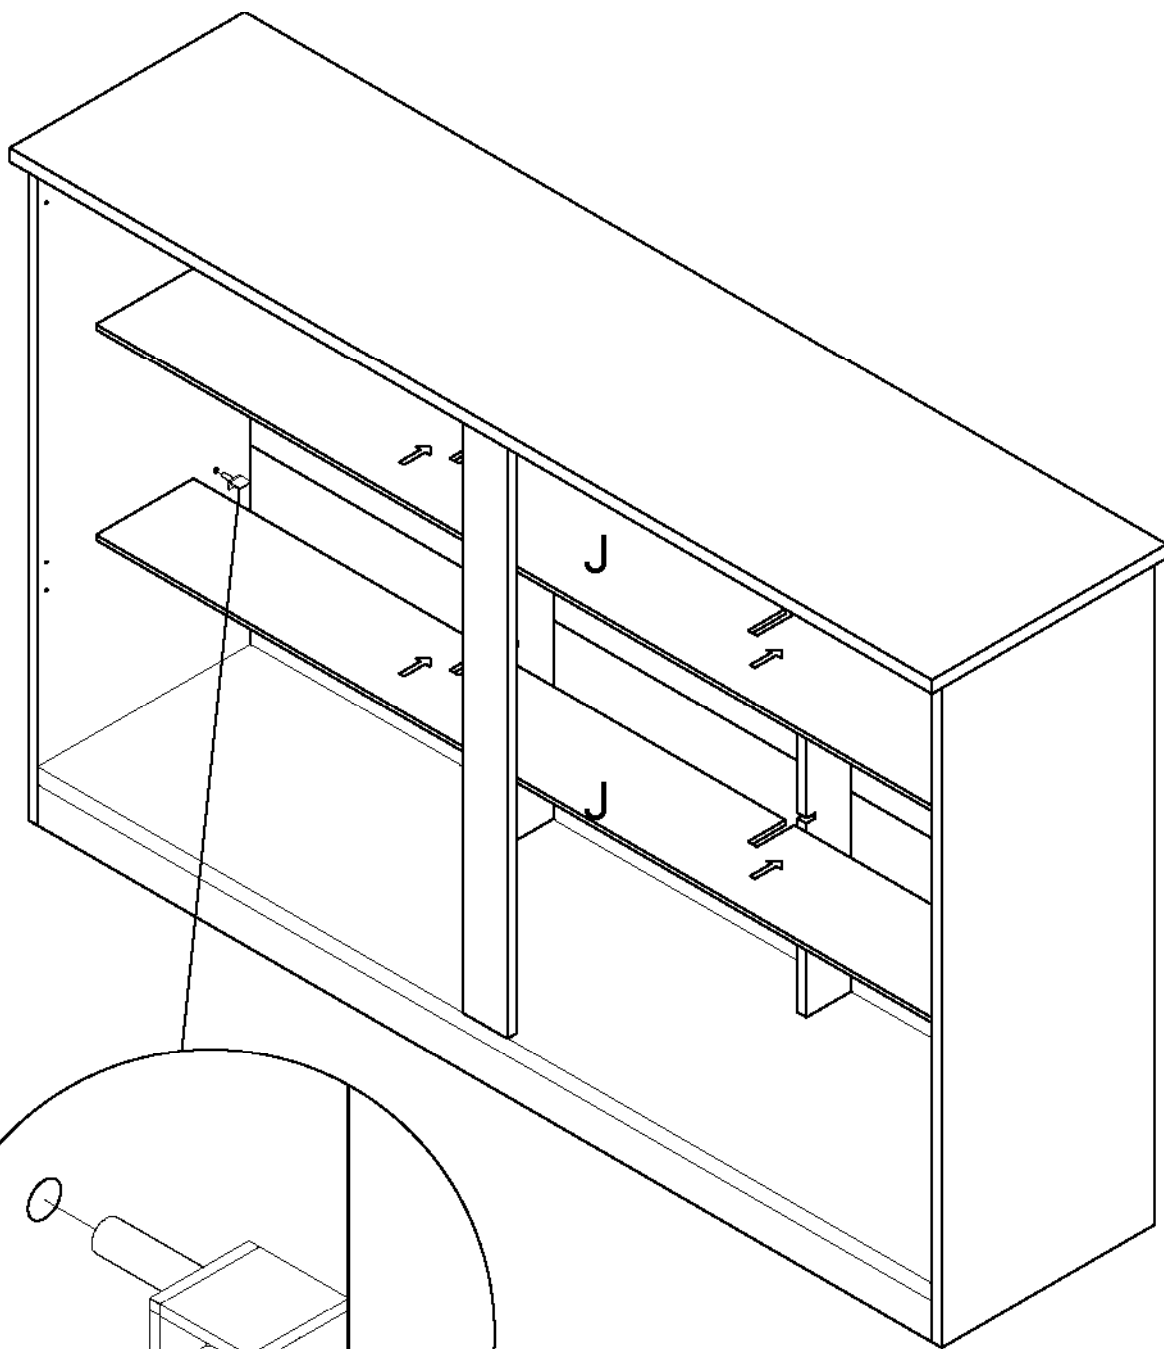

10

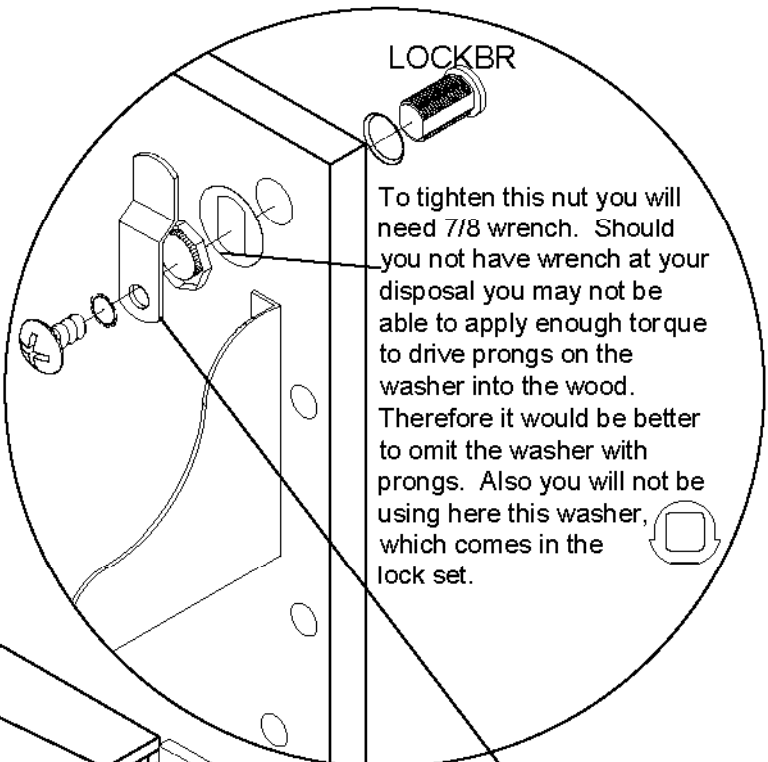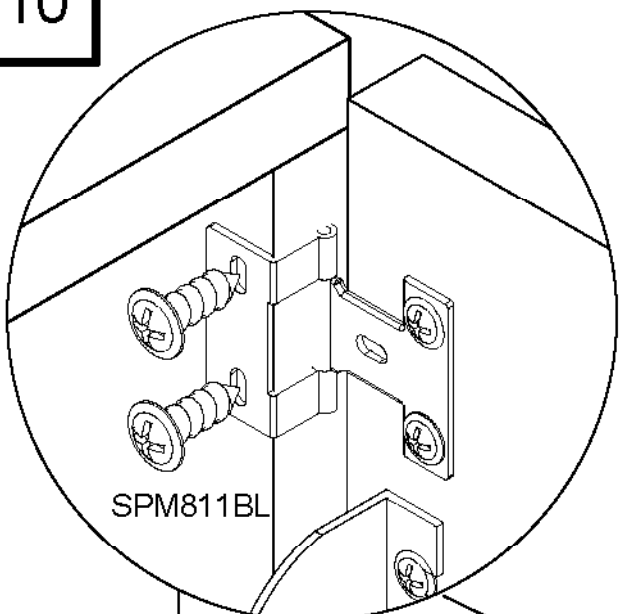




To tighten this nut you will need 7/8 wrench. Should you not have wrench at your disposal you may not be able to apply enough torque to drive prongs on the washer into the wood. Therefore it would be better to omit the washer with prongs. Also you will not be using here this washer, which comes in the lock set.

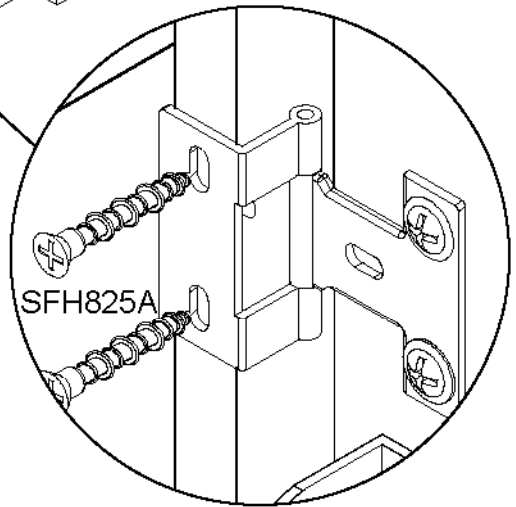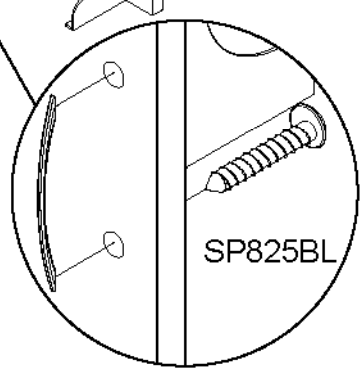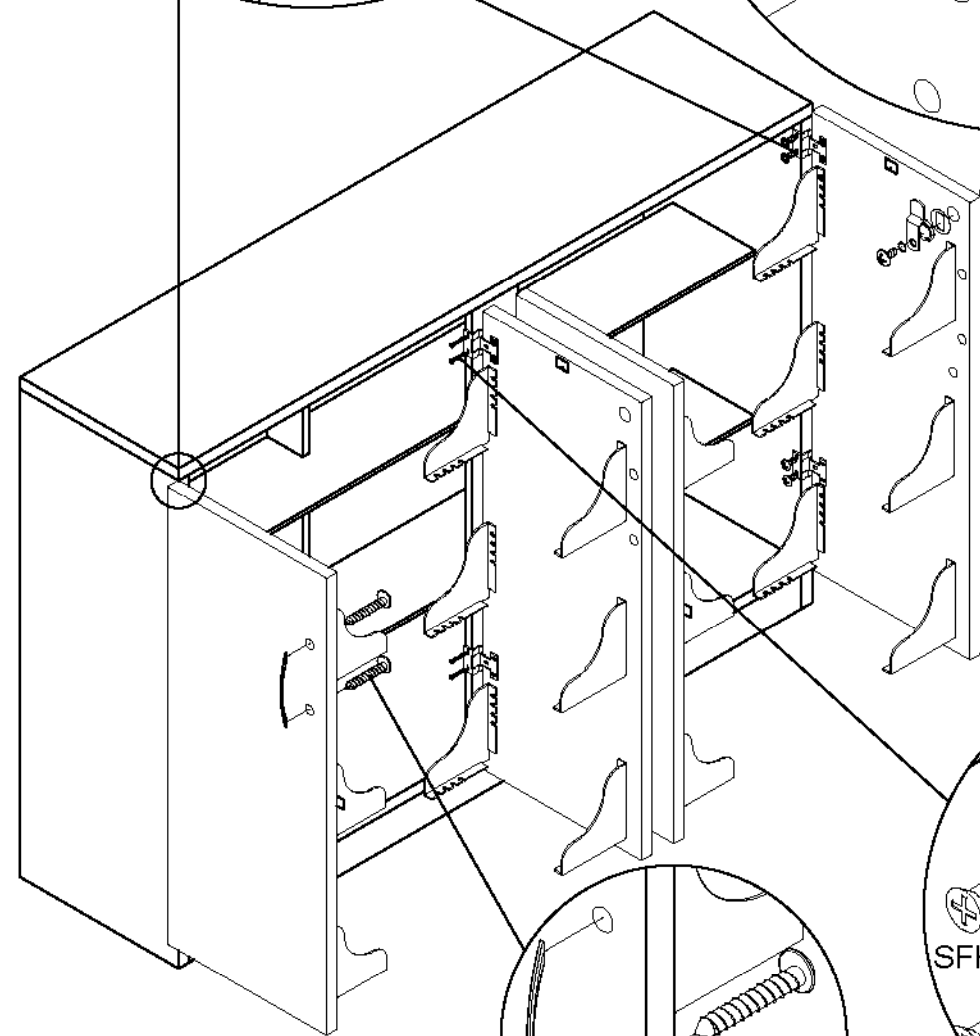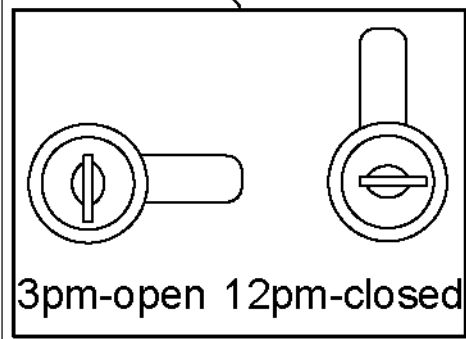

11

Apply one drop of Super Glue Gel in two locations on each plastic shelf support bracket. Place shelf F on the brackets with finished side facing up and laminated edge facing out. Press down on the shelves and allow two hours for glue to set, before you can install retaining clips and start using the cabinet.

NOTE: Make sure to load back shelves before you start loading door shelves.

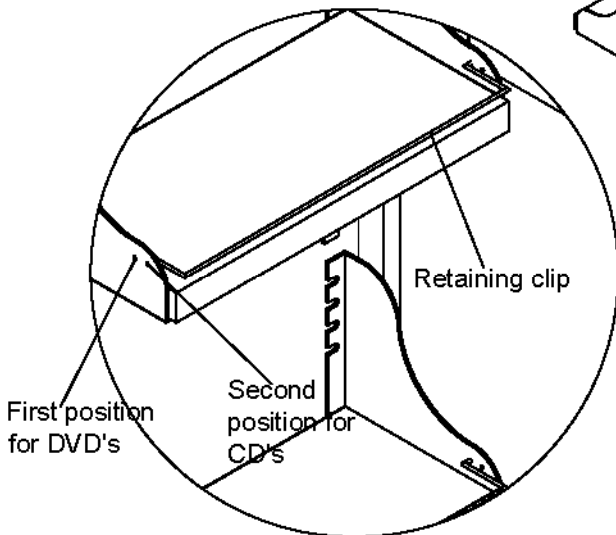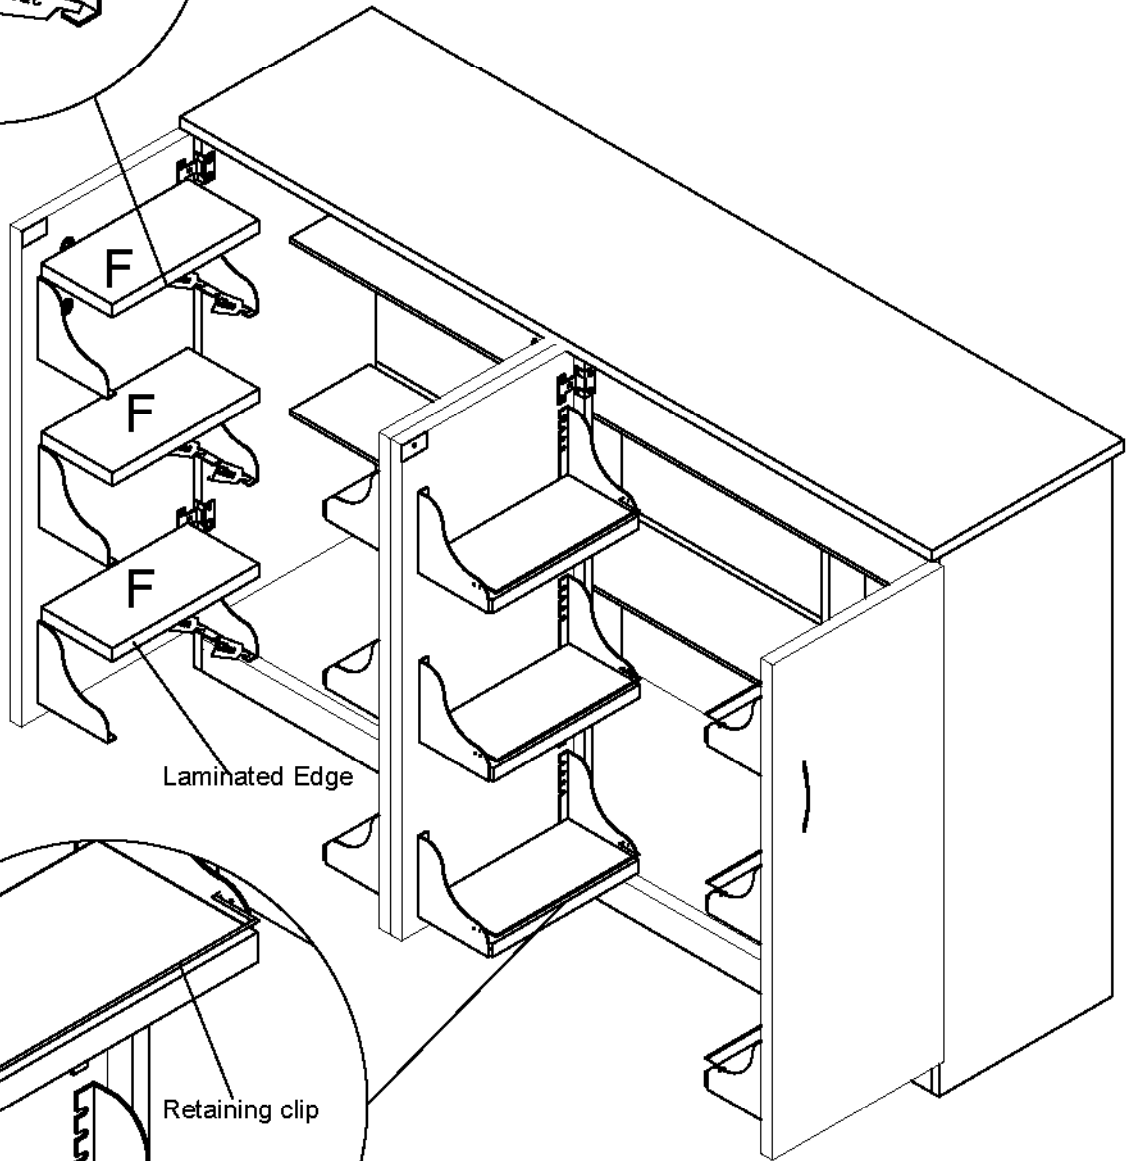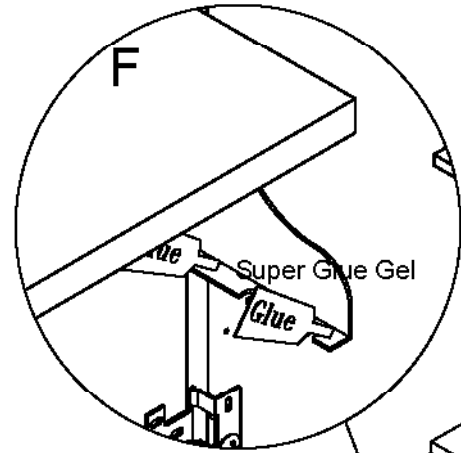

Brackets have two locations for retaining clips to fit CD s and DVD/VHS.