HCPEEL

Hand Crank Peeler Assembly & Operating Instructions



READ ALL INSTRUCTIONS AND WARNINGS BEFORE USING THIS PRODUCT.

This manual provides important information on proper operation & maintenance. Every effort has been made to ensure the accuracy of this manual. These instructions are not meant to cover every possible condition and situation that may occur. We reserve the right to change this product at any time without prior notice.

IF THERE IS ANY QUESTION ABOUT A CONDITION BEING SAFE OR UNSAFE, DO NOT OPERATE THIS PRODUCT!

HAVE QUESTIONS OR PROBLEMS? DO NOT RETURN THIS PRODUCT TO THE RETAILER - CONTACT BUFFALO TOOLS.

If you experience a problem or need parts for this product, visit our website http://www.buffalotools.com or call our customer help line at **1-888-287-6981**, Monday-Friday, 8 AM - 4 PM Central Time. A copy of the sales receipt is required.

FOR CONSUMER USE ONLY - NOT FOR PROFESSIONAL USE.

KEEP THIS MANUAL, SALES RECEIPT & APPLICABLE WARRANTY FOR FUTURE REFERENCE.

TABLE OF CONTENTS

RECOGNIZE SAFETY SYMBOLS, WORDS AND LABELS	2
GENERAL PRODUCT SPECIFICATIONS	2
PACKAGE CONTENTS	
ASSEMBLY	
MAINTENANCE	4

RECOGNIZE SAFETY SYMBOLS, WORDS AND LABELS

What You Need to Know About Safety Instructions


Warning and Important Safety Instructions appearing in this manual are not meant to cover all possible conditions and situations that may occur. Common sense, caution and care must be exercised when assembling or using this product.

Always contact your dealer, distributor, service agent or manufacturer about problems or conditions you do not understand.



This is a safety alert symbol. It is used to alert you to potential personal injury hazards. Obey all safety messages that follow this symbol to avoid possible injury or death.

GENERAL PRODUCT SPECIFICATIONS

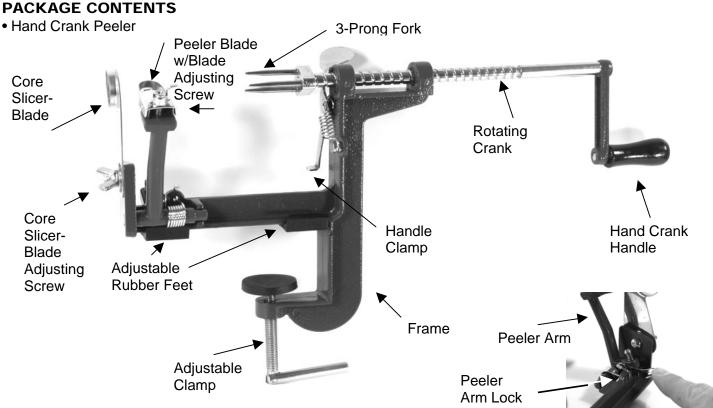

KEEP THIS MANUAL, SALES RECEIPT & APPLICABLE WARRANTY FOR FUTURE REFERENCE. READ ALL INSTRUCTIONS AND WARNINGS BEFORE USING THIS

PRODUCT. When unpacking, check to make sure all parts listed are included. If any parts are missing or broken, please call Customer Service at 1-888-287-6981.

ASSEMBLY

COMMON SENSE AND CAUTION ARE FACTORS WHICH CANNOT BE BUILT INTO ANY PRODUCT.
THESE FACTORS MUST BE SUPPLIED BY THE OPERATOR.

A WARNING

Keep the work area clean and well lit. A cluttered work area may cause accidents.

Never allow children to use this product without responsible adult supervision.

A WARNING

BLADES ARE SHARP! Wear gloves to protect your hand. Stay alert. Do not use this product when impaired by medicine, drugs, or alcohol. Watch what you are doing & use common sense for your safety.

▲ WARNING

Before using, wash all parts with warm soapy water. Use care when handling the product and when cleaning the product to prevent injury.



Figure 1

Figure 2



Figure 3



Figure 4

- 1. Attach the Hand Crank Handle with the screw. (Figure 1)
- 2. Secure the frame using the Adjustable Clamp to a flat, level surface. Do not overtighten. Position the Adjustable Rubber Feet to protect the countertop. (Figure 2)
- 3. Press the Handle Clamp to release/secure the Rotating Crank. (Figure 3)
- 4. Position the apple stem against the 3 Prong Fork. Firmly press until it is fully seated and position the apple against the Core Slicer-Blade. (Figure 4)
- 5. Rotate the Hand Crank to begin peeling and coring.

TIPS







Figure 6



Figure 7



Figure 8



Figure 9

- 6. To adjust the thickness of the Peel, rotate the Blade Adjusting Screw and reposition the Peeler Blade. (Figure 5)
- 7. If you choose to NOT to peel position the Peeler Arm away from the base and lock into position with the Peeler Arm Lock. (Figure 6)
- 8. Return the Peeler Arm to normal position to resume peeling. (Figure 7)
- 9. If you choose to NOT core, the Core Slicing Blade can be rotated away from the base. Adjust the Core Slicer-Blade Adjusting Screw to release the blade. CORE BLADE IS SHARP! Use caution when adjusting the Core Blade. (Figure 8)
- 10. When you are finished rotating the Hand Crank, the core will remain on the 3-Prong Fork. Remove the core and discard. (Figure 9)

MAINTENANCE

A WARNING

CORE AND BLADES ARE SHARP! After using, wash all parts with warm soapy water. Use care when handling the product and when cleaning the product to prevent injury.

Mild household cleaning products can be used for cleaning.