




www.reposechair.com

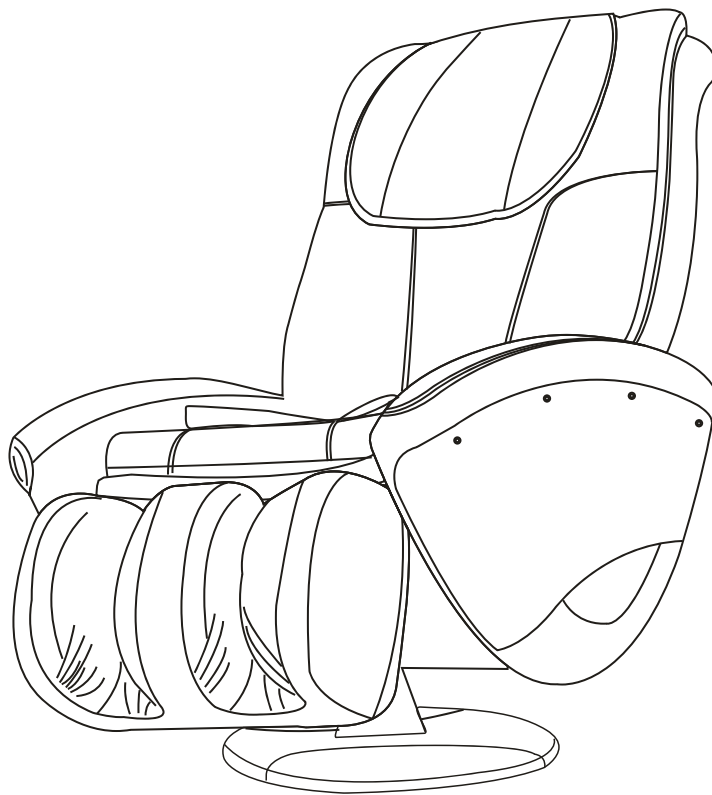

R200 Massage Lounger

**R200
USER MANUAL**

Thank you for purchasing a REPOSE R200 massage lounger. Before using, please read all INSTRUCTIONS carefully and pay special attention to precautions to avoid any improper or unsafe use.

Please keep this USER MANUAL for future reference.

CONTENTS

SAFETY PRECAUTIONS	1
Environment	1
Unsuitable users	1
Control panel instructions	1
Terms of use	1
Unsafe/Unsuitable conditions	2
Assembly and maintenance	2
Power cord/plug instructions	2
CHAIR COMPONENTS AND FUNCTIONS	3
Exterior components	3
Control panel functions	4
Internal components	5
PREPARING FOR USE	6
Assembly	6
Storage	7
Floor protection	7
Back cushion and pillow	7
Swiveling	8
Leg rest/backrest adjustment	8
CARE AND MAINTENANCE	9
TROUBLE SHOOTING	10
SPECIFICATIONS	11

SAFETY PRECAUTIONS

Environment

- ▶ Do not use the massage chair in damp or dusty environment to avoid electric shock or machine malfunction.
- ▶ Do not use massage chair in temperatures under 40 degrees Fahrenheit or above 104 degrees Fahrenheit.
- ▶ Do not store the massage chair outdoors.
- ▶ Please place the massage chair on a level surface.

Caution

- ▶ If the massage chair is stored in an extremely cold or hot environment you must wait one hour before using after moving the chair into an acceptable environment or the massage chair could be damaged.

Unsuitable Users

People who suffer from the following conditions should consult with their doctors before using:

- ▶ Currently receiving treatment for injuries, illness or abnormalities
- ▶ Malignant tumor patients
- ▶ Pregnant or menstruating women
- ▶ Acute patients
- ▶ Cardiac problems
- ▶ Patients with osteoporosis
- ▶ Patients who are using electronic medical instruments imbedded in the body, such as cardiac pacemaker, etc.

Control panel instructions

- ▶ Do not operate the control panel with wet hands.
- ▶ Do not put heavy objects on the control panel.
- ▶ Do not allow the control panel to contact water or other liquids.

Terms of use

- ▶ Do not use the massage chair simultaneously with another medical apparatus or an electric blanket.
- ▶ Do not use the massage chair within half an hour after meals.
- ▶ To avoid any injury, please keep children or pets away from the massage chair.
- ▶ Do not place heavy objects on any part of the massage chair to avoid causing any damage to the machine or injury to someone using the chair.
- ▶ Please do not continuously massage a specific part of the body for over 5 minutes.
- ▶ The massage chair should be only used by one person at one time.
- ▶ A person whose weight is over 264 lbs is not acceptable.
- ▶ It is prohibited for minors to use this massage chair.
- ▶ Those with mental or physical disabilities should not use this massage chair without supervision.

SAFETY PRECAUTIONS



CAUTION

- ▶ During massage, please make sure the massage roller is close to the spine on both sides to avoid causing any discomfort.
- ▶ Do not fall asleep when the massage chair is operating.
- ▶ Do not use the massage chair when you are ill or intoxicated.
- ▶ The massage rollers should only make contact with your back, do not allow them to make contact with other parts of your body.
- ▶ Do not use the massage chair for more than 20 minutes each session, and do not massage a specific area of your body for more than 5 minutes.
- ▶ Before use, please be sure to remove your watch, bracelet and other accessories, and be sure to remove your mobile phone, keys, knife, and other items from your pockets.

Unsafe/Unsuitable conditions

Please stop using this massage chair, shut the power supply off and disconnect the power plug from the wall outlet if any of the following occur:

- ▶ Water or other liquids come into contact with the massage chair or control panel.
- ▶ Any part of the chair is damaged or torn or if any interior components are exposed.
- ▶ If you experience discomfort or feel abnormal or severe pain during massage.
- ▶ Any abnormalities occur during massage chair operation.
- ▶ Power shuts off suddenly.
- ▶ There is a thunderstorm in the area.

Assembly and maintenance


- ▶ Do not remove the fabric covering the massage components or touch the interior components of the massage chair in order to avoid electricity shock or causing malfunctions.
- ▶ The massage chair can only be maintained by a professional maintenance person, please do not dismantle or attempt to perform maintenance on the massage chair yourself.

Power cord/plug instructions

- ▶ Be sure the power from your wall outlet meets the electrical specifications of the massage chair.
- ▶ Do not pull out or plug the power supply cord with wet hands in order to avoid electrical shock.
- ▶ When disconnecting the power supply cord, please be sure to hold the plug instead of the power supply cord.
- ▶ The timer function can make the massage chair stop automatically, but please make sure to shut off the power after use.
- ▶ Please make sure the power supply cord is not placed under heavy objects.
- ▶ If the power supply cord is damaged, please stop using the massage chair immediately and turn off the power supply switch, and then disconnect the power supply cord from the wall outlet and contact customer service personnel.


CHAIR COMPONENTS AND FUNCTIONS

Exterior components

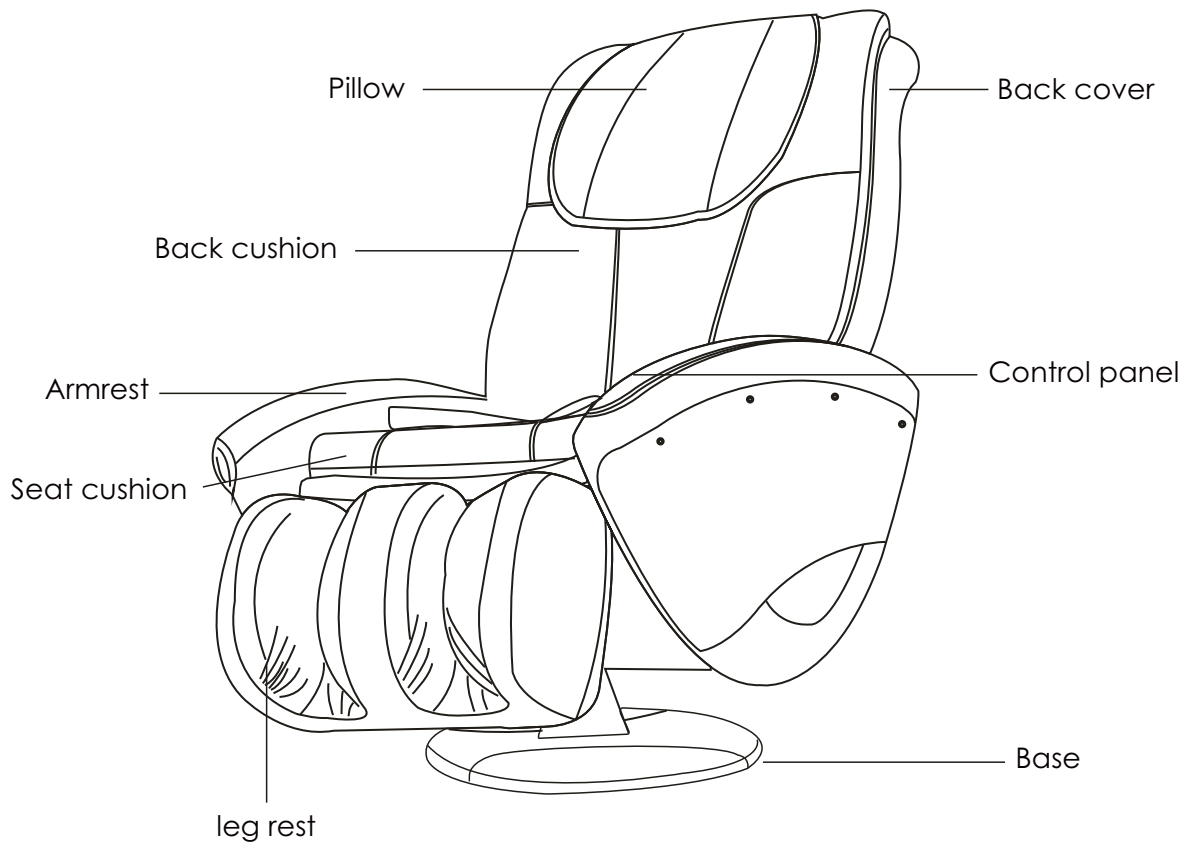

NAME AND FUNCTION OF EACH PART

Control panel functions

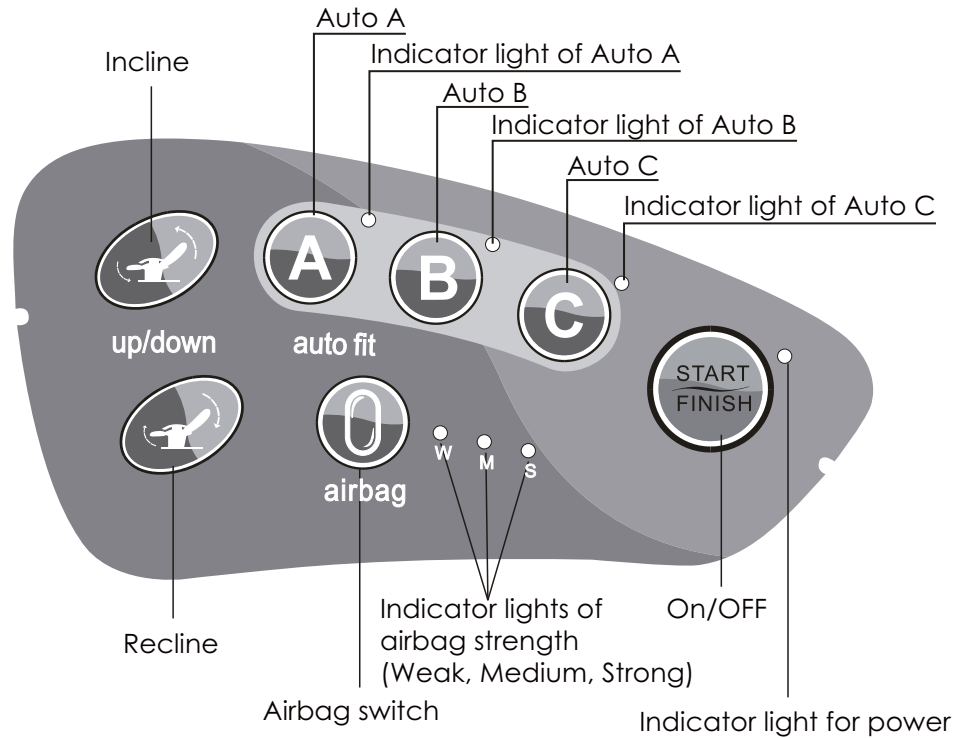


Incline adjustment

When pressing " "button, the backrest will ascend, while the leg rest will descend. When they are adjusted to the limit positions, the massage chair will emit a series of warning beeps. A beep will be heard each time an adjustment button is pressed.



Recline adjustment

When pressing " "button, the backrest will ascend, while the leg rest will ascend. When they are adjusted to the limit positions, the massage chair emits a series of warning beeps. A beep will be heard each time an adjustment button is pressed.



Automated programs: Auto A, Auto B and Auto C. The indicator light will be illuminated, only when its corresponding automated program is running. (The A, B and C automated buttons can be turned on or off separately.



Airbag switch

There are four airbag options that can be selected: Weak, Medium, Strong and off. Their corresponding indicator lights are: Weak, Medium and Strong. No light will be illuminated when the airbag function is turned off.



Start/Finish

The indicator light for the power will be illuminated during normal massage chair operation. The indicator light will flash when the massage chair is in standby mode.

CHAIR COMPONENTS AND FUNCTIONS


Internal components

The massage mechanism in the backrest has 6 rollers that move vertically between the lower and upper back performing kneading and tapping massages that simulate "Shiatsu" style massages.

Airbags inflate and deflate in the seat cushion providing a thigh massage.


Airbags inflate and deflate in the leg rest to provide a calf massage.

The swivel mechanism allows the massage chair to rotate up to 60 degrees.

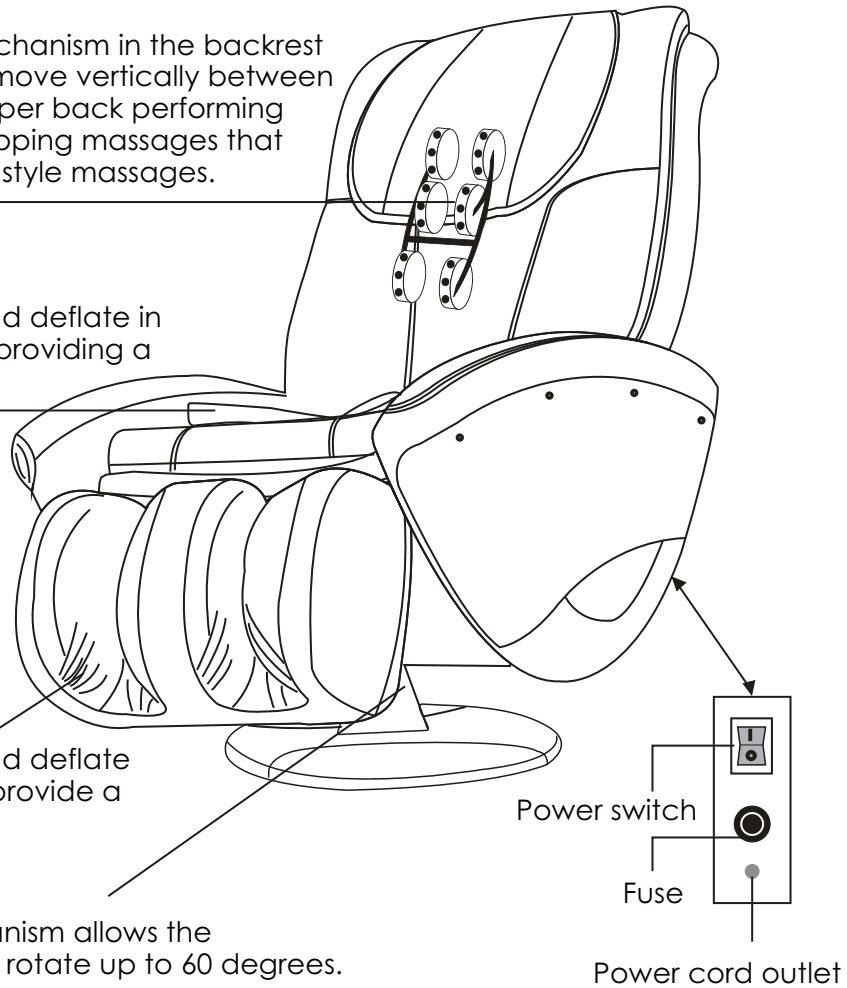


PREPARING FOR USE


Assembly

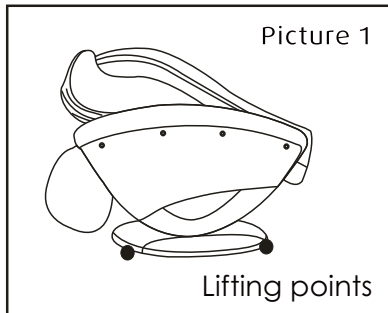


Step 1:
Open the carton, and lift from the lifting points (as shown on picture 1) to remove the massage chair (at least four people are needed).

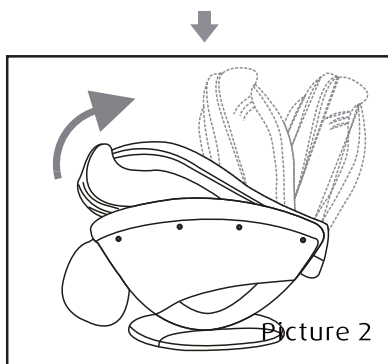

Step 2:
Unfold the backrest of massage chair and lift to the upright position. A "click" will be heard when the backrest latches into place. (As shown on picture 2)

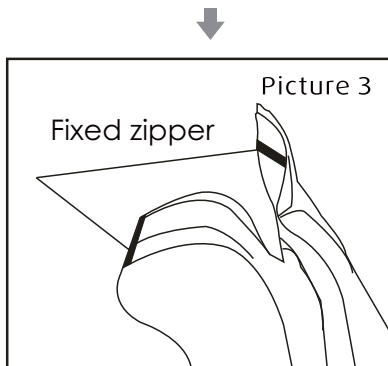


Step 3:
Fasten the back cushion onto backrest using the zippers on each component. The pillow attaches to the backrest cushion with Velcro. (as shown on picture 3).

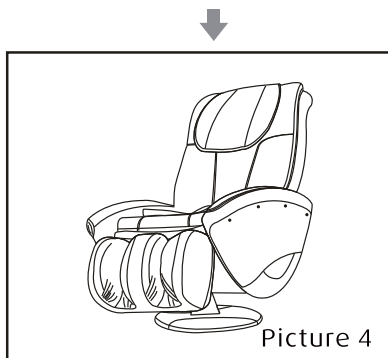


Step 4:
Connect the power cord to a wall outlet, and turn on the power switch installed at the underside of the left armrest. Now, you can use this massage chair and operate the chair with the control panel.


PREPARING FOR USE

Folding

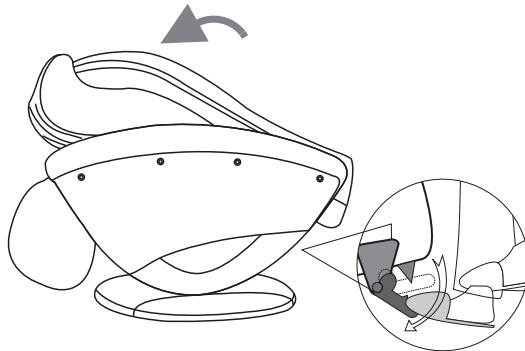


Press the “” button on control panel turn off power on control panel and turn off the power on the switch located on the underside of the left armrest and unplug the power cord from the wall outlet. Press down the backrest folding latch located on the underside of the backrest and gently push the backrest forward (as shown in picture).

Floor protection

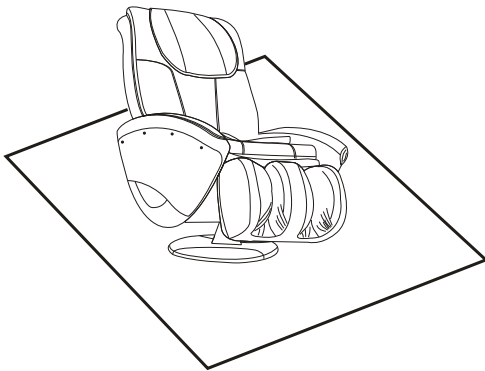

The massage chair may damage some floor finishes, so it is advised to put some sort of cushioning material (a rug or mat) under the massage chair to protect the floor and reduce vibrations.

Back cushion and pillow

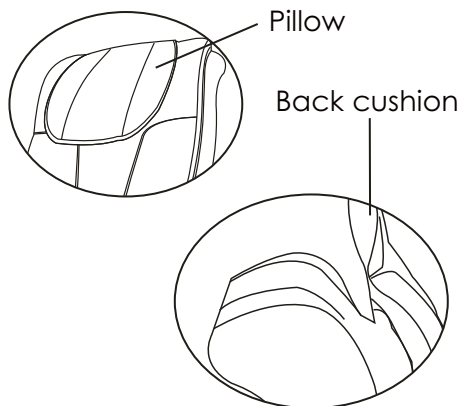

Both the pillow and back cushion are detachable. The pillow can be removed if preferred but the chair should not be operated without the back cushion in place. While not mandatory it is advised to use the pillow.




WARNING

Do not use massage chair without the back cushion. Doing so may result in serious injury.

OPERATING INSTRUCTIONS

Swiveling

With the leg rest is in the down position you can use your feet on the ground to swivel the chair up to 60 degrees to the left or right.

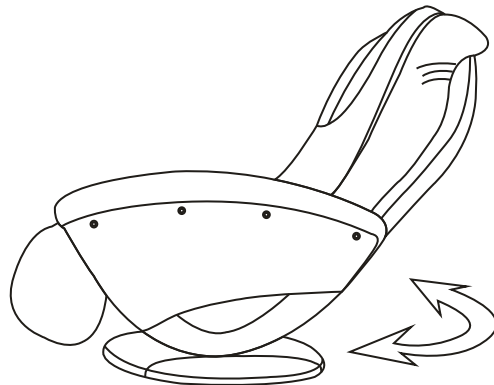


Swivel 60 degrees
to the left or right

Leg rest/backrest adjustment

Press "↶" button on the control panel to adjust the leg rest/backrest to your desired positions. When pressing "↷" button, the backrest will ascend, while the leg rest will descend. When they are adjusted to the limit positions, the massage chair emits a series of warning beeps. A beep will be heard each time your press an adjustment button.

Press "↷" button on the control panel to adjust leg rest/backrest to your desired positions. When pressing "↶" button, the backrest will descend, while the leg rest will ascend. When they are adjusted to the limit positions, the massage chair will emit a series of warning beeps. A beep will be heard each time an adjustment button is used.

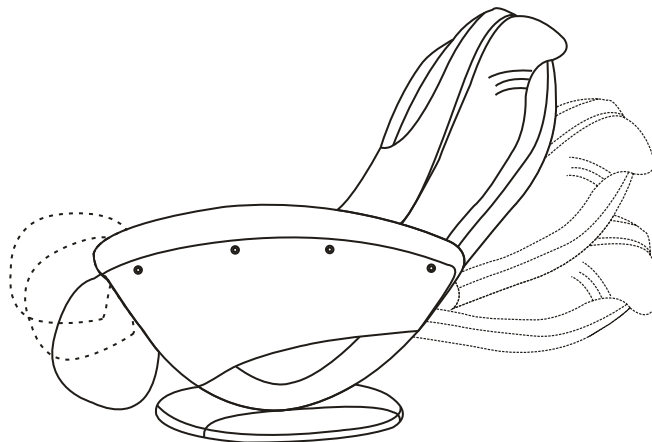

CARE AND MAINTENANCE

1. Cleaning

- ▶ Before cleaning, please make sure that the power plug has been disconnected from the wall outlet.

Caution

- ▶ Do not use abrasive cleaning solutions like benzene or thinner to clean the massage chair, otherwise, the color of the upholstery will fade or the massage chair will crack or erode.
- ▶ Do not iron the upholstery.

2. Maintenance

- ▶ Make sure that the power plug has been disconnected from the wall outlet.
- ▶ Brush off any dust and dirt on massage chair. Keep the massage chair clean and away from damp environments.
- ▶ If the massage chair will not to be used for a long period of time, please cover the massage chair with a dustproof cover (not included).

Caution

- ▶ Do not store the massage chair in direct sunlight or in places of high temperature. This may cause the color of the upholstery to fade.

3. Control panel

- ▶ Please use clean and dry cloth only to clean the control panel.

4. Leather and lining

- ▶ Please use soft and dry cloth to clean upholstery.
- ▶ Every two to three month, polish the lining with clean and dry cloth that has been dipped with cleaning solution, and then wipe it with dry and soft cloth.

TROUBLE SHOOTING

No.	Problem	Possible Cause	Solution
1	Rubbing or squeaking is heard.	It is a normal sound made by the motor or the sound is produced when the massage rollers are rubbing against the cloth.	N/A
2	Massage chair won't turn on.	2.1 The power supply plug is detached.	2.1 Insert the power supply plug into the wall outlet.
		2.2 The power supply switch is not turned on.	2.2 Turn on the switch.
		2.3 The fuse of massage chair blew out.	2.3 Replace a new one with the same rating.
3	The backrest or leg rest can not ascend or descend.	Excessive pressure has been put on the backrest or leg rest.	Reduce the pressure on backrest or leg rest.

If abnormal condition still remains after above steps have been taken, please contact local distributor for repair and maintenance.

SPECIFICATIONS

Product name: R200 Massage Lounger

Model: R200

Rated voltage: 120V~

Rated frequency: 50/60 Hz

Rated power: 150W

Safety design: Class I

Product dimensions: 31" W×46" D×47-1/4" H(upright)
31" W×66" D×32-1/2" H(reclined)

Shipping dimensions: 43" L×32" W×31" H

Net weight: 165.8 lbs

Gross weight: 190 lbs

Maximum user weight: 264 lbs

