SONNEMAN®
A WAY OF LIGHT

Important: Always disconnect the power before installing or replacing bulb and before cleaning or other maintenance.
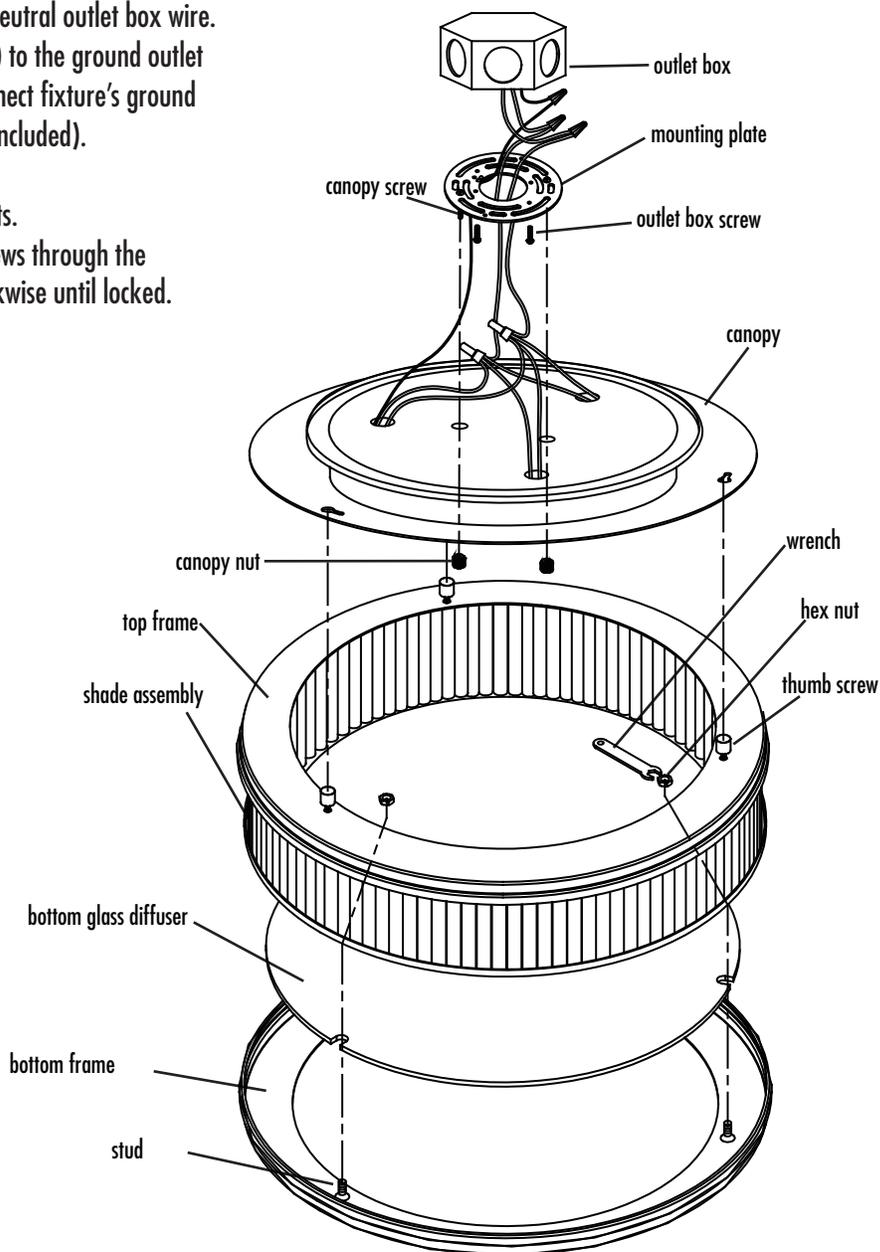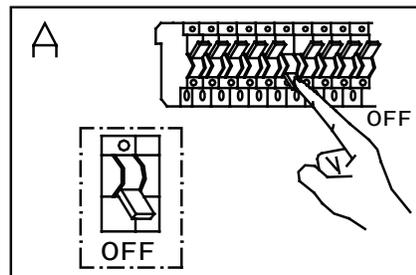
This light should be installed by a licensed electrician

LAMP INSTALLATION AND ASSEMBLY
1. Shut off power to the outlet box. (fig. A)
2. Attach the mounting plate to the outlet box using outlet box screws.
3. Install bottom glass diffuser, sandwiching between the bottom frame
and shade assembly. Secure with hex nuts and tighten with wrench.(included)
4. Install E-12 bulbs. (not included)
5. Make appropriate electrical connections using wire nuts:
a.Connect the fixture's live wire (black) to the live outlet box wire.
b.Connect the fixture's neutral wire (white) to the neutral outlet box wire.
c.Connect fixture's ground wire (green or uncoated) to the ground outlet
box wire. If no ground is present in outlet box, connect fixture's ground
wire to the mounting plate using the green screw (included).
d. Carefully place connections in outlet box.
6. Attach canopy to mounting plate with canopy nuts.
7. Connect fixture to canopy by pushing thumb screws through the
large opening of the keyhole slots and turning clockwise until locked.
Fully tighten the thumb screws.
8. Restore power to the fixture.

CARE INSTRUCTIONS
Dusting – Use a clean, dry cloth.
Cleaning – To protect the finish,
avoid any harsh abrasives or chemicals.

©2009 SONNEMAN - A WAY OF LIGHT

SONNEMAN®
A WAY OF LIGHT

Important: Always disconnect the power before installing or replacing bulb and before cleaning or other maintenance.

This light should be installed by a licensed electrician

GLASS ROD REPLACEMENT INSTRUCTIONS

There are 6pcs extra glass rods in carton for replacement,packed in a red bag with white sticker in red remarks.

1. Release hex nut under inner top frame and take off top frame,using wrench.(Included)
2. Remove felt pad covering glass replacement hole and insert glass rods.
3. Replace felt pad over the glass replacement hole.
4. Attach top frame to inner top frame,line up the screw holes,tighten with lock washers and hex nuts, using wrench.(Included)

top frame

inner top frame

felt pad

glass rod

wrench

lock washer

hex nut