QUOIZEL®
6 CORPORATE PARKWAY
GOOSE CREEK, SC. 29445

FIGURE 1.

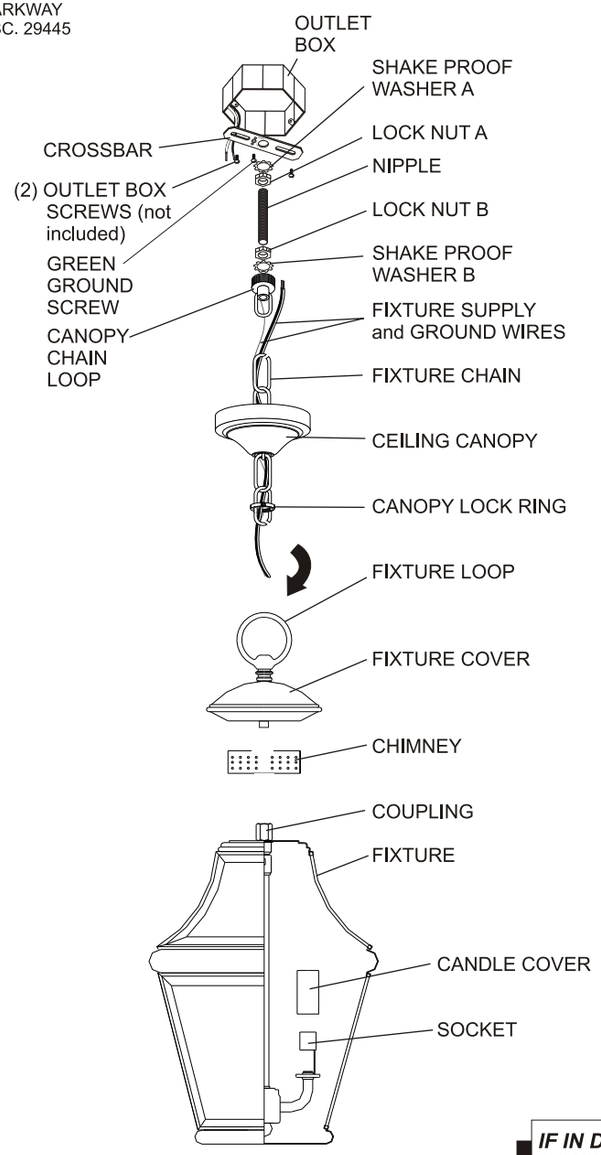

c UL us LISTED

INSTALLATION INSTRUCTIONS:

1. Before beginning the installation, carefully unpack and identify parts, referring to FIGURE 1.

2. Turn the electrical power to the installation point OFF.

3. Locate the CROSSBAR and with power to installation point OFF, secure to OUTLET BOX with (2) OUTLET BOX SCREWS (not supplied). Locate LOCK NUT A and SHAKE PROOF WASHER A. Thread LOCK NUT A and SHAKE PROOF WASHER A onto top end of NIPPLE. Thread NIPPLE into the center of CROSSBAR. Locate LOCK NUT B and thread onto bottom end of NIPPLE. Tighten LOCK NUT A against CROSSBAR with pliers until snug. Unravel the FIXTURE SUPPLY and GROUND WIRE.

4. Locate the FIXTURE COVER and CHIMNEY. Unravel the FIXTURE SUPPLY and GROUND WIRES and pass through the center of the CHIMNEY and underside of the FIXTURE COVER. Take up wire slack from where the wires exit the FIXTURE LOOP. The top of CHIMNEY checks into the underside of the FIXTURE COVER. Proceed to thread the underside center of the FIXTURE COVER into the COUPLING located on the top of the fixture. Hand tighten until snug.

5. Locate the FIXTURE CHAIN and determine desired hanging height of fixture. Adjust chain by removing links if needed. Please note that depending on chain material thickness, you might be required to use chain pliers to spread links open. Proceed to attach one end of chain to FIXTURE LOOP, attached to top of fixture. Pass the fixture wires through FIXTURE CHAIN alternating links. Proceed to pass the fixture wires through the following mounting components in this order: 1) CANOPY LOCK RING, 2) CEILING CANOPY, 3) CANOPY CHAIN LOOP 4) SHAKE PROOF WASHER B.

6. ***Make the connections:*** (Quoizel recommends (2)people for the next 2 steps). Position the fixture under the OUTLET BOX and pass wires through the NIPPLE, attached to CROSSBAR. Attach HOUSE GROUND WIRE to FIXTURE GROUND WIRE. Proceed to attach both to the CROSSBAR using GROUND SCREW. Using wire connectors (not supplied) connect the HOUSE WHITE WIRE to the FIXTURE SUPPLY WIRE (RIBBED SIDE); connect the HOUSE BLACK (or RED) WIRE to the FIXTURE SUPPLY WIRE (SMOOTH SIDE). Wrap all connections with approved electrical tape.

7. With the connections properly made, carefully tuck all wires into OUTLET BOX. Locate the CANOPY CHAIN LOOP and thread onto the end of NIPPLE. Proceed to thread LOCK NUT B and SHAKE PROOF WASHER B down NIPPLE and tighten against CANOPY CHAIN LOOP. Attach top end of FIXTURE CHAIN to CANOPY CHAIN LOOP. Pass the center hole in the CEILING CANOPY over the CANOPY CHAIN LOOP and secure to ceiling by threading LOCK RING onto CANOPY CHAIN LOOP

8. ***INSTALLING THE CANDLE COVERS:*** With the FIXTURE installed, locate the CANDLE COVERS (qty. depends on style purchased) and fit them over SOCKETS. Proceed to install BULBS. (See fixture markings and/or labels for maximum wattage).

9. Restore electrical power to the installation point. Retain this sheet for parts replacement or future reference.

IF IN DOUBT ABOUT ELECTRICAL INSTALLATION, CONSULT A LICENSED ELECTRICIAN

IS-1202
03.03