LUCASEY® MOUNTING SYSTEMS

LCAPDVD2

Adjustable DVD Mount for use with LC100 & LC200 Flat Screen Mounts

Fits Equipment 15"-20 Wide and up to 1-3/4" Tall

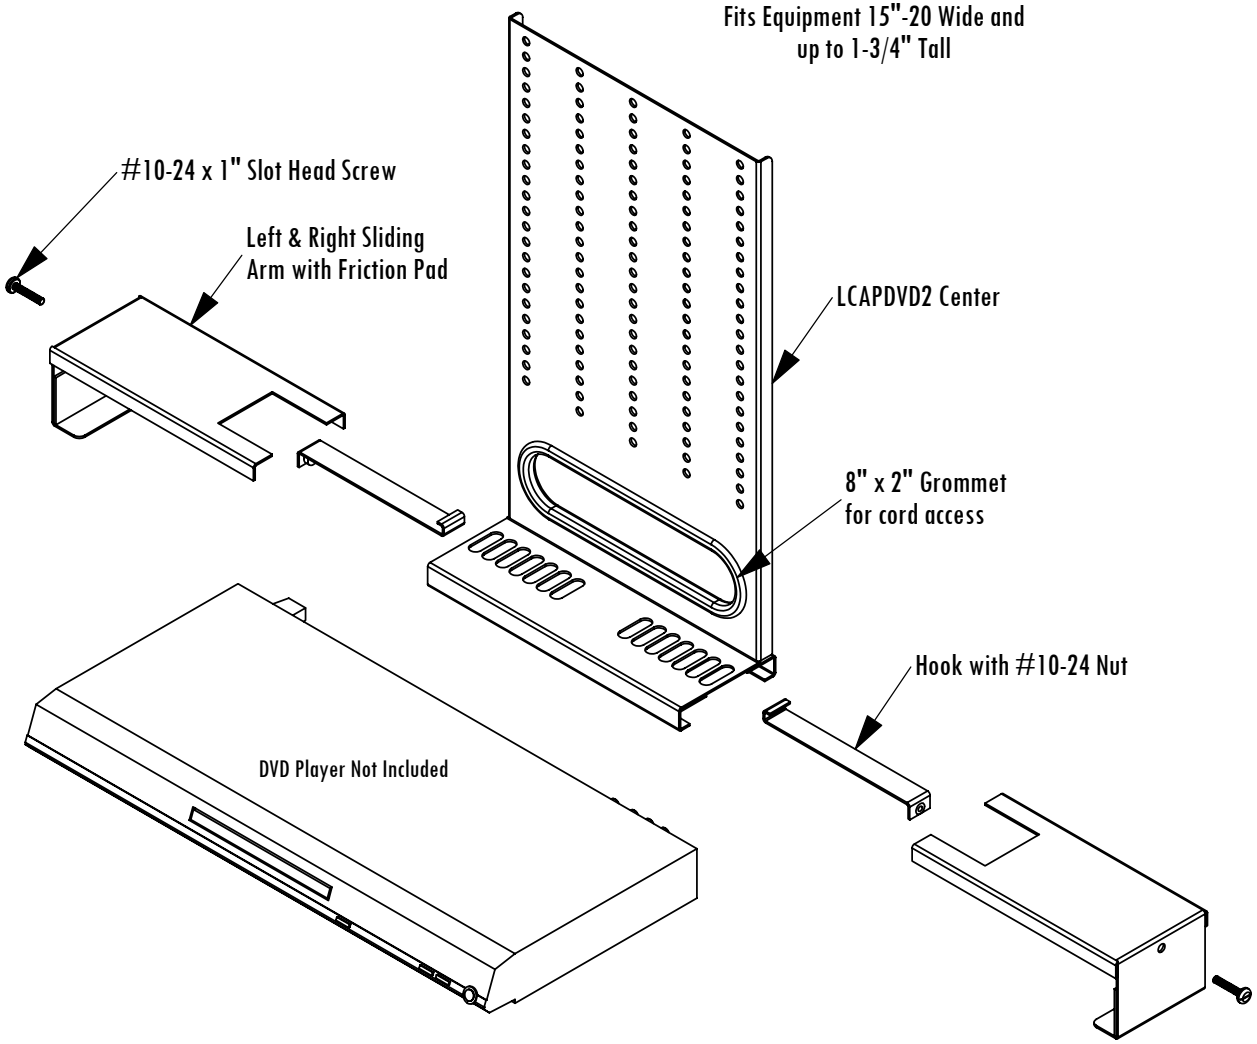

1) Measure the width of the DVD Player
2) Slide the Left & Right Arms into the LCAPDVD2 Center until they are the same distance apart as the width of the DVD Player. Place the hooks in the appropriate slot that leaves a 1/2" - 1" space between the #10-24 Nut and the Left & Right Sliding Arms.
3) Place the DVD Player between the Left & Right Arms with the front of the DVD Player projecting out the same distance as the depth of the monitor or farther if needed for wall clearance.
4) Tighten the Slot Head Screws into the threaded nuts on the hooks until the DVD can not be easily removed from the Left & Right Sliding Arms.
The Friction Pads need to be tight enough to prevent the DVD player from unintentionally sliding out.
5) Attach the LCAPDVD2 to the LC100 or LC200 Flat Screen Mount by removing the monitor attaching screws used to mount the LC100 or LC200 mount and inserting the LCAPDVD2 between the monitor and LC100 or LC200 mount.
6) If the screws removed from the monitor are no longer long enough to attach the monitor through the addition of theLCAPDVD, an assortment of longer setscrews, nuts and washers have been provided to give greater depth of attachment.

Hardware List

2	#10-24 x 1" Slot Heat Screws
4	4mm x 25mm Setscrews
4	5mm x 30mm Setscrews
4	6mm x 30mm Setscrews
8	4mm Hex Nuts
8	5mm Hext Nuts
8	6mm Hext Nuts
8	5mm Washers
8	1/4" Washers

Protected under one or more of these U.S. Patent numbers: 3,291,432 3,559,942 3,724,798 DES.270,689 4,613,109 4,878,645 4,852,842 DES.309,5624,973,023 5,169,114 5,255,884 5,310,152 5,522,576 5,621,614 Re.35,677 DES.398,834 5,826,384 5,941,492 5,964,068 6,060,661 6,102,398 6,158,704 6,454,116B1 6,761,276B2 6,806,425B1

©2007 Lucasey Manufacturing Corporation, Oakland, California