Assembly Instruction

Item No. HUN-415X

No	Description	Sketch	Q'TY
A	Allen Wrench		1pc
B	Pencil		1pc

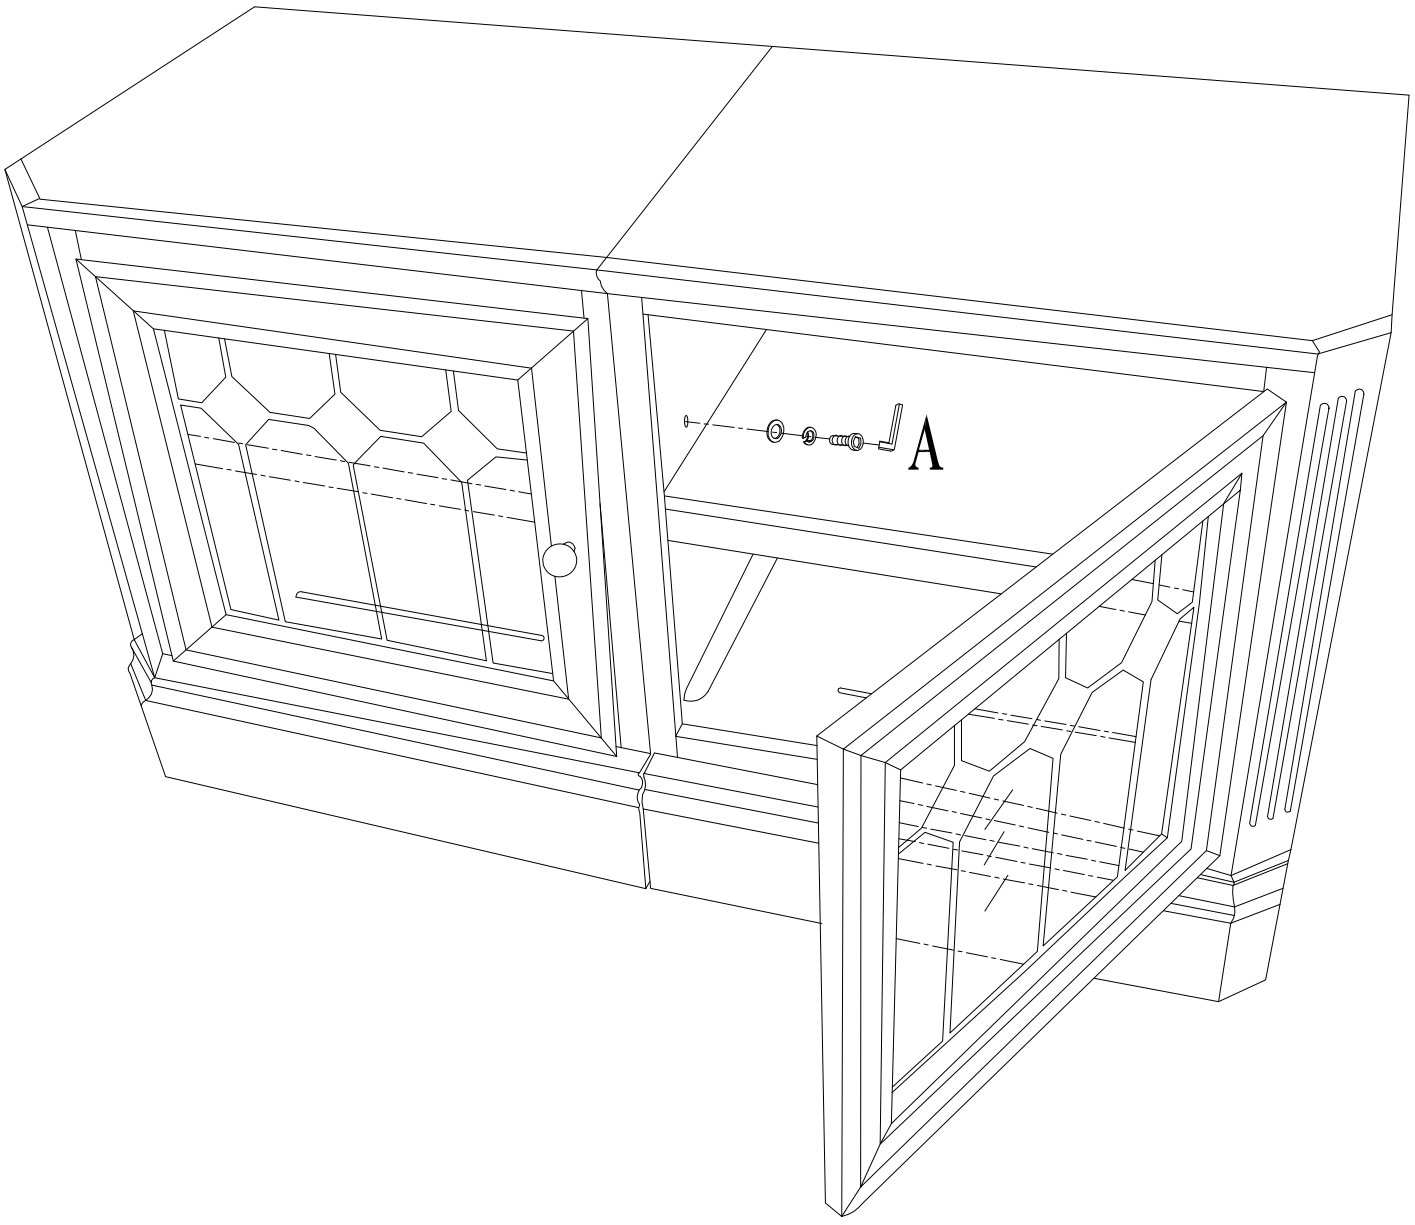

Assembly Instruction

Item No. HUN-400

No	Description	Sketch	Q'TY
A	Bracket	⌀1/4"	4pcs
B	Screw	1/2"L	16pcs
C	Screw	7/8"L	4pcs

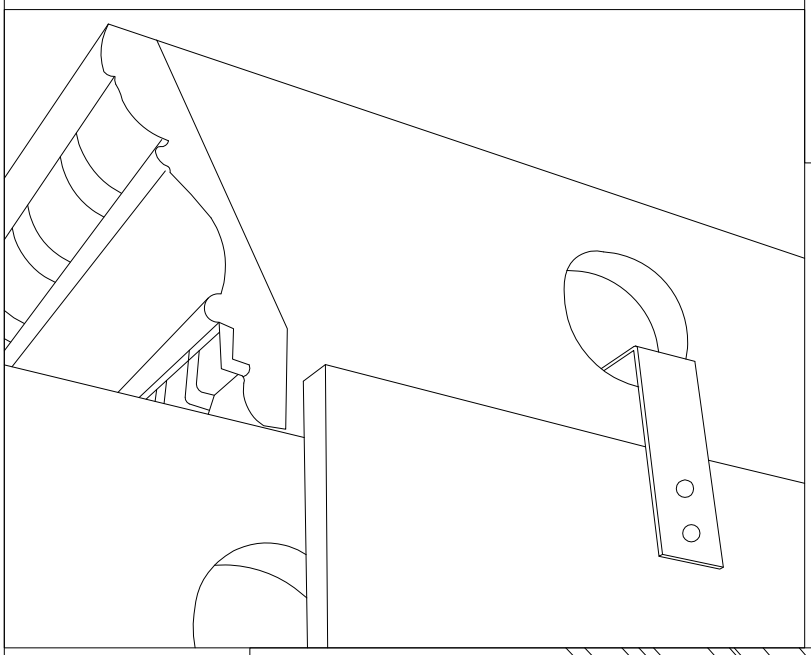

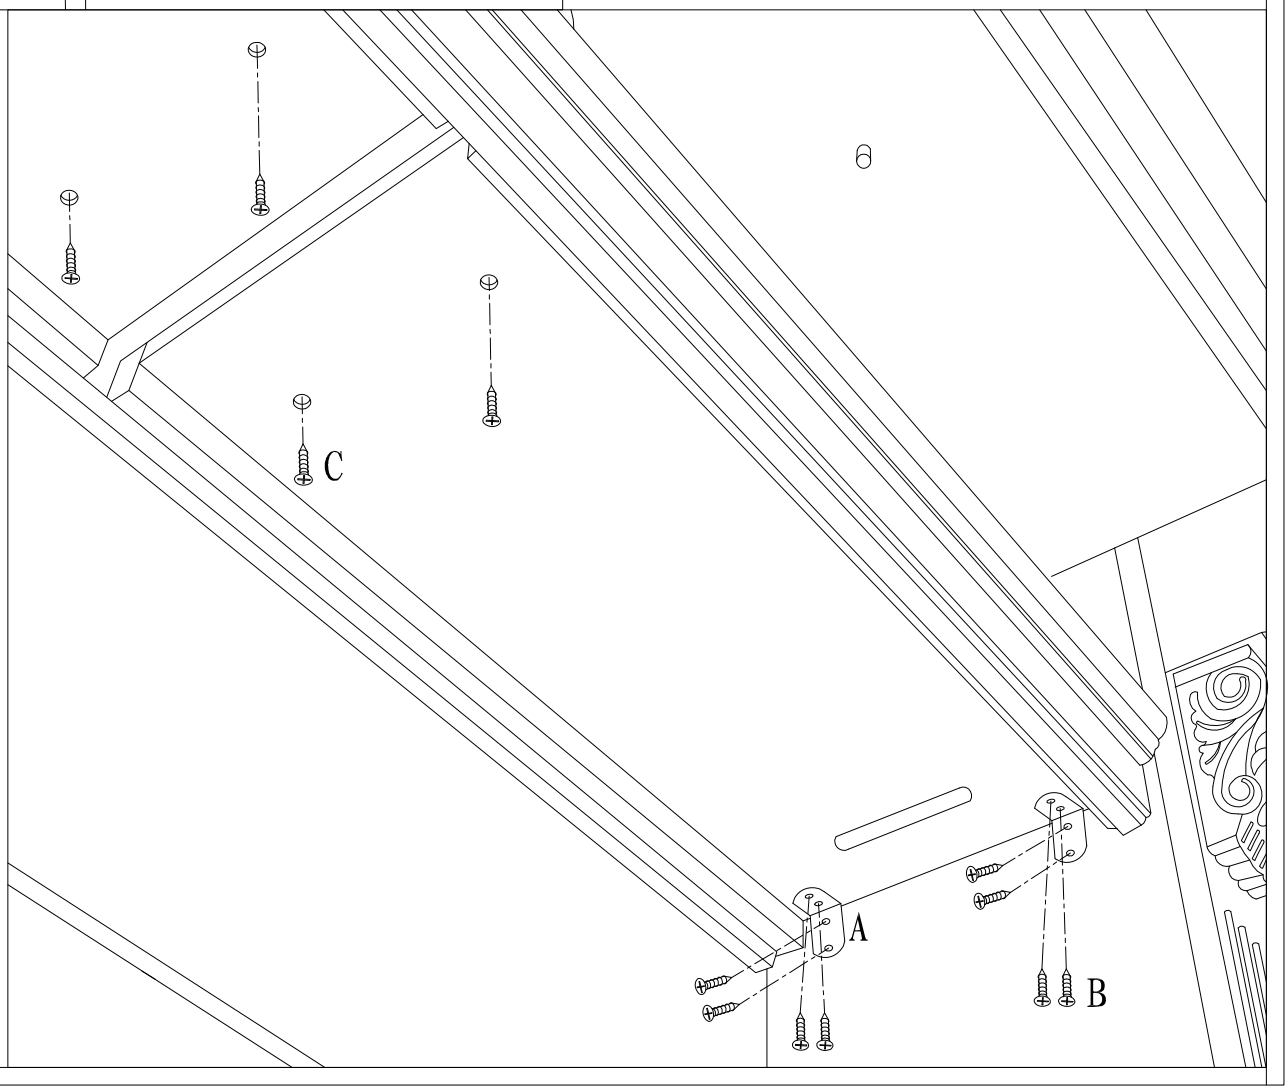

Assembly Instruction

HUN-461# Part list

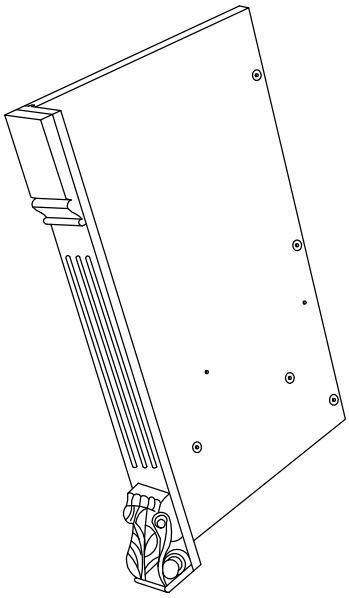

Left side Panel

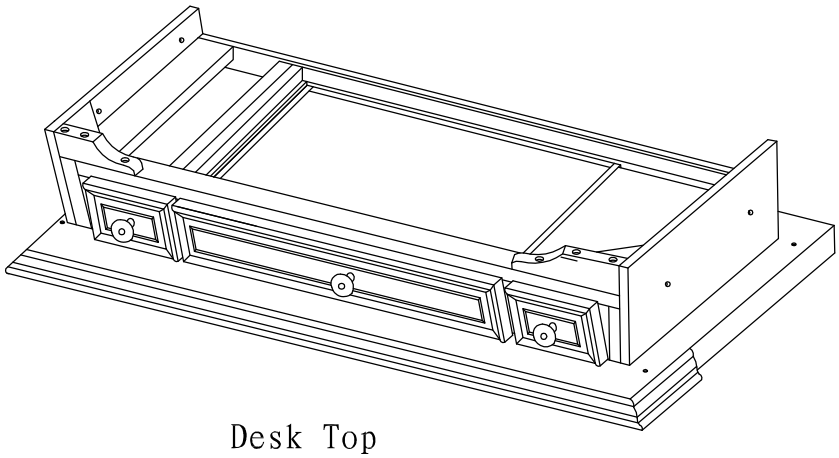

Desk Top

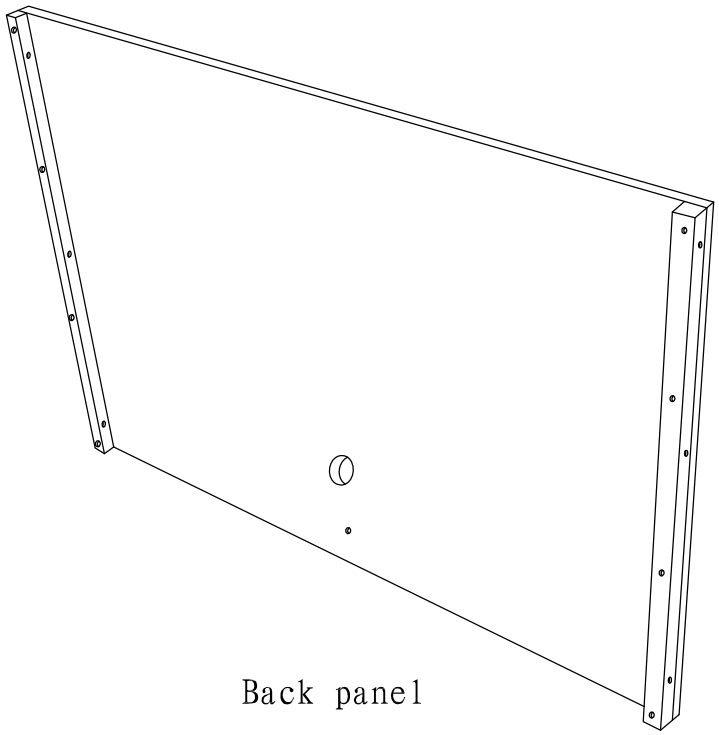

Back panel

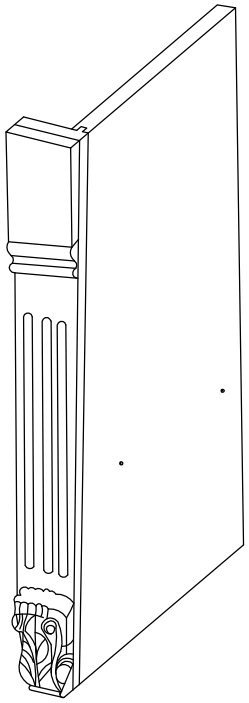

Right side Panel

Assembly Instruction

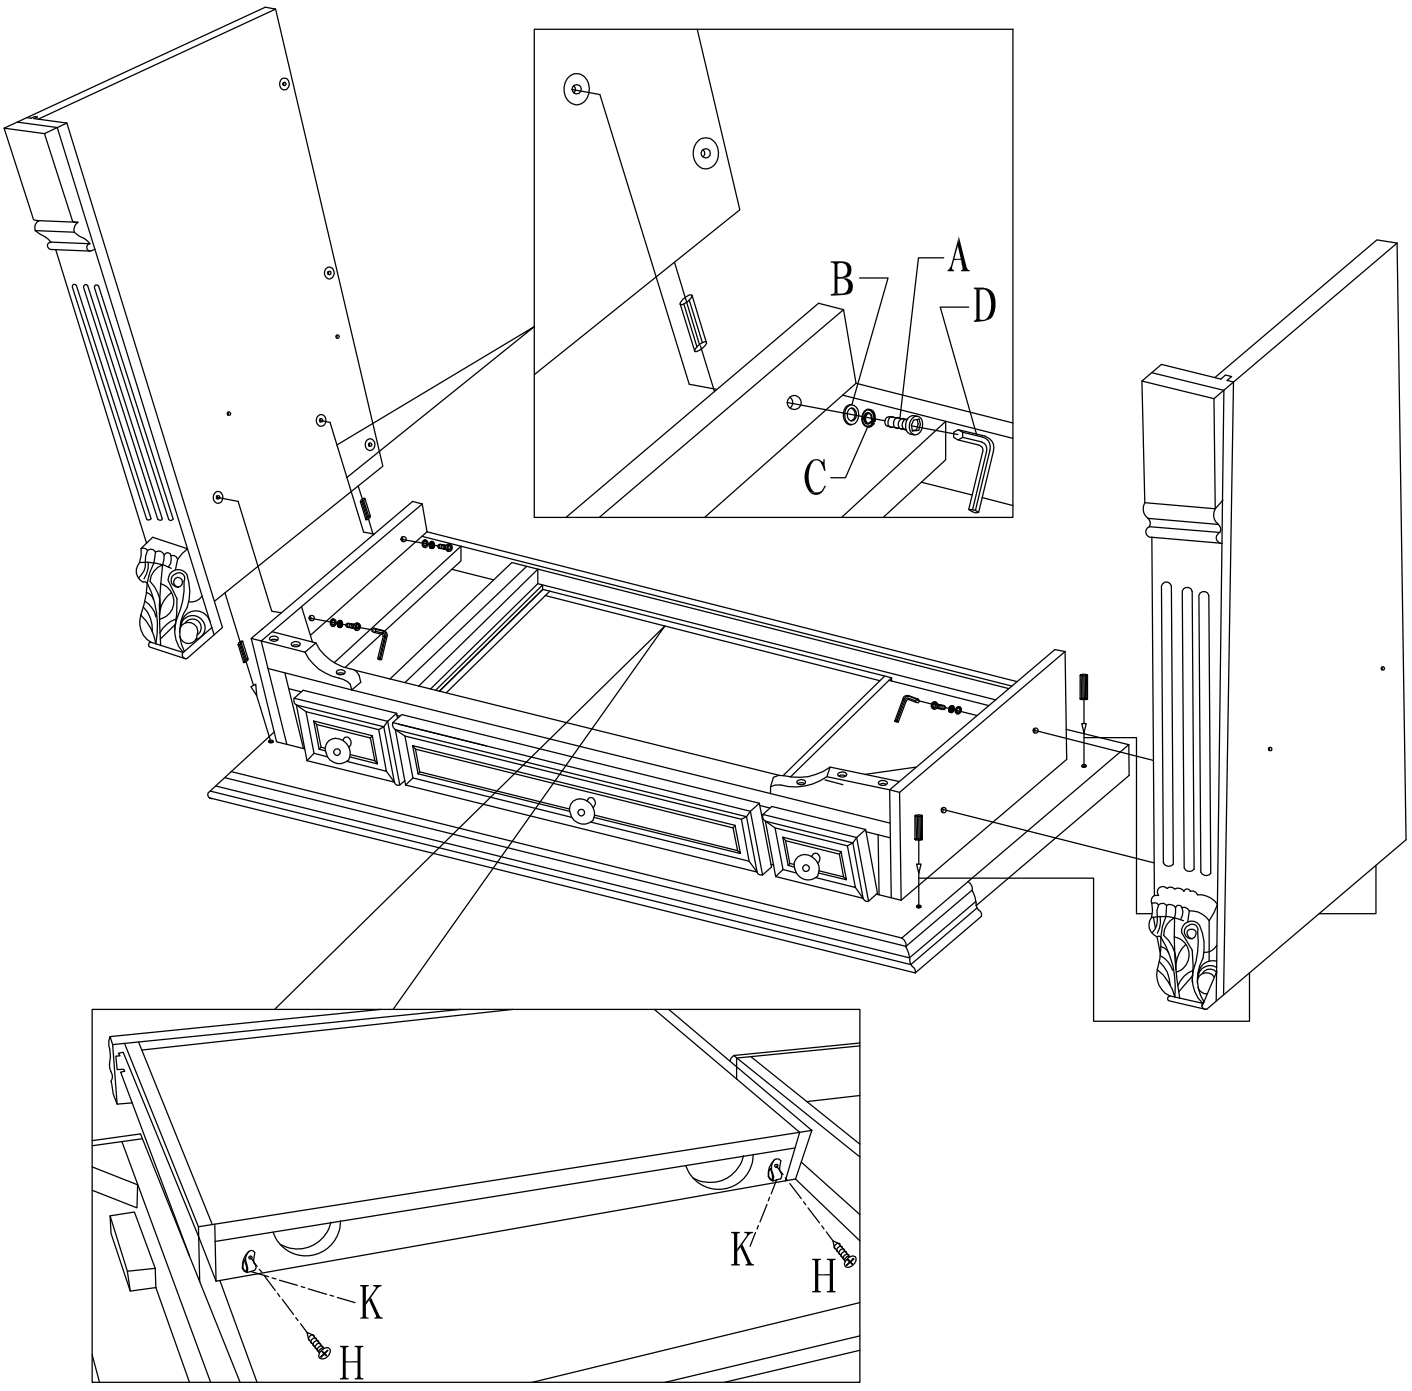

Step 1: Place Desk top face down on soft surface, insert wood dowel(E) to the Desk top, then put the Left side panel to the Desk top, use Flat washer(B), Lock washer(C) & Bolt(A) to secure the Side panel to the Desk top, fully tighten Bolt(A) with Allen Wrench(D). Repeat the same procedure to assemble the Right side panel to the Desk top.

Assembly Instruction

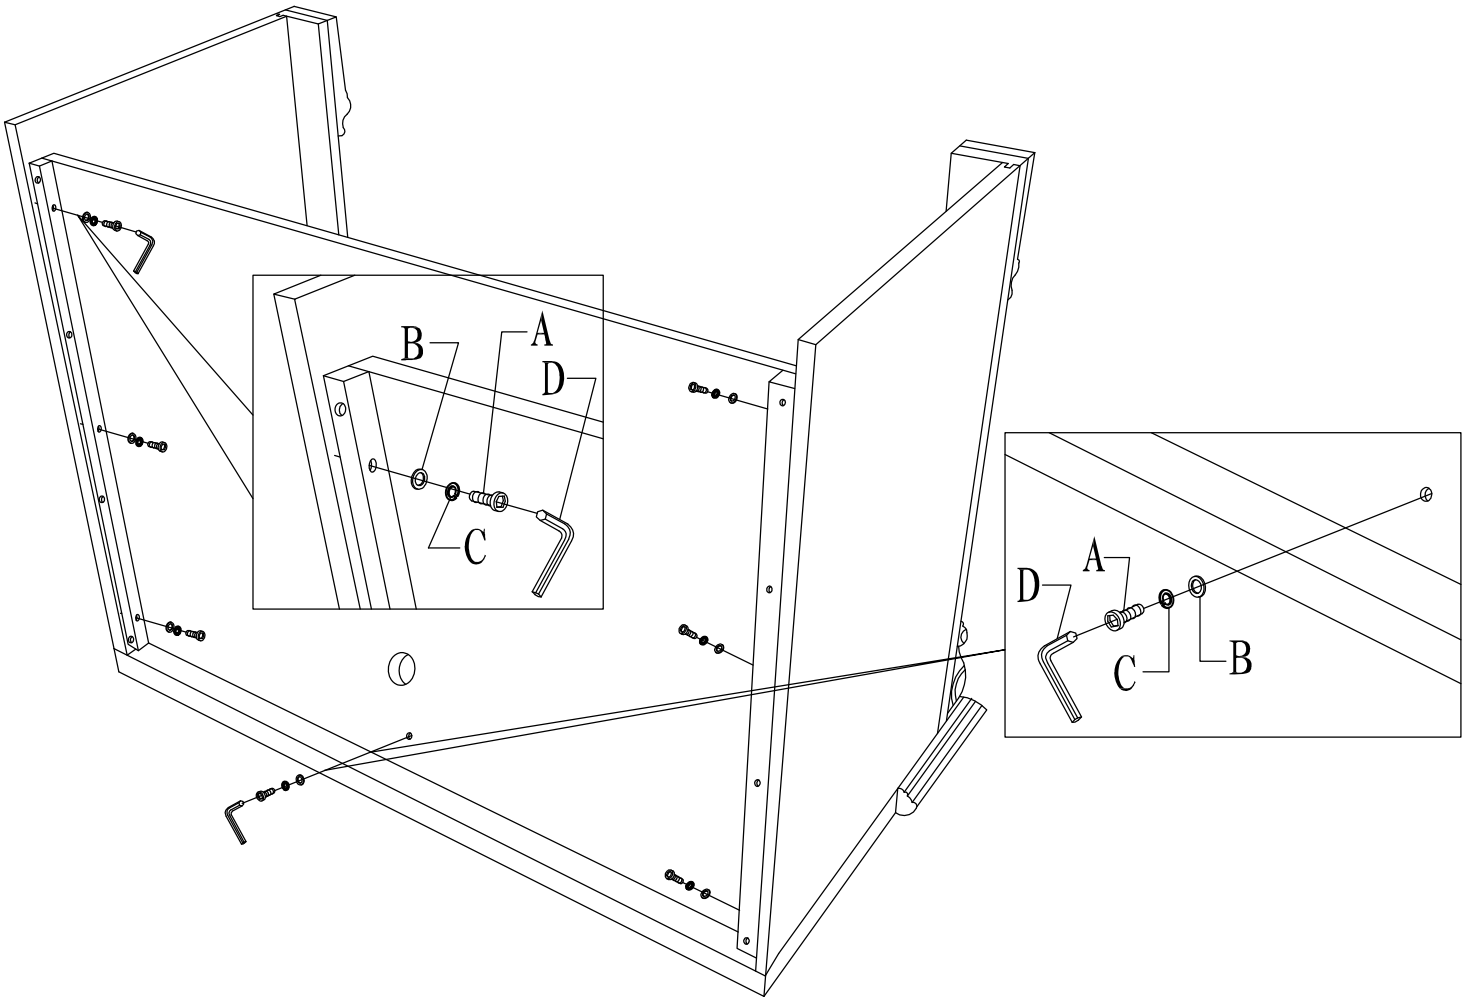

Step 2: Put the Back panel between Left and Right side panels, use Flat washer(B), Lock washer(C) & Bolt(A) to secure Back panel to Left and Right side panels, fully tighten Bolt(A) with Allen Wrench(D). Carefully turn the assembled Desk upright.

Assembly Instruction

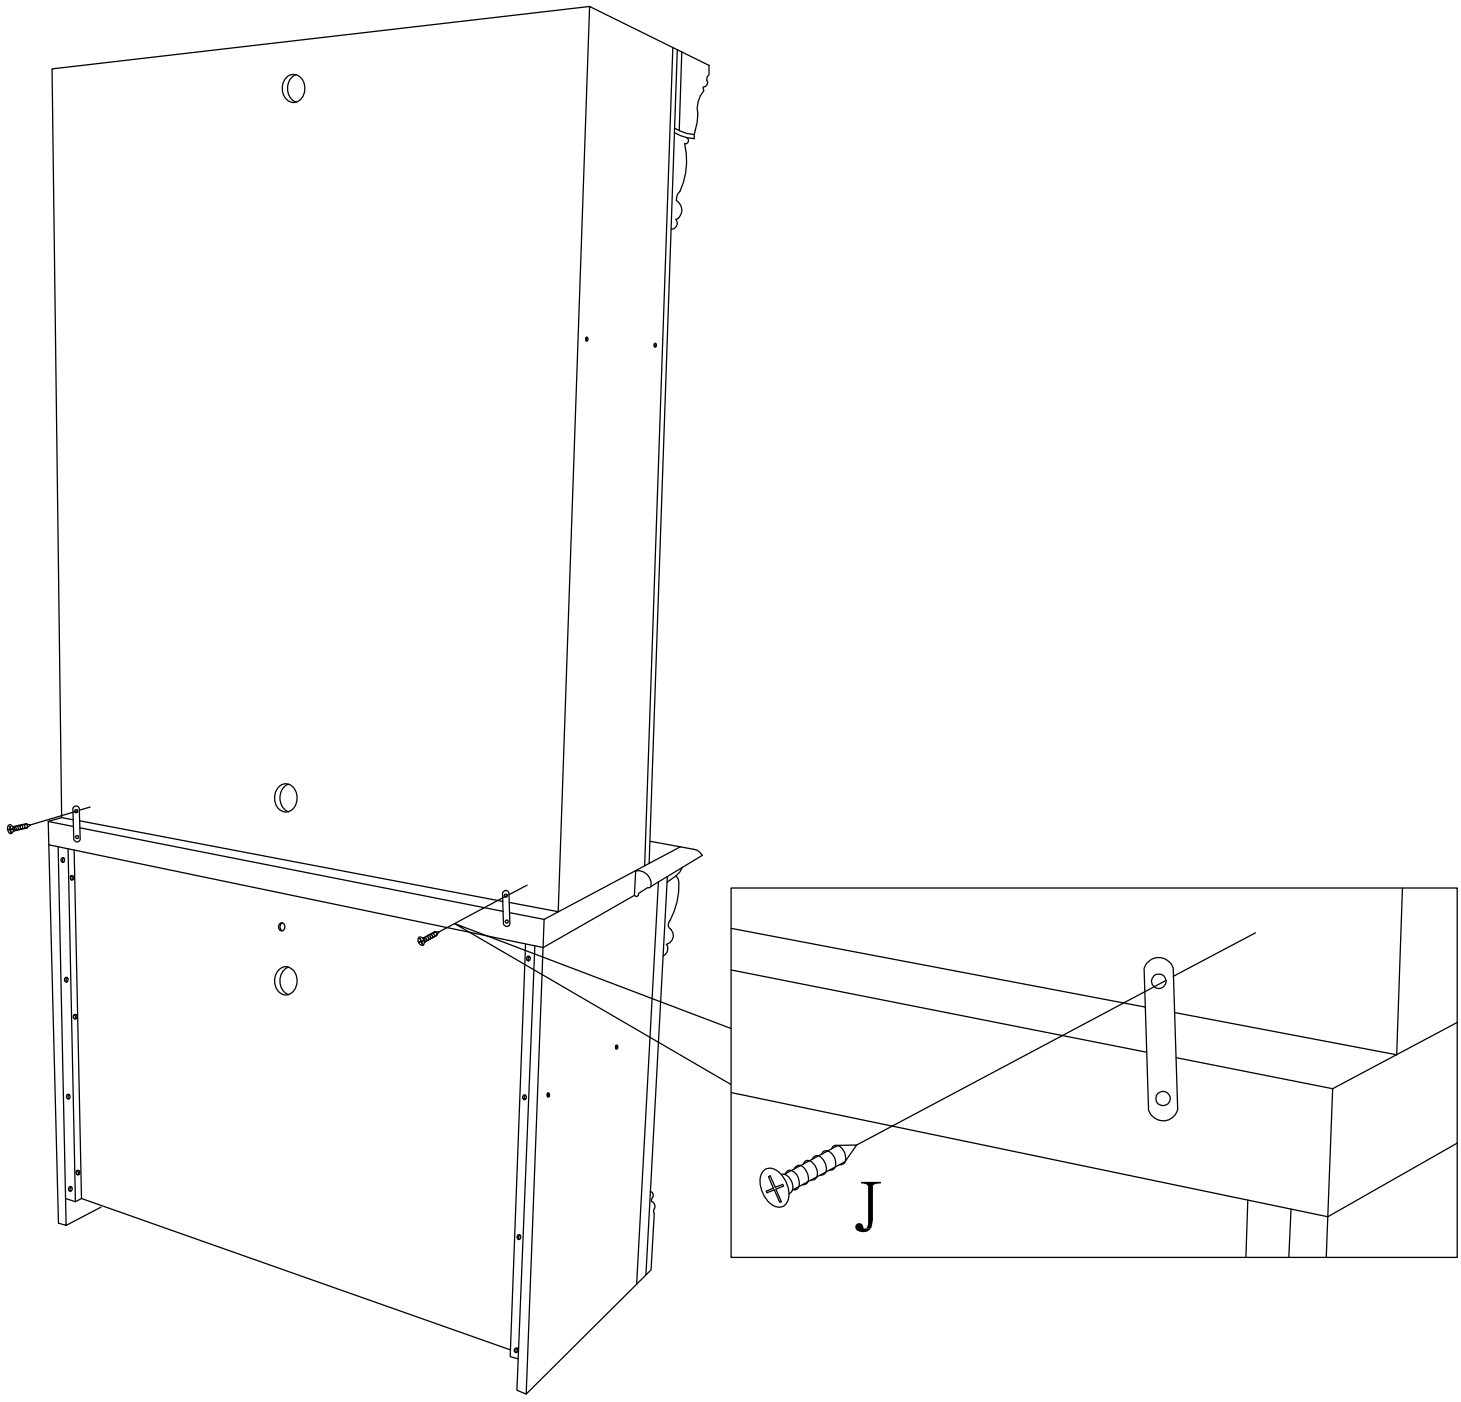

Use Screw(J) to assemble the Hutch to the Desk.

Assembly Instruction

Item No.HUN-461#

A	Bolt	1-1/8"L	15pcs
B	Flat washer		15pcs
C	Lock washer		15pcs
D	Allen Wrench	4MM	1pc
G	Wire lid		1pc

H	Screw	1/2"L	6pcs
J	Screw	5/8"L	2pcs
K	Wire buckle		6pcs
L	Pencil		1pc

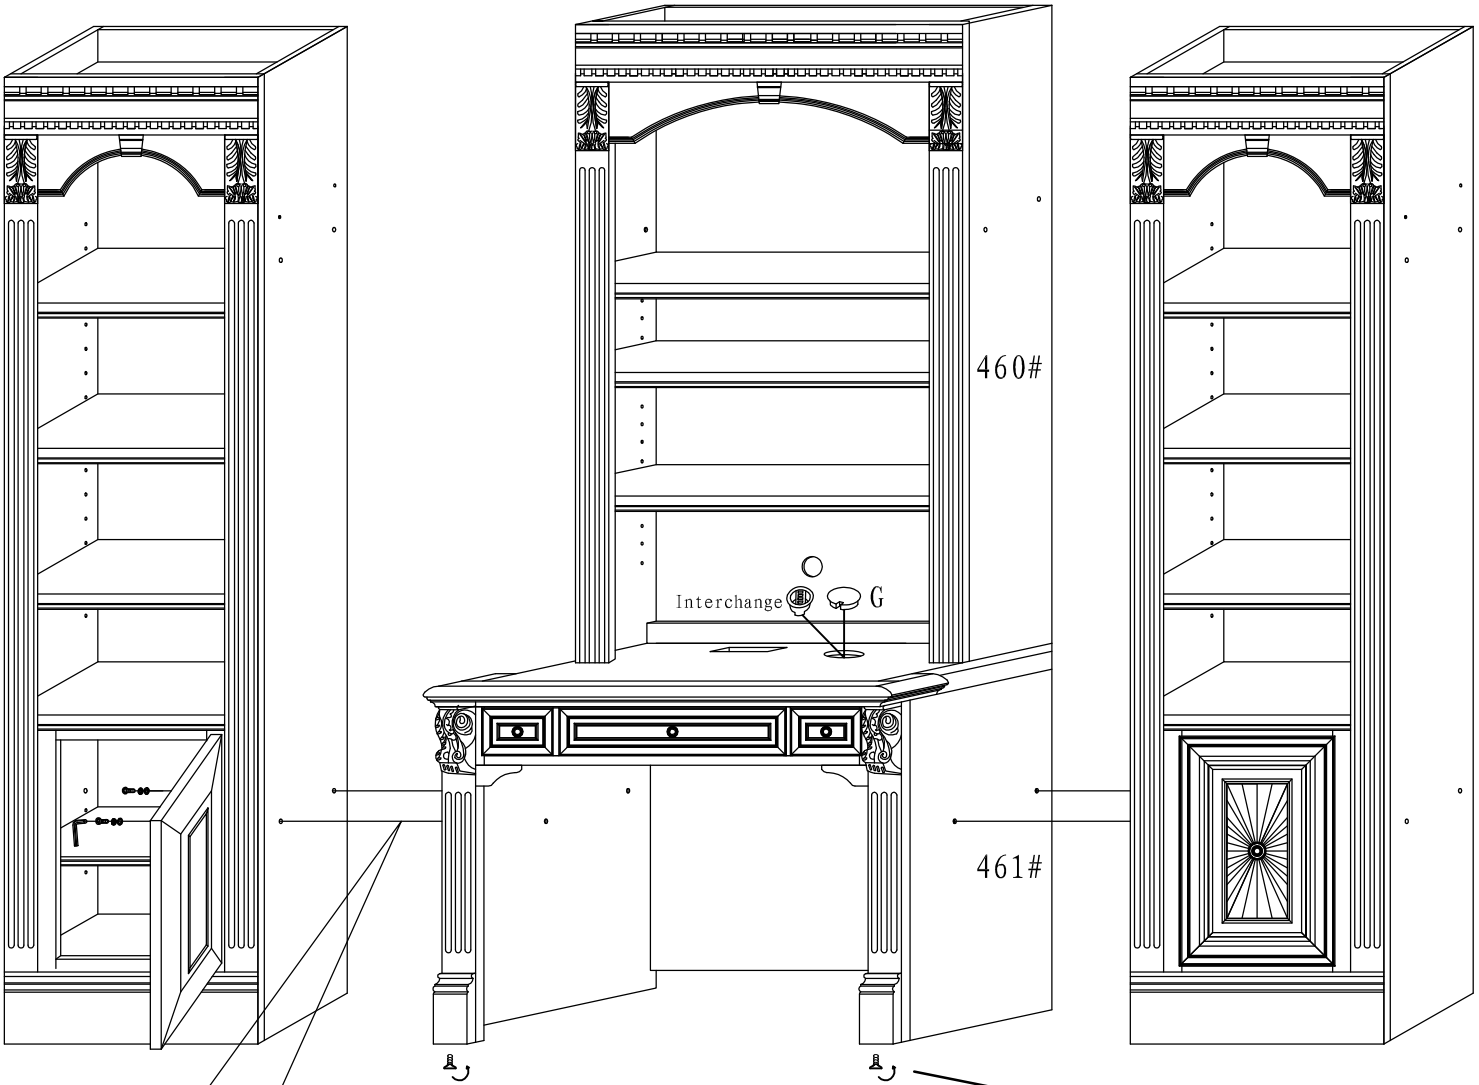

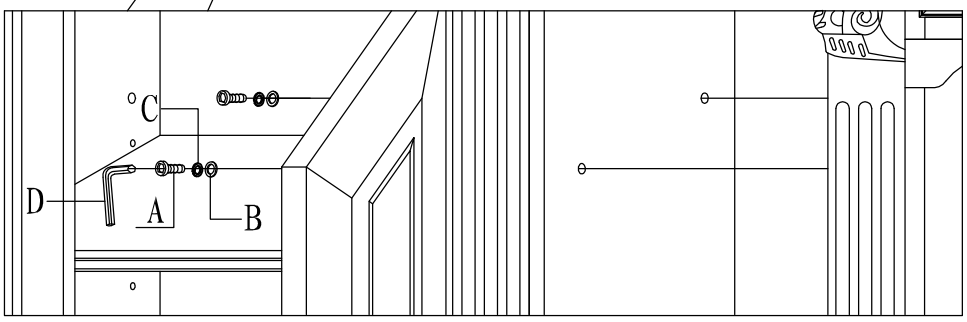

You may adjust the levelers at the bottom of the unit, make the unit at level position.

Assembly Instruction

Item No. HUN-460#

A	Screw		8pcs
B	Canular bolt		4pcs
C	Canular bolt		4pcs

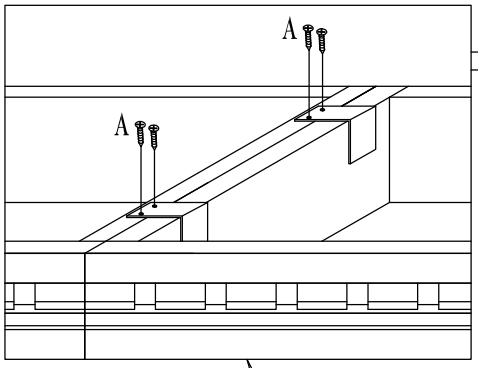

After assemble the Hutch to the Desk, it's assemble with other bookcases .Assemble with other Regular Stereo, lock four Bolts(K) prevent 460 the hutch shake.

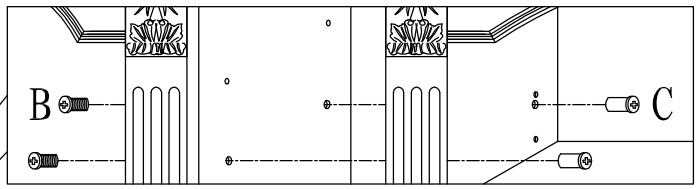

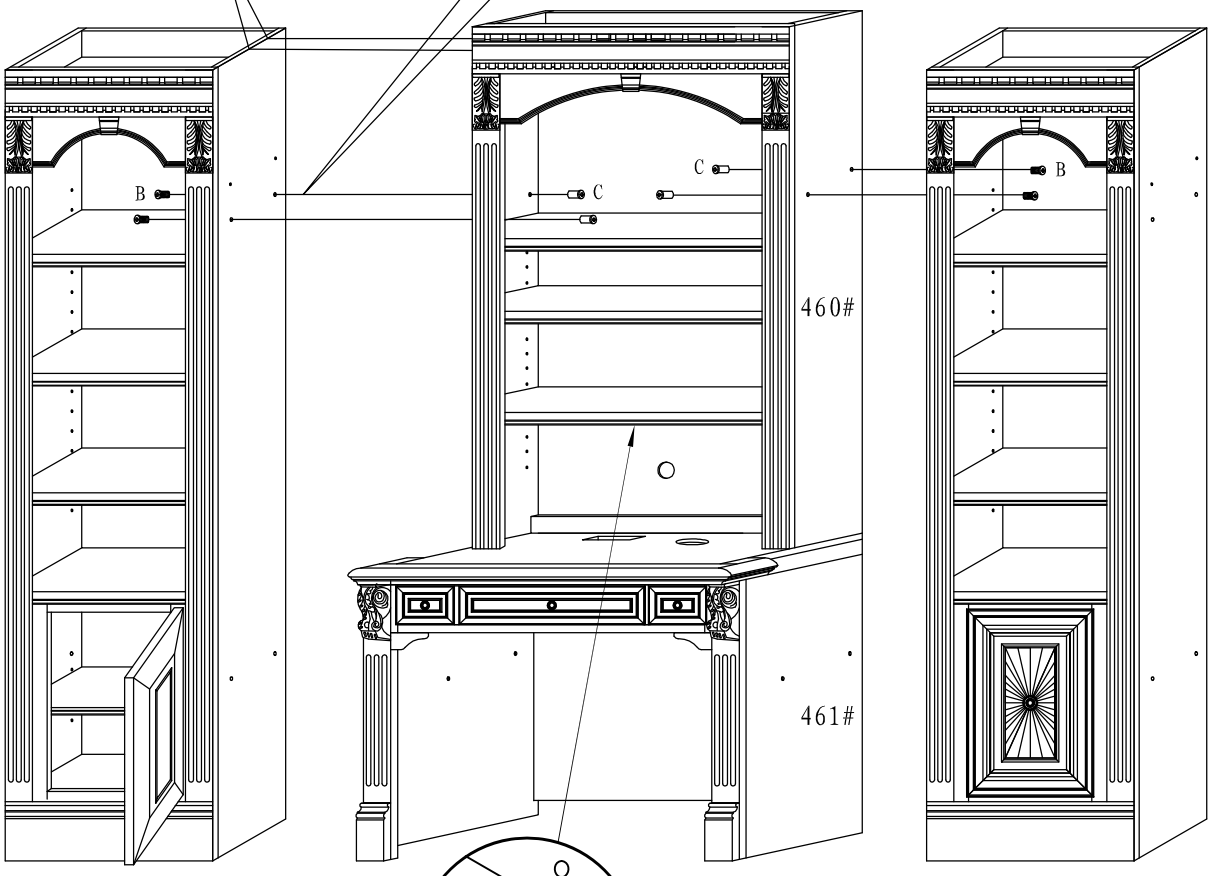

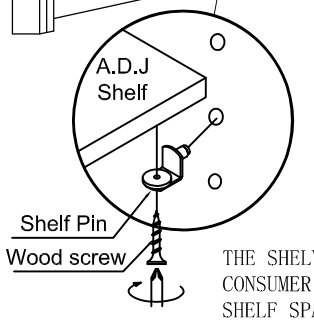

THE SHELVES ARE DETACHABLE, THE CONSUMER CAN FREELY ADJUST THE SHELF SPACING.

Assembly Instruction

Item No.HUN-480/481/482#

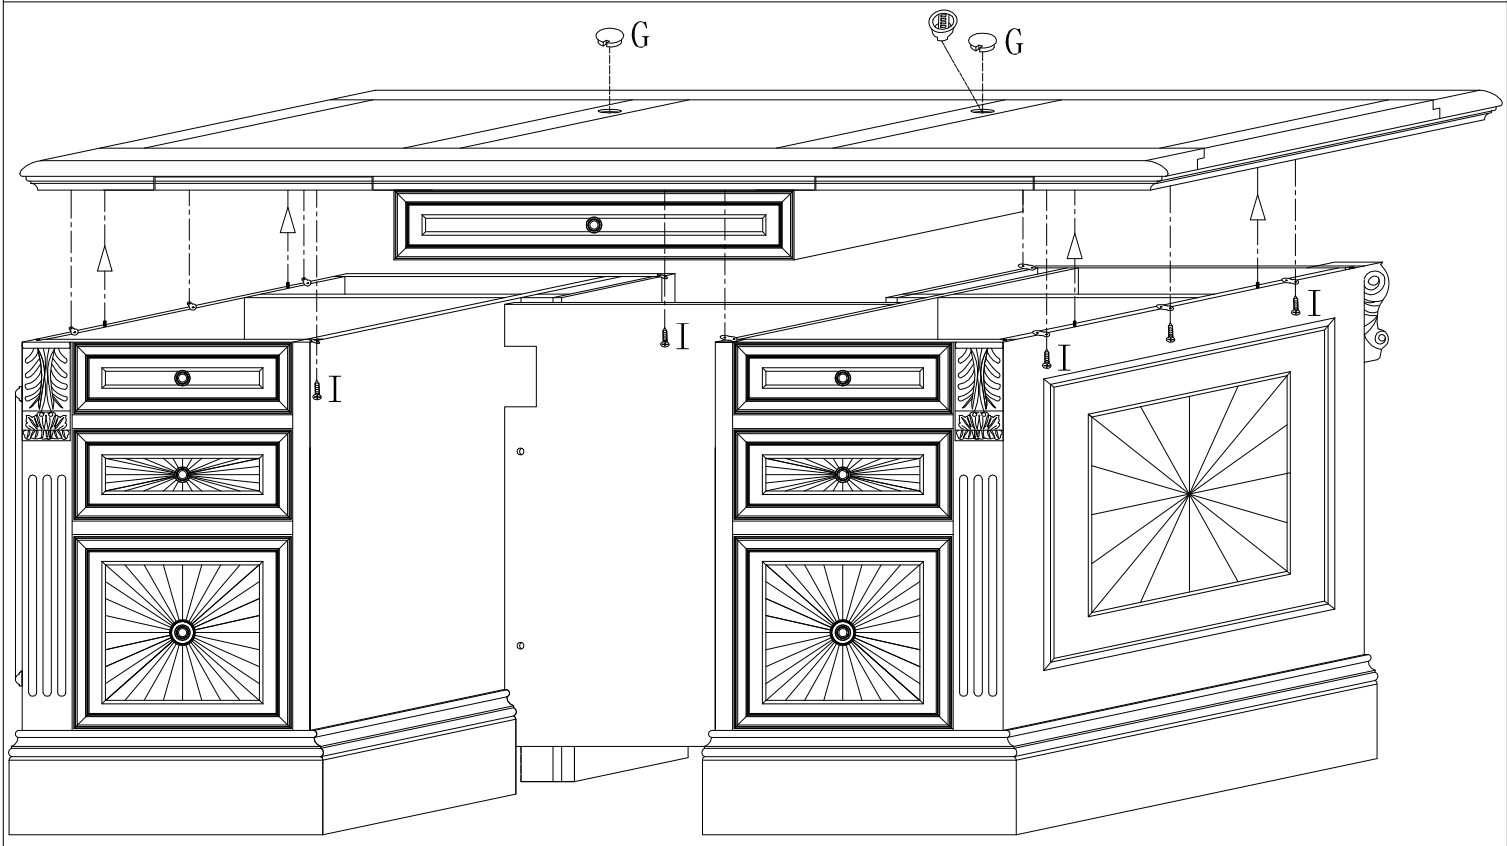

Please disassemble desk for moves of more than a few feet.Always disassemble desk to move from room to room.

Detail# ③

Detail# ④

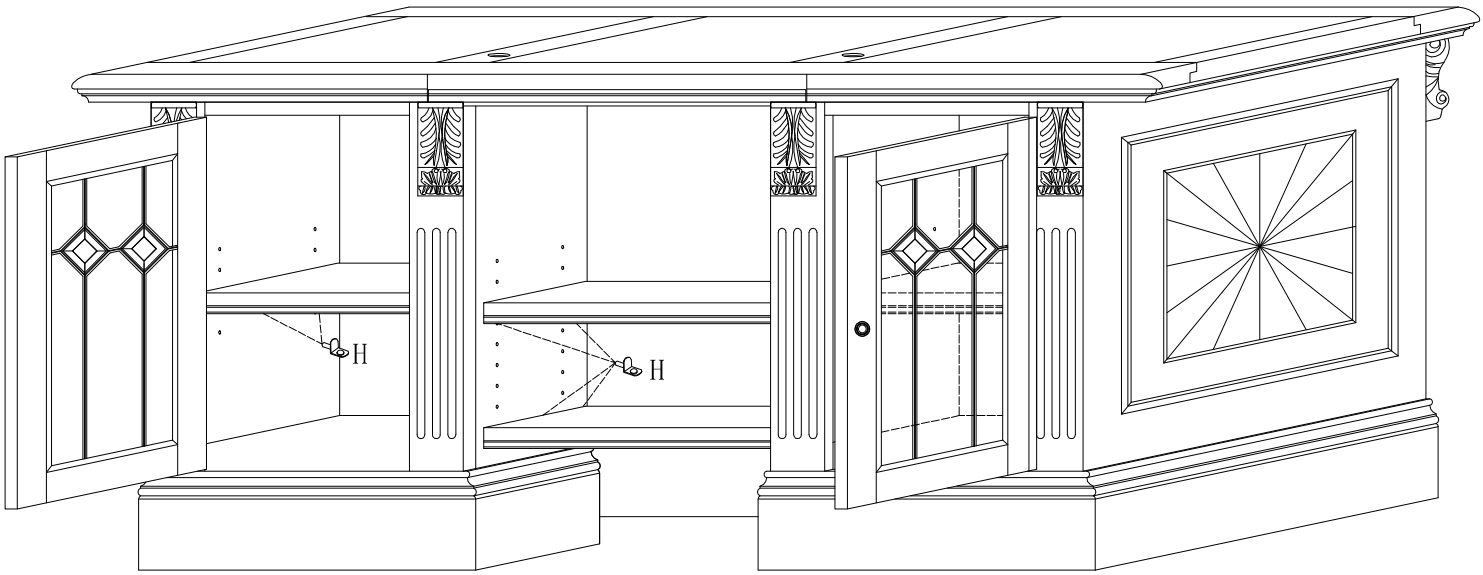

Assembly Instruction

Item No.HUN-480/481/482#

No	Description	Sketch	Q'TY
A	Wire buckle		6pcs
B	Screw		6pcs
C	Bolt		4pcs
D	Lock washer		4pcs
E	Flat washer		4pcs

No	Description	Sketch	Q'TY
F	Allen Wrench		1pc
G	Wire lid		2pcs
H	Shelf cleat		16pcs
I	Screw		10pcs
J	Pencil		1pc

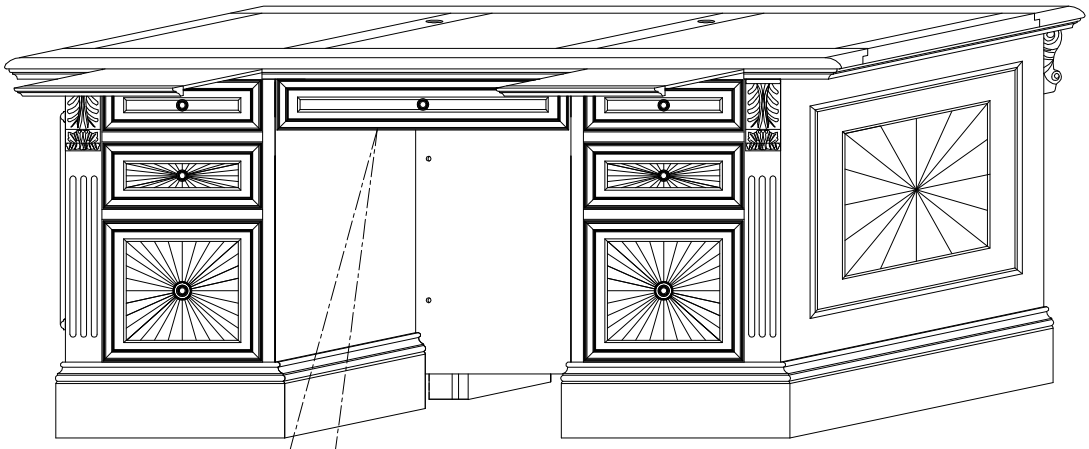

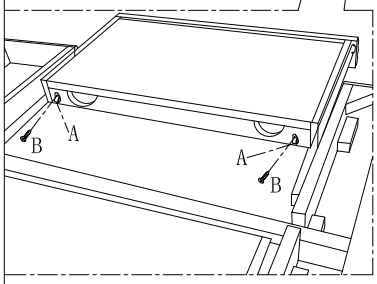

Detail# ①

Detail# ②

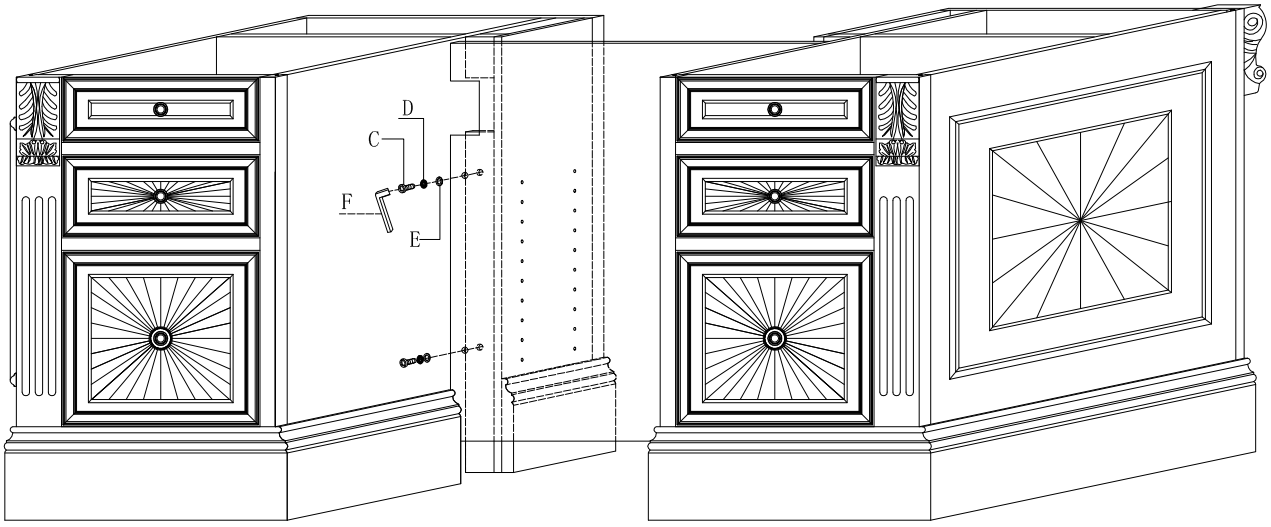

Assembly Instruction

Item No.HUN-490

No	Description	Sketch	Q'TY
A	Long screw		4pcs
B	Wire lid		1pc
C	Wire buckle		4pcs

No	Description	Sketch	Q'TY
D	Screw		4pcs

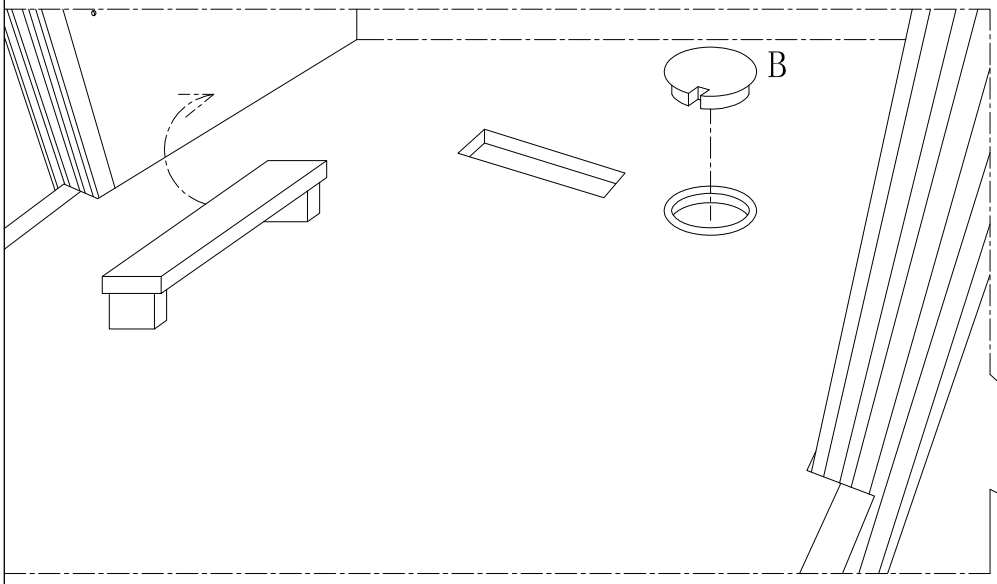

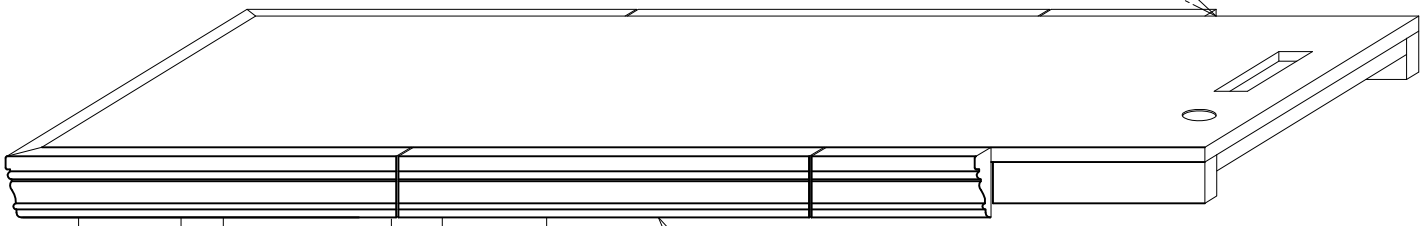

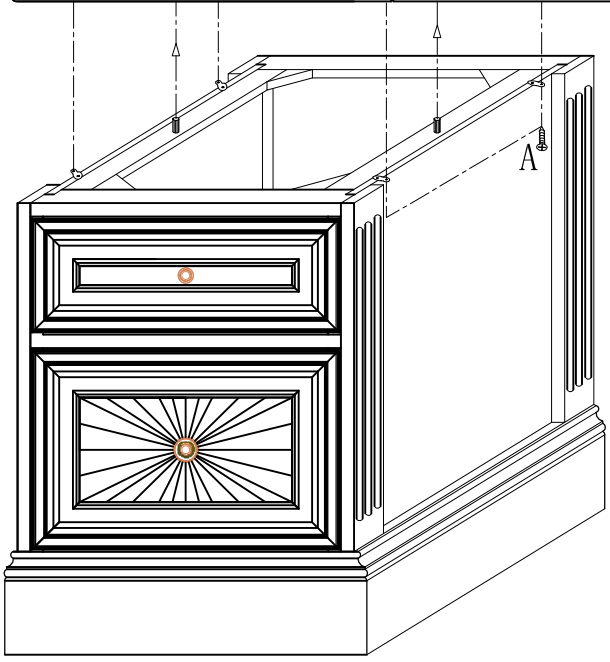

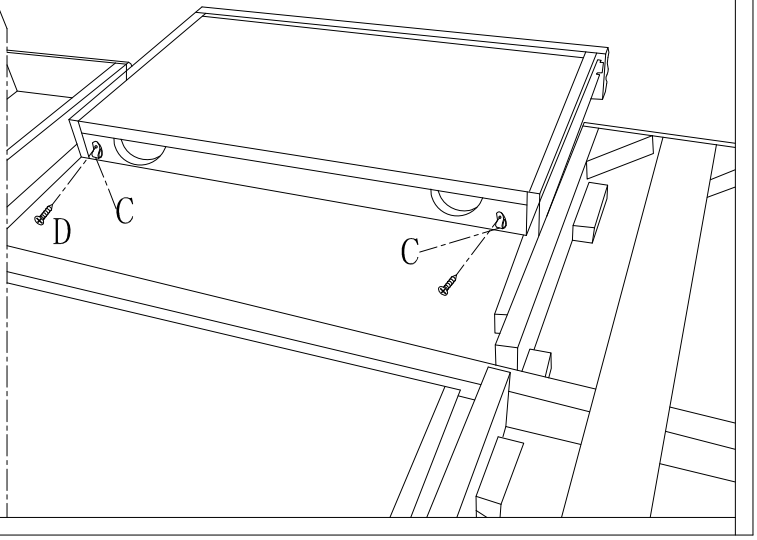

Assembly Instruction

Item No. HUN-491

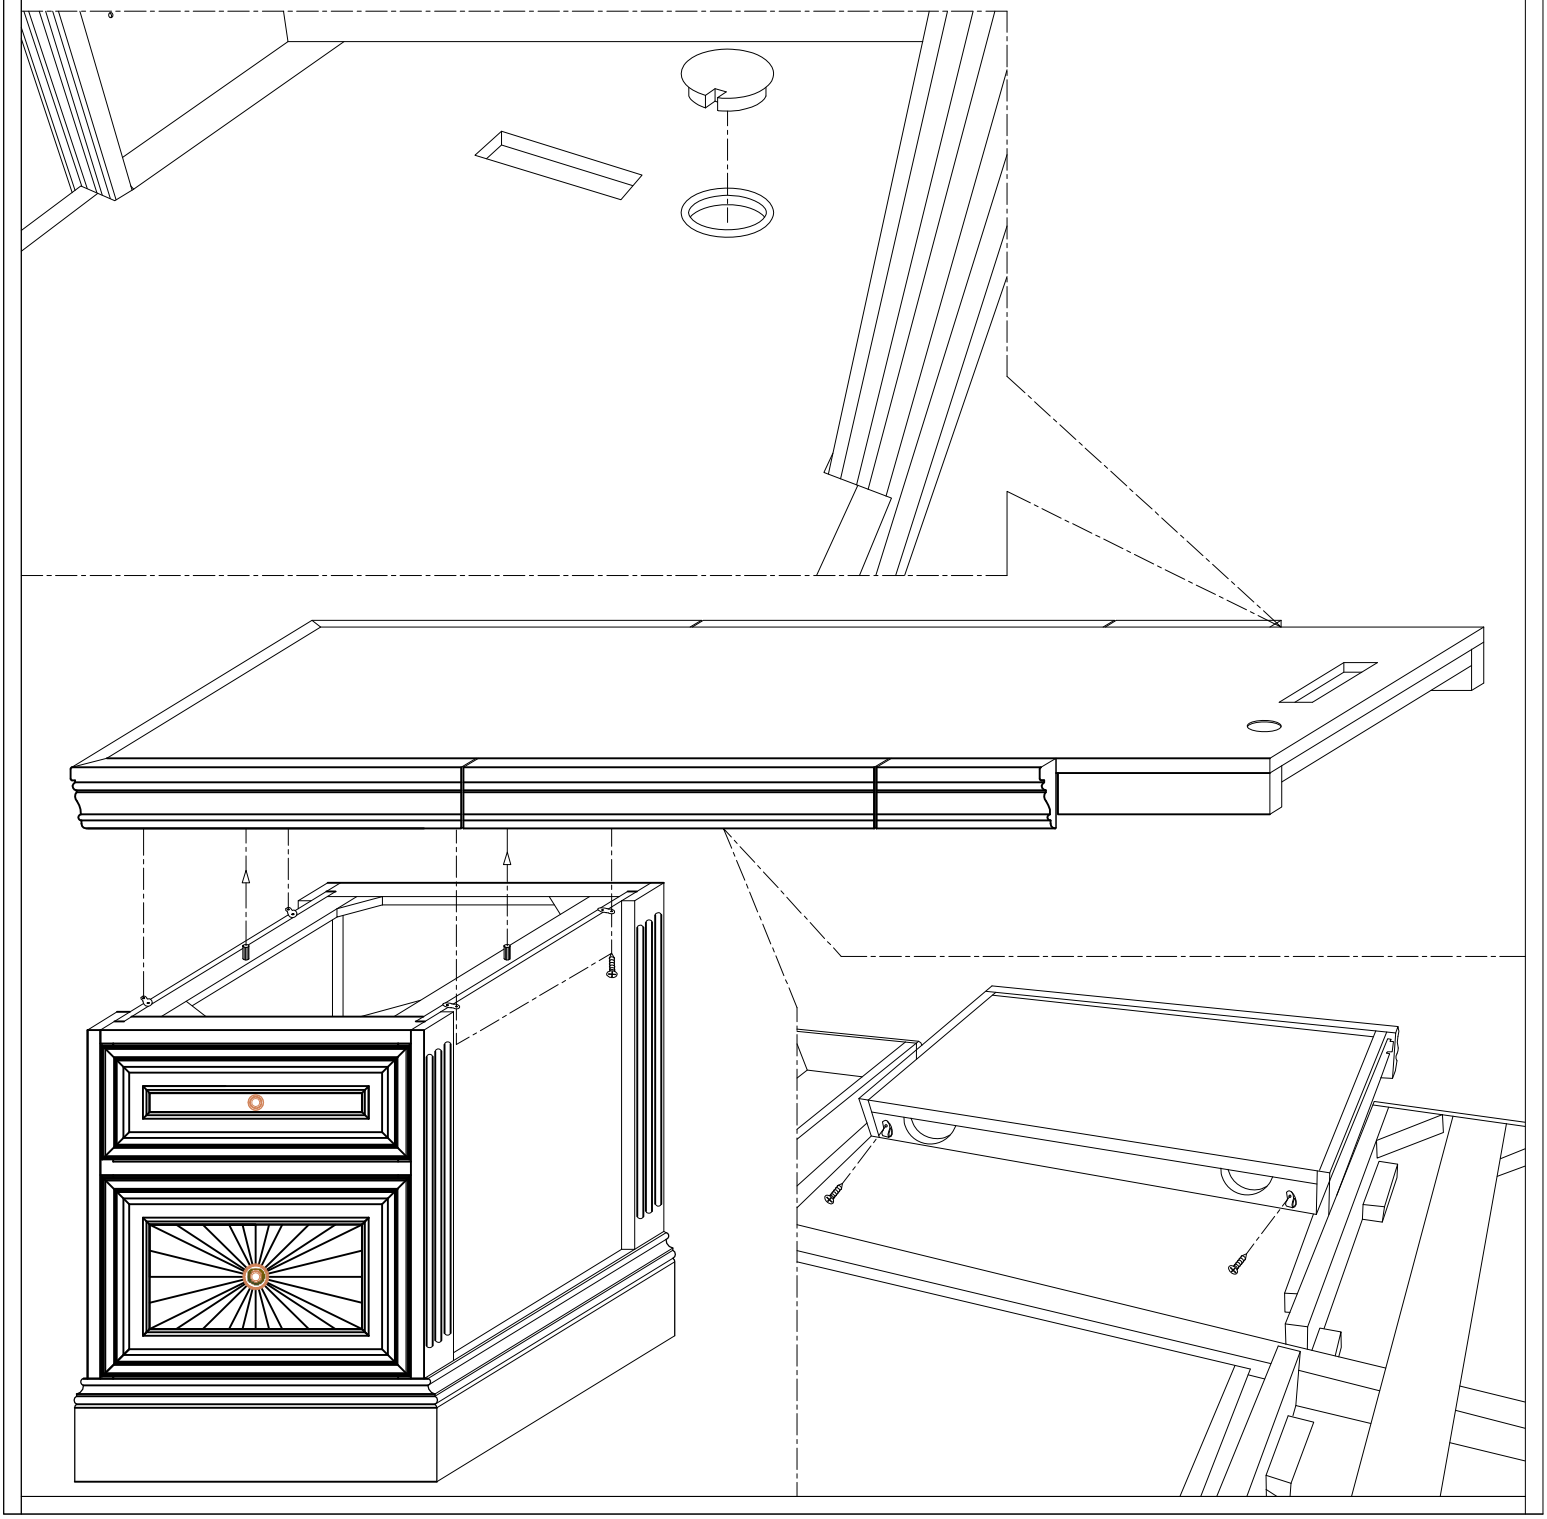

Assembly Instruction

Item No. HUN-440

No	Description	Sketch	Q'TY
D	Stopper		4pcs
E	Pencil		1pc

No	Description	Sketch	Q'TY
B	Canular bolt		4pcs
C	Canular bolt		4pcs

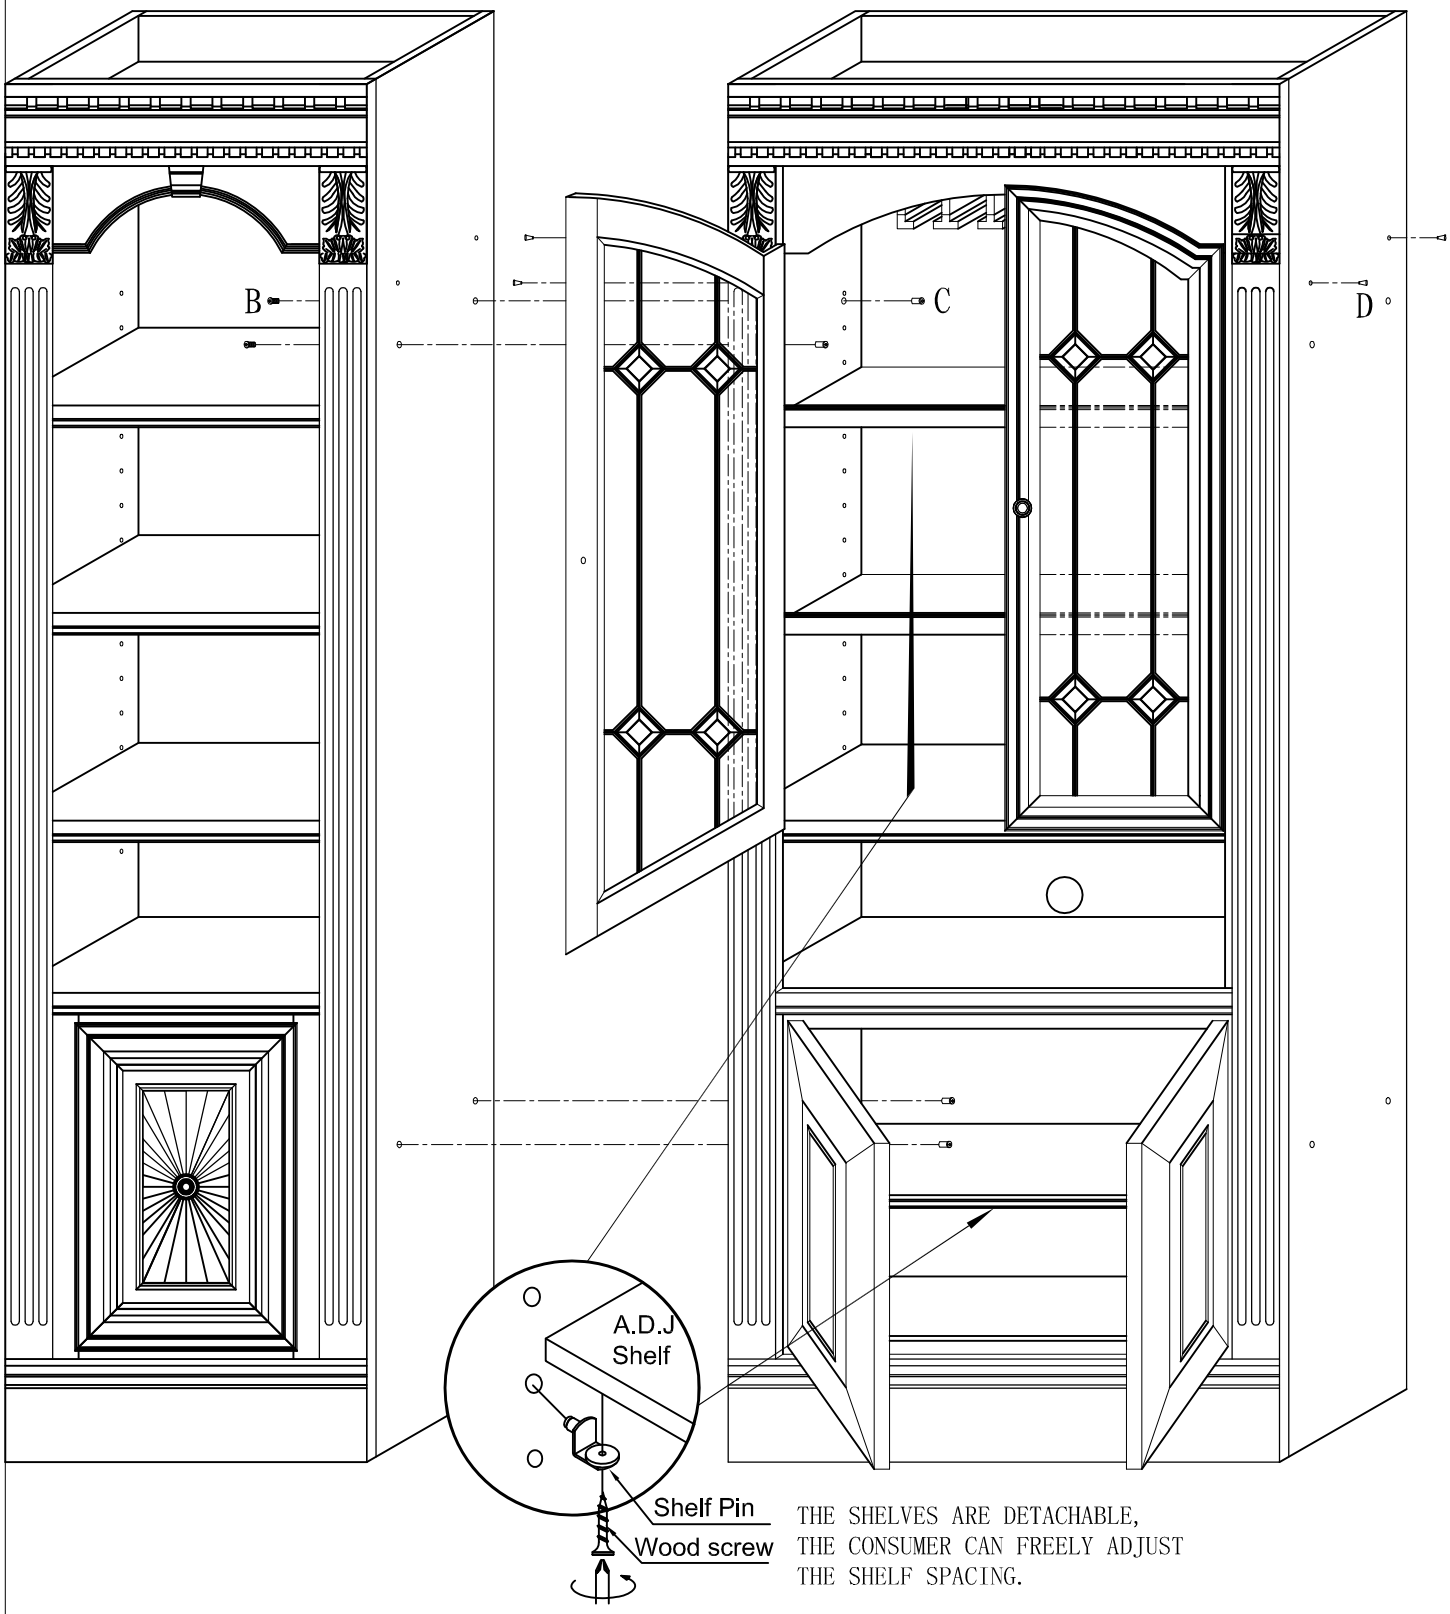

THE SHELVES ARE DETACHABLE,
THE CONSUMER CAN FREELY ADJUST
THE SHELF SPACING.

Assembly Instruction

Item No. HUN-430

No	Description	Sketch	Q'TY
D	Stopper		4pcs
E	Pencil		1pc

No	Description	Sketch	Q'TY
B	Canular bolt		4pcs
C	Canular bolt		4pcs

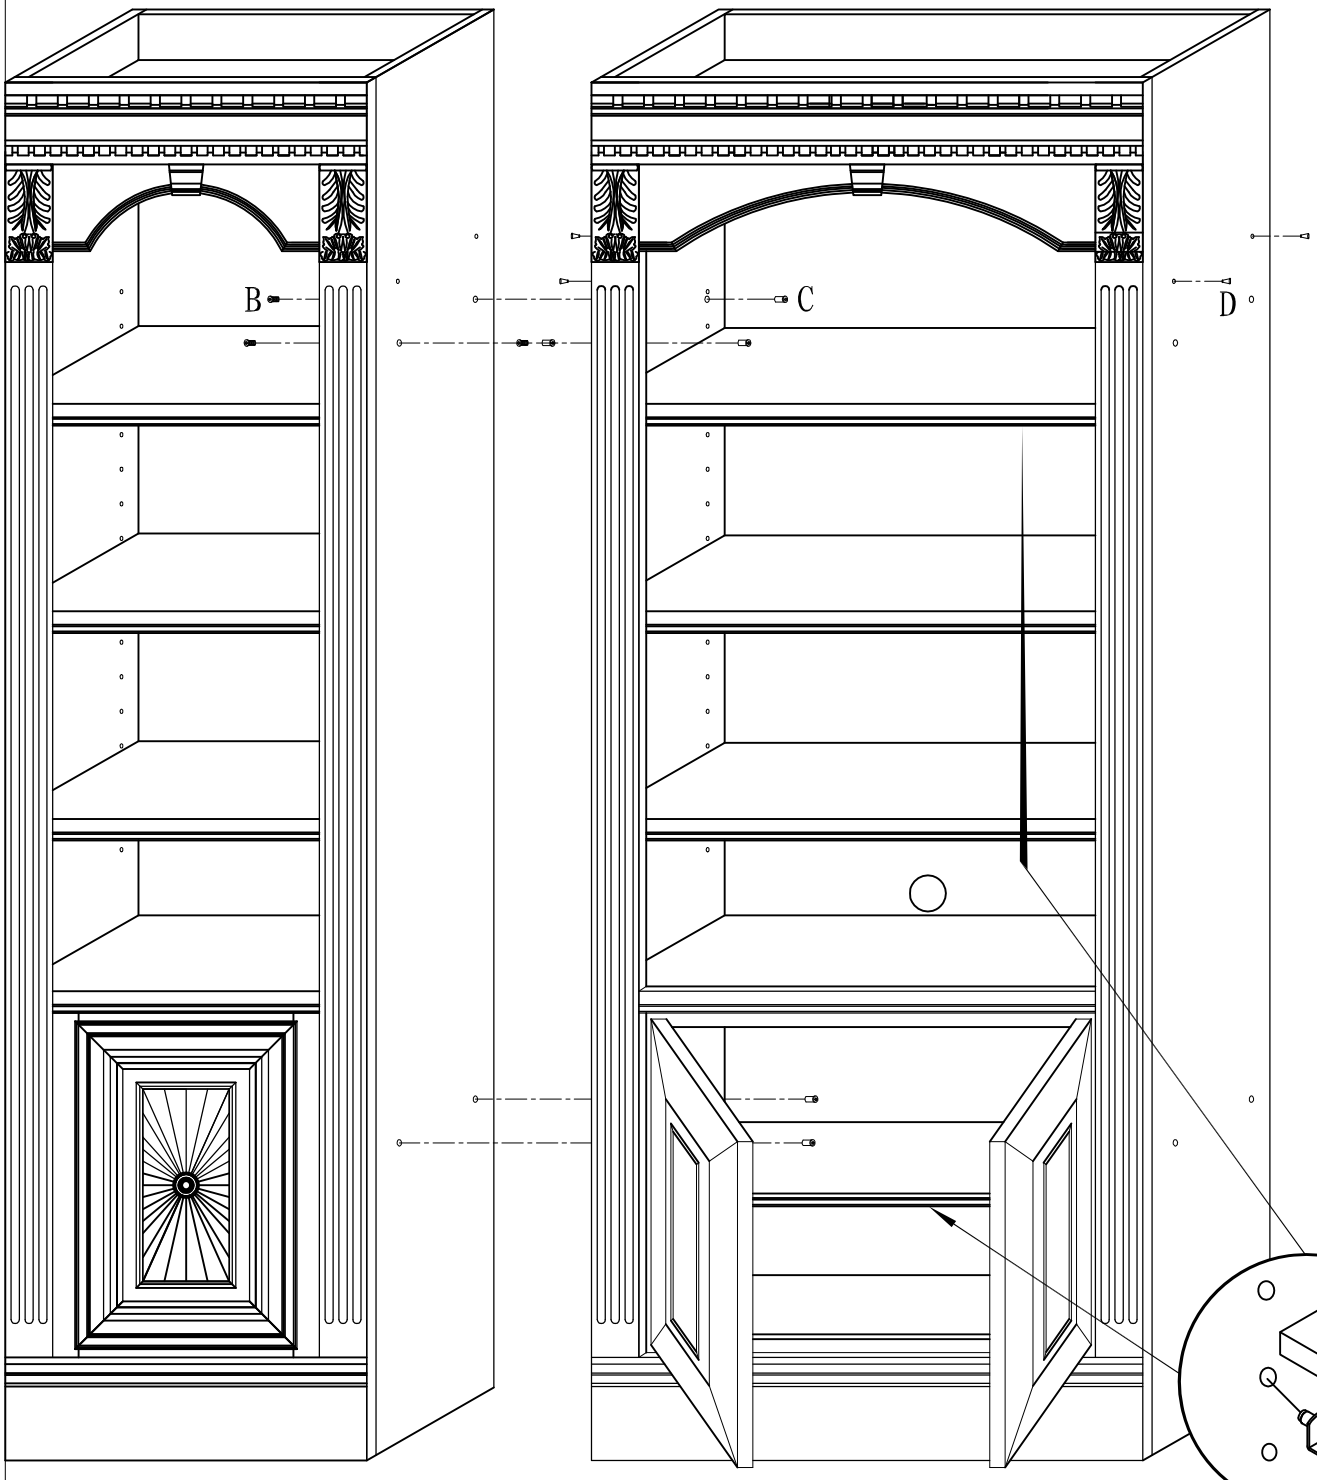

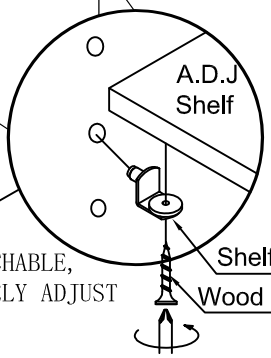

THE SHELVES ARE DETACHABLE,
THE CONSUMER CAN FREELY ADJUST
THE SHELF SPACING.

Assembly Instruction

Item No.HUN-420

No	Description	Sketch	Q'TY
D	Stopper		4pcs
E	Pencil		1pc

No	Description	Sketch	Q'TY
B	Canular bolt		4pcs
C	Canular bolt		4pcs

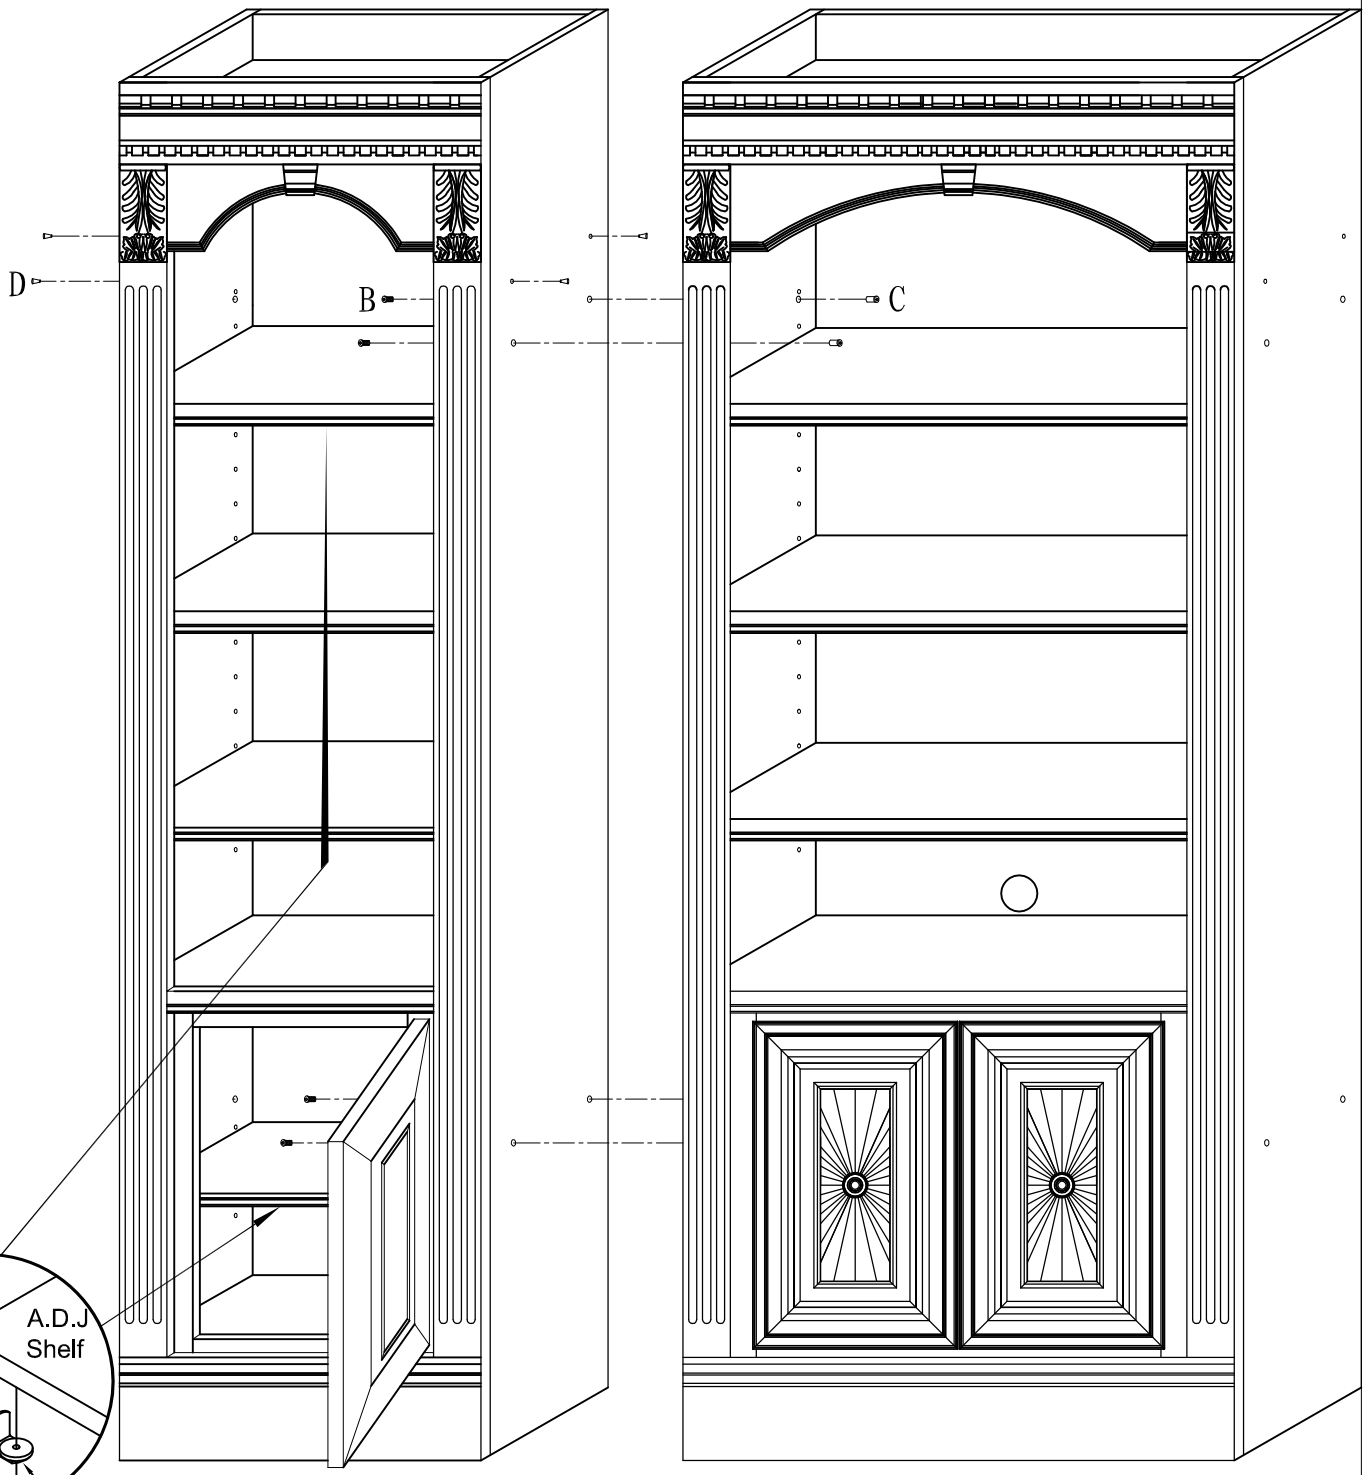

THE SHELVES ARE DETACHABLE,
THE CONSUMER CAN FREELY ADJUST
THE SHELF SPACING.

Assembly Instruction

Item No. HUN-450

No	Description	Sketch	Q'TY
A	Canular bolt		4pcs
B	Canular bolt		4pcs

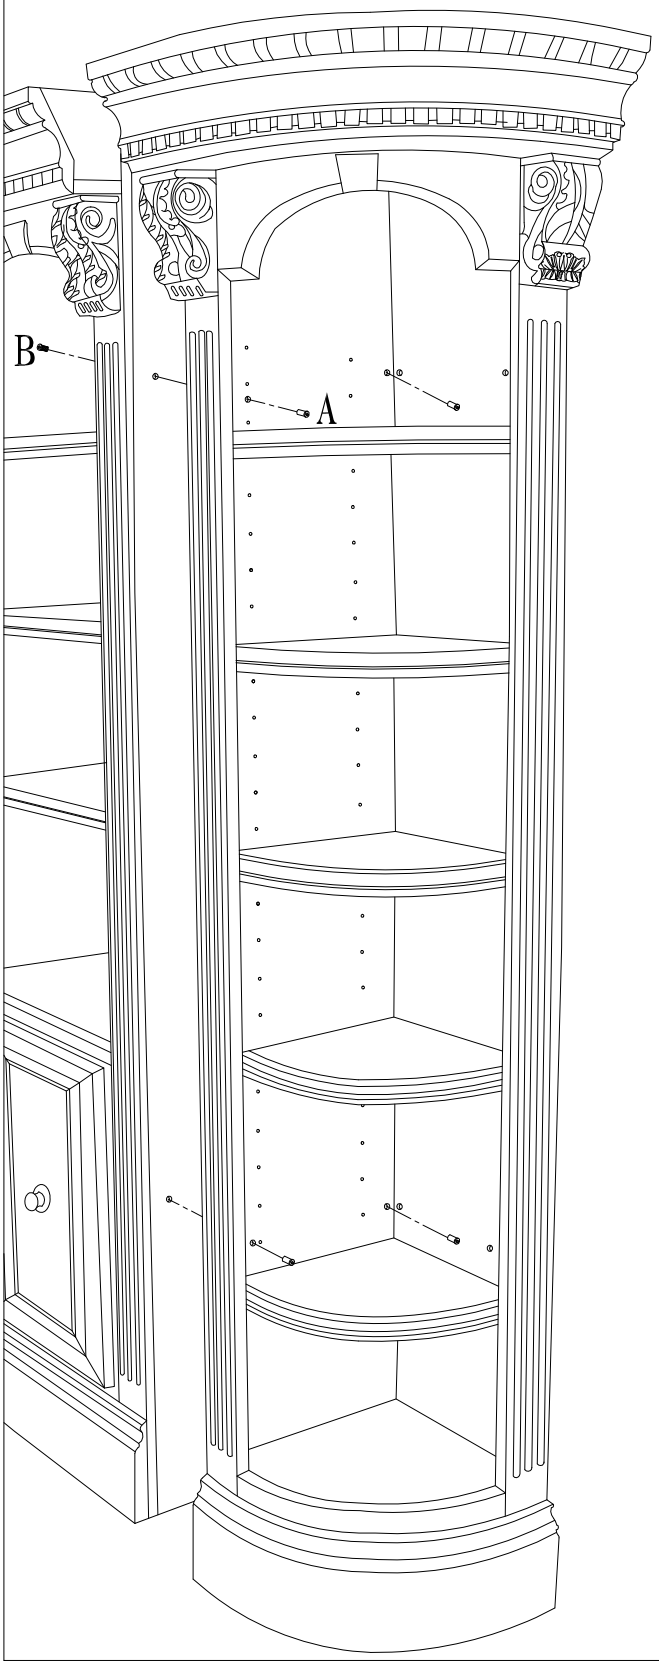

Assembly Instruction

Item No.HUN-455

No	Description	Sketch	Q'TY
B	Canular bolt		4pcs
C	Canular bolt		4pcs

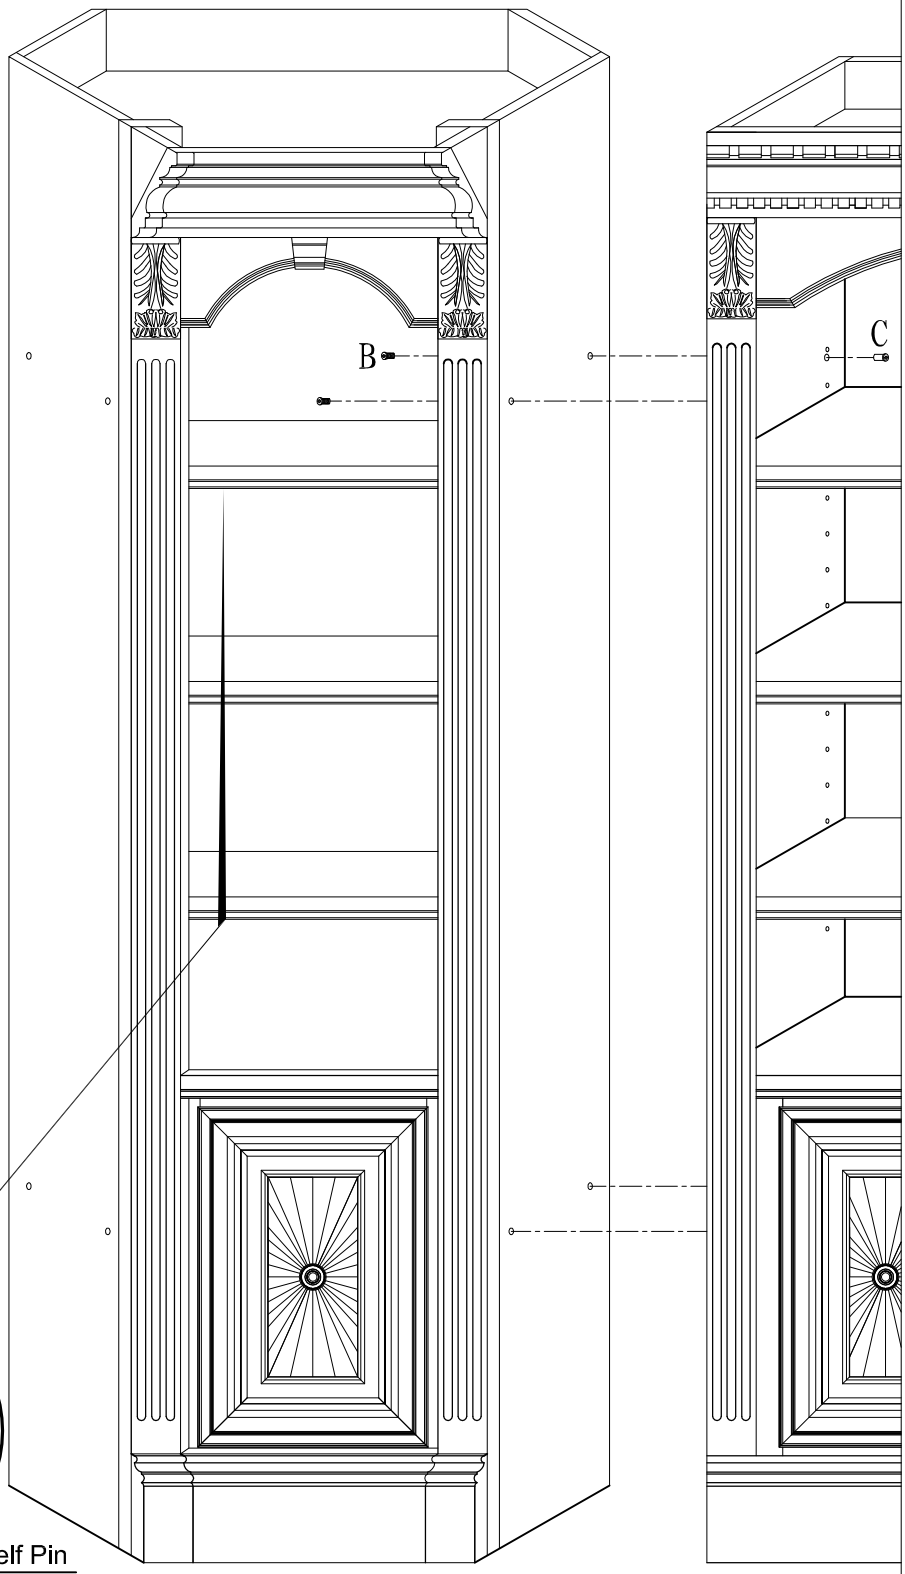

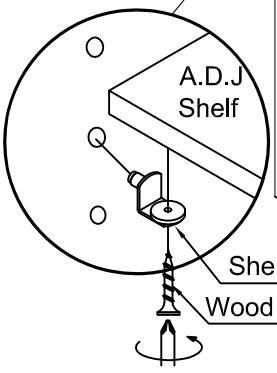

THE SHELVES ARE DETACHABLE,
THE CONSUMER CAN FREELY ADJUST
THE SHELF SPACING.

Assembly Instruction

Item No. HUN-485#

No	Description	Sketch	Q'TY
A	Wire buckle		4pcs
B	Screw	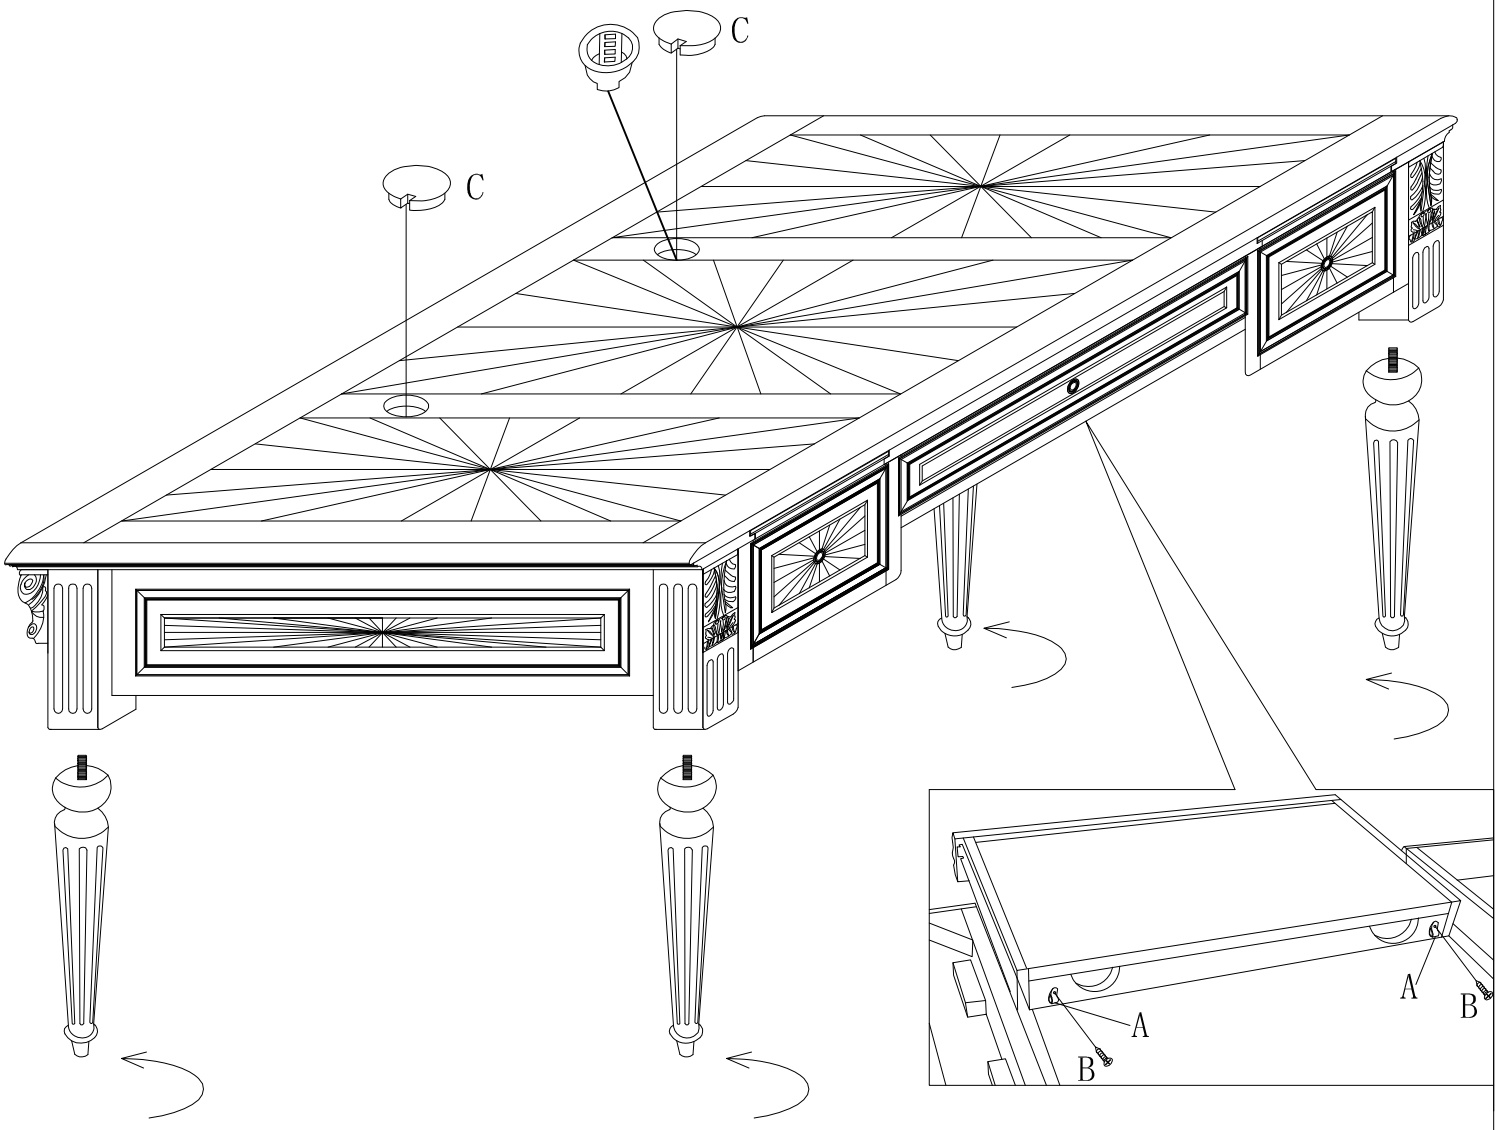	4pcs
C	Wire lid		2pcs
D	Pencil		1pc