ASSEMBLY GUIDE

Model : 5351-24

PART

(01) BACK FRAME
(02) LEFT LEG
(03) RIGHT LEG
(04) FRONT STRETCHER
(05) SIDE STRETCHER
(06) CUSHION SEAT

We suggest that you spend a short time reading through this leaflet and the follow the simple step by step instructions.

Do not throw away any of the packaging until you have checked that you have all the component parts and fittings.

Please dispose of the packaging carefully once you have finished.

NOTE

DO NOT TIGHTEN ALL THE SCREWS UNTIL THE CHAIR HAS BEEN PUT ON A FLAT SURFACE TO ADJUST & LEVEL ALL THE LEGS SO THAN THEY DO NOT WOBBLE ONCE ADJUSTER THEN TIGHTEN ALL THE SCREWS.

HARDWARE LIST

NO	DESCRIPTION	QTY
A	JCBC SCREW 90mm	4
B	JCBC SCREW 55mm	5
C	FLAT WASHER	9
D	SPRING WASHER	8
E	SCREW M4 X 38mm	6
F	SHORT ALLEN KEY M4	1

STEP -1

Remove the Black woven on bottom of the box seat.

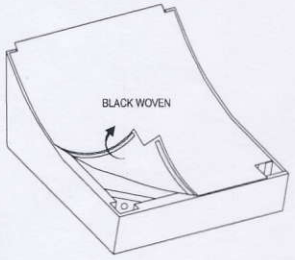

STEP -2

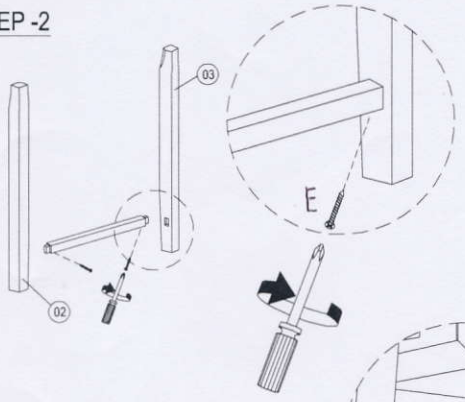

STEP -3

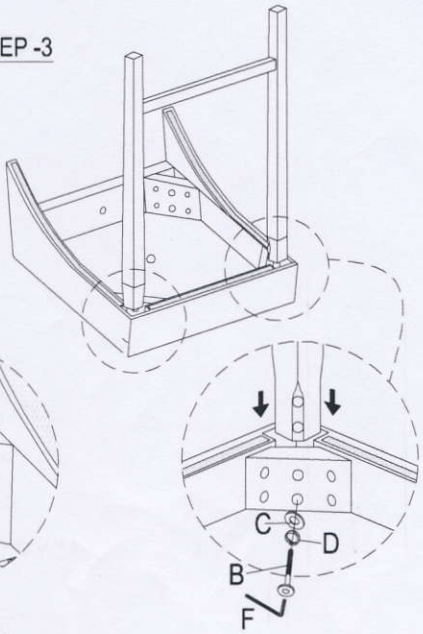

STEP -4

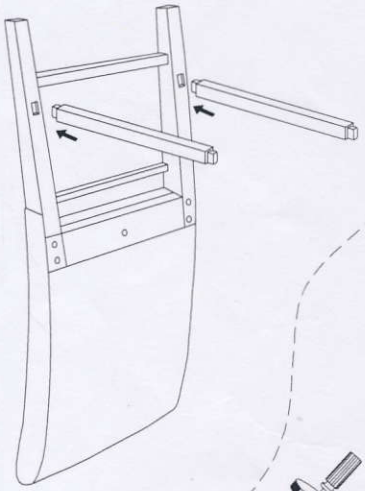

STEP -5

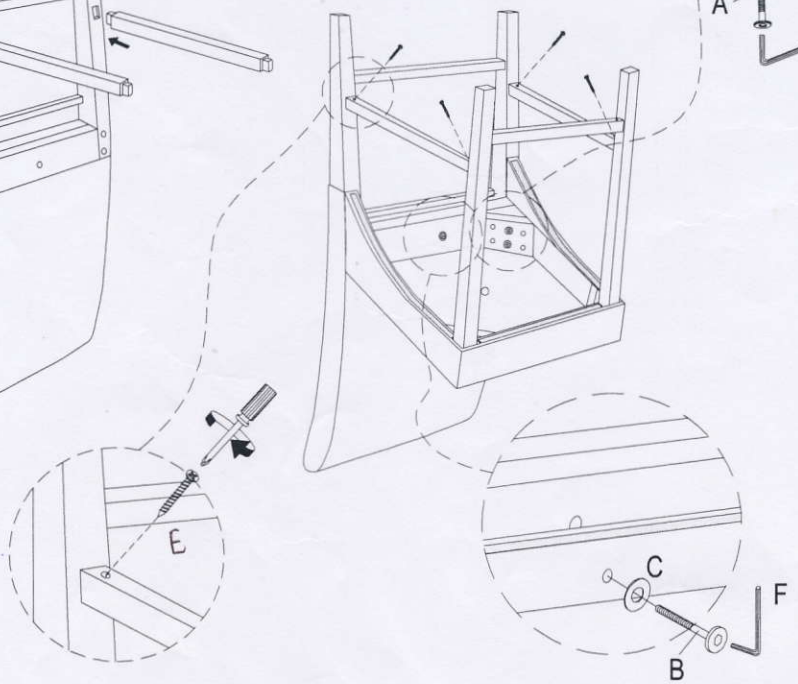

STEP -6
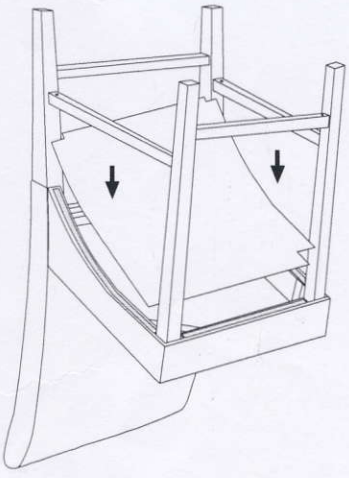
Lastly, cover back the black woven to the bottom of the box seat.