




**4880**

**COASTER TETON**  
**LOFT LADDER**

**7030-00405**

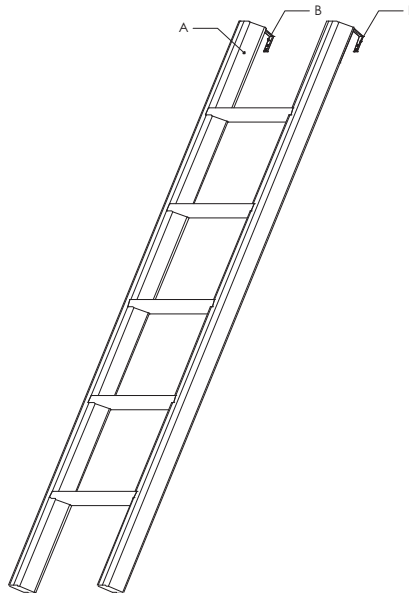

---

**PARTS LIST:**

- A) 1 -Wooden Bunkbed Ladder
- B) 2 -Steel Brackets
- C) 6 -1 1/4" Screws

**TOOLS REQUIRED:**

- 1) Phillips Head Screwdriver

**ASSEMBLY INSTRUCTIONS:**

**NOTE:**

**Make sure you have all parts before beginning assembly. If you need a part, contact the dealer where you purchased your bed.**

- 1) Locate the pre-drilled holes in the ladder.
- 2) Attach the brackets(B) hook-side-out with 4 screws(C), using the top four holes and tighten.
- 3) Hook ladder brackets over top guardrail on Roundup Bunk, or over the top mattress rail on the Montana Loft.
- 4) Secure ladder brackets rail with 2 screws(C) and tighten.