


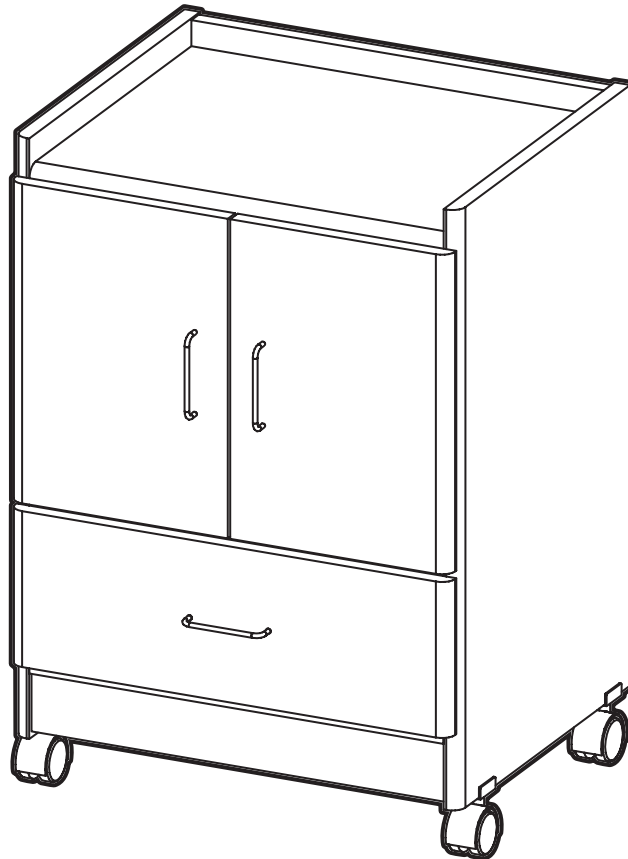

# IRONWOOD

## CB1

### COFFEE BAR



#### IMPORTANT!

**Assembly may require the assistance of another person.**

**Before you begin assembly:**

**READ THE DIRECTIONS** all the way through one time. This will speed up the process and help you understand the sequence of steps.

**COUNT THE PARTS AND HARDWARE** before assembly. This ensures you have received all necessary parts before you begin.


**TOOLS:** You may need a Phillips head screwdriver, a medium slotted screwdriver or a plastic mallet. To protect your new furniture from damage during assembly, it is recommended to work on a carpeted surface.

In the event any parts are missing from this package, send your name, address, telephone number, and a description of the missing part(s) to: **PARTS, Box 1420, Missoula, MT 59806** or call: **1-800-769-5693** or **FAX 1-800-445-5281**.


**CAUTION:** On assemblies requiring glue, make sure the unit is assembled correctly before gluing. Once this unit is assembled with glue, the manufacturer will not be responsible for damaged parts. Keep a damp cloth or sponge handy to wipe off excess glue.

To care for this furniture, simply wipe with a cloth dampened with glass cleaner containing ammonia-D.


PARTS DIAGRAM

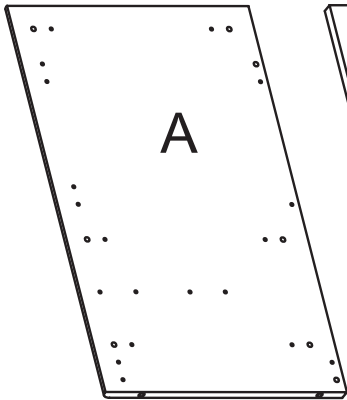


Left Side	05850341	1 ea.
-----------	----------	-------

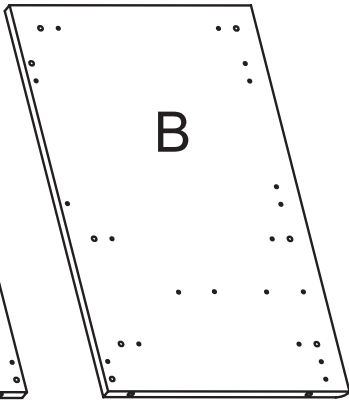


Right Side	05850341	1 ea.
------------	----------	-------

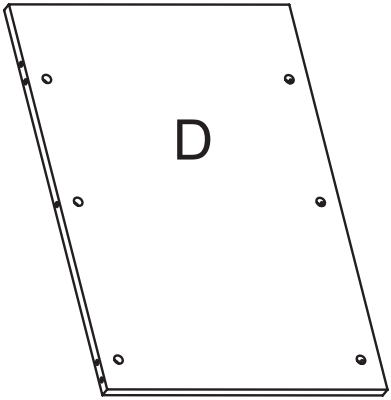

Back	05850352	1 ea.
------	----------	-------

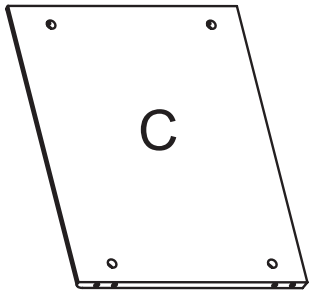


Top	05850301	1 ea.
-----	----------	-------

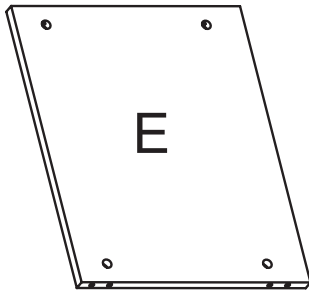


Bottom	05850311	1 ea.
--------	----------	-------



Toe Board	05850372	1 ea.
-----------	----------	-------

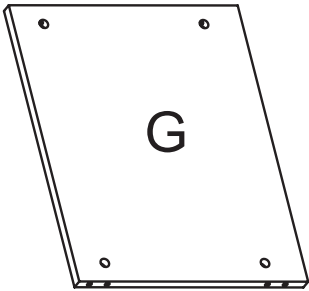

Shelf	05850311	1 ea.
-------	----------	-------

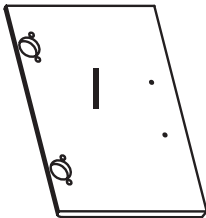

Doors	05850373	2 ea.
-------	----------	-------




Drawer Front	05850363	1 ea.
--------------	----------	-------



Drawer Sides	069270	2 ea.
--------------	--------	-------



Drawer Front/Back	069070	2 ea.
-------------------	--------	-------

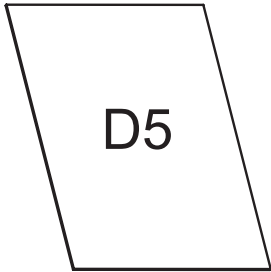

Drawer Bottom	191665	1 ea.
---------------	--------	-------

# HARDWARE




H1	Minifix Cam	909810	18 ea.
----	-------------	--------	--------




H2	Minifix Bolt	909834	18 ea.
----	--------------	--------	--------



H3	Wood Dowel	195000	16 ea.
----	------------	--------	--------

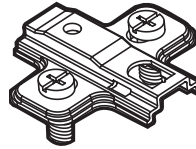


H4	Hinge Plate	400201	4 ea.
----	-------------	--------	-------

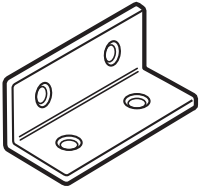

H5	Angle Bracket	401170	2 ea.
----	---------------	--------	-------



H6	Varianta Screw	988060	8 ea.
----	----------------	--------	-------

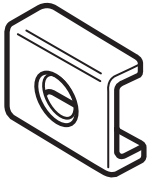


H7	Caster Brackets	402303	4 ea.
----	-----------------	--------	-------




H8	Caster Socket	402301	4 ea.
----	---------------	--------	-------



H9	Stem Casters	402290	4 ea.
----	--------------	--------	-------

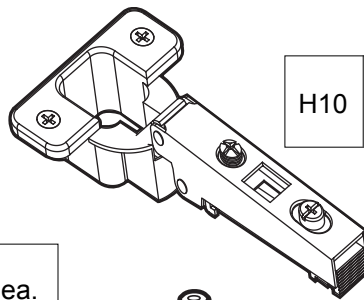

H10	Hinge	400200	4 ea.
-----	-------	--------	-------

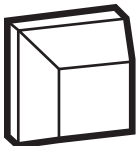

H11	Square Black Bumper	298030	4 ea.
-----	---------------------	--------	-------




H12	White Glue	295020	1 ea.
-----	------------	--------	-------




H13	Confirmat 5x50 Screws	950100	8 ea.
-----	--------------------------	--------	-------




H14	Washer Head Screws	920200	2 ea.
-----	-----------------------	--------	-------

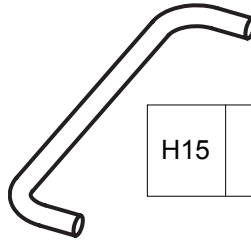

H15	Drawer/Door Pulls	200070	3 ea.
-----	----------------------	--------	-------




H17	1-1/4" Panhead Screws	901212	4 ea.
-----	--------------------------	--------	-------



H16	1-3/4" Quad Washerhead Screws	902215	2 ea.
-----	----------------------------------	--------	-------



H18	#6 x 5/8 Flathead Screws	H0750	8 ea.
-----	-----------------------------	-------	-------

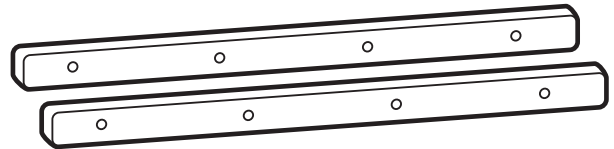


S1	Plastic Drawer Slides	267100	2 ea.
----	--------------------------	--------	-------

### Using the Minifix System:



Insert the Minifix Cams into the appropriate holes with the arrow facing outwards as shown.



When screwing post into hole, **Do Not** over tighten. Screw post down until bottom face of post flange just touches board surface.

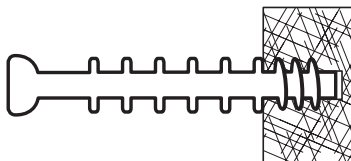

Using the #2 Phillips screwdriver, rotate the Cam Devices a half turn clockwise until snug.


To disassemble, turn the Cam Devices counter-clockwise and remove panels.

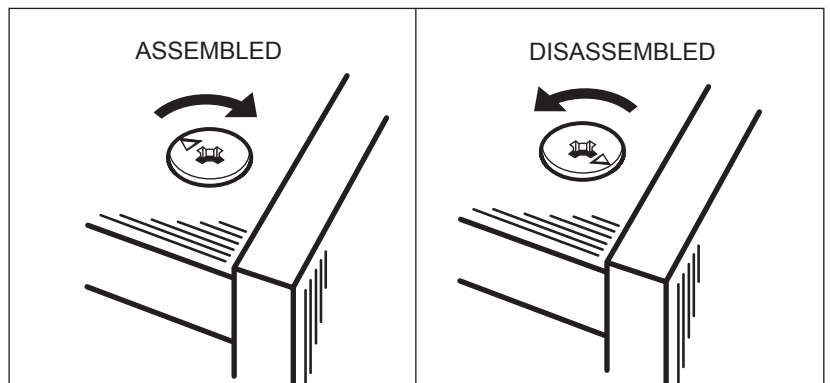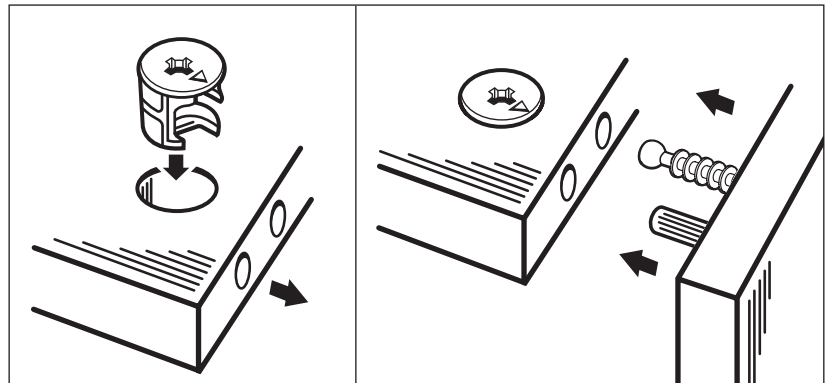

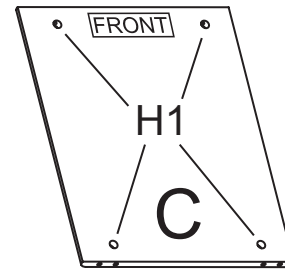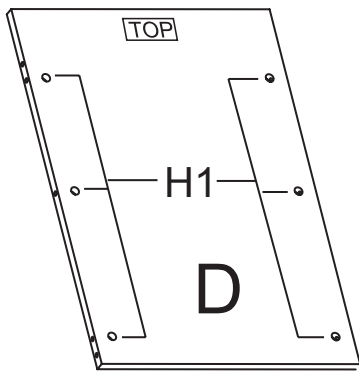
**#1**

Place the Back (D) on a clean, carpeted surface as shown. Insert six Minifix Cams (H1) into the Back where indicated with the arrows of the cams facing out.


Place the Top (C) on a clean, carpeted surface as shown. Insert four Minifix Cams (H1) into the Top where indicated with the arrows of the cams facing out.

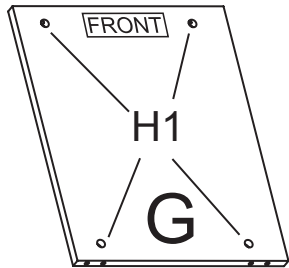


Place the Shelf (G) on a clean, carpeted surface as shown. Insert four Minifix Cams (H1) into the Shelf where indicated with the arrows of the cams facing out.

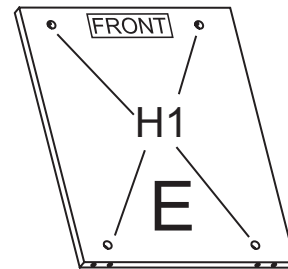

Place the Bottom (E) on a clean, carpeted surface as shown. Insert four Minifix Cams (H1) into the Bottom where indicated with the arrows of the cams facing out.

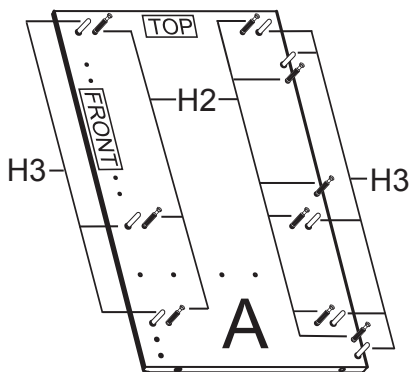
**#2**

Screw nine Minifix Bolts (H2) and insert eight wood Dowels (H3) into the Left Side (A) where indicated.

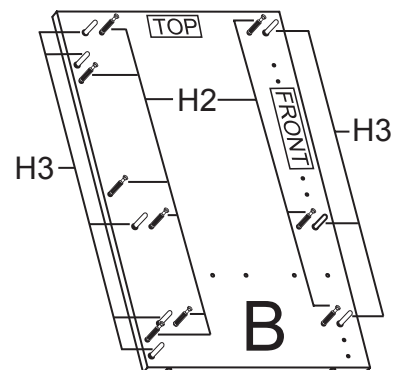



Screw nine Minifix Bolts (H2) and insert eight wood Dowels (H3) into the Right Side (B) where indicated.

#3

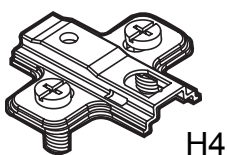




Attach Hinge Plates (H4) to Left Side (A) and Right Side (B) using the attached screws into the pre-drilled holes as shown.

**IMPORTANT!** The large hole and slots must be oriented to the rear edge of the Hinge Plates as shown.

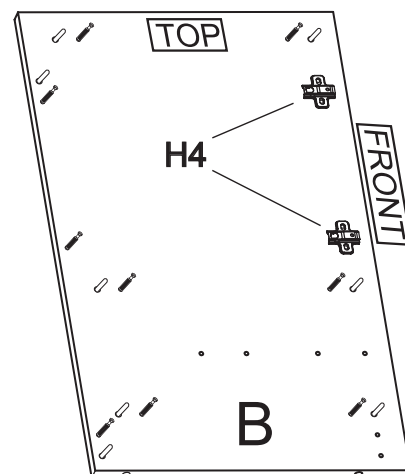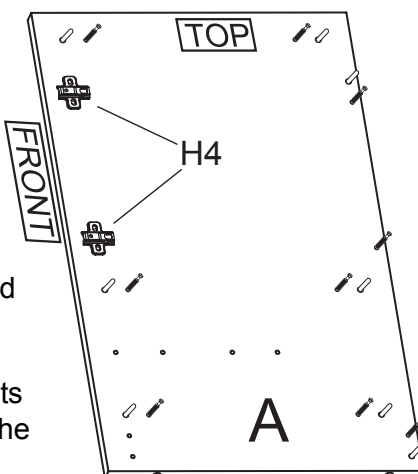


#4

Screw plastic slides in place with four Flathead Screws (H18) each.

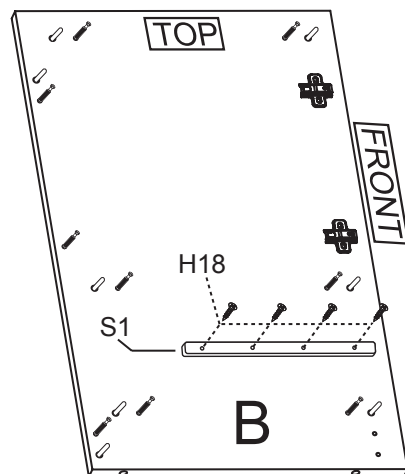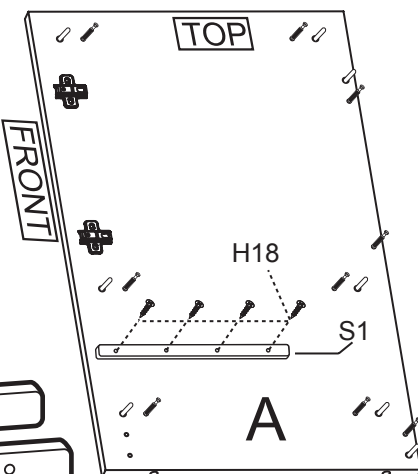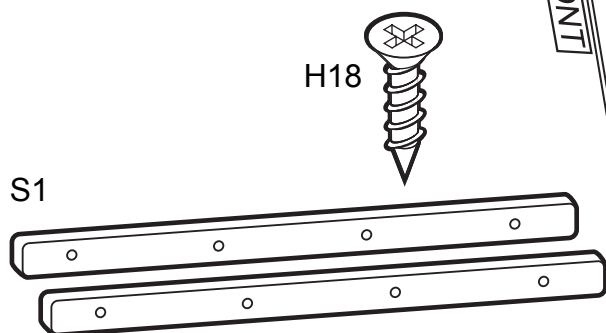


#5

Position the Back (D) onto the Left Side (A) as shown. Turn the arrows of the three indicated Minifix Cams (H1) in the Back clockwise to secure in place.

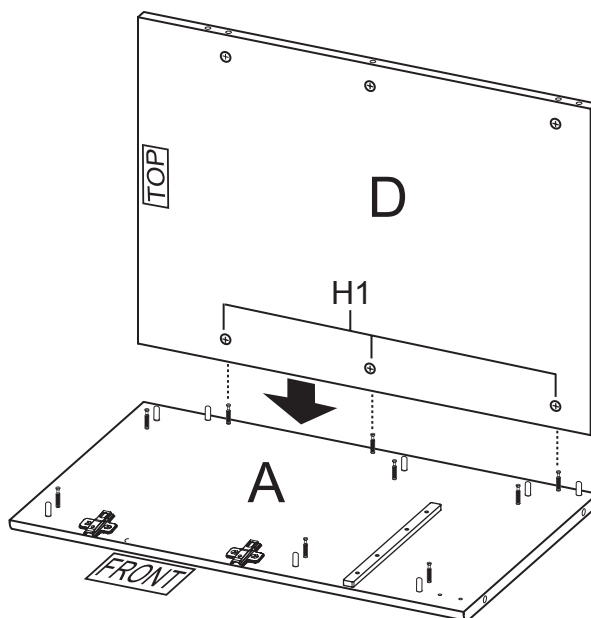


**#6**

Position the Top (C) onto the Left Side (A) as shown. Turn the arrows of the two indicated Minifix Cams (H1) in the Top clockwise to secure in place.

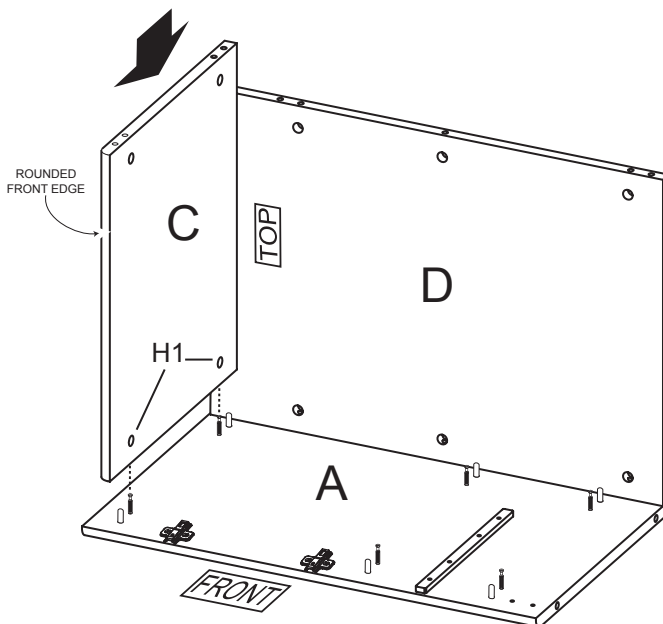**#7**


Position the Shelf (G) onto the unit as shown. Turn the arrows of the two cams (H1) in the Shelf clockwise to secure in place.

Position the Bottom (E) onto the unit as shown. Turn the arrows of the two cams (H1) in the Bottom clockwise to secure in place.

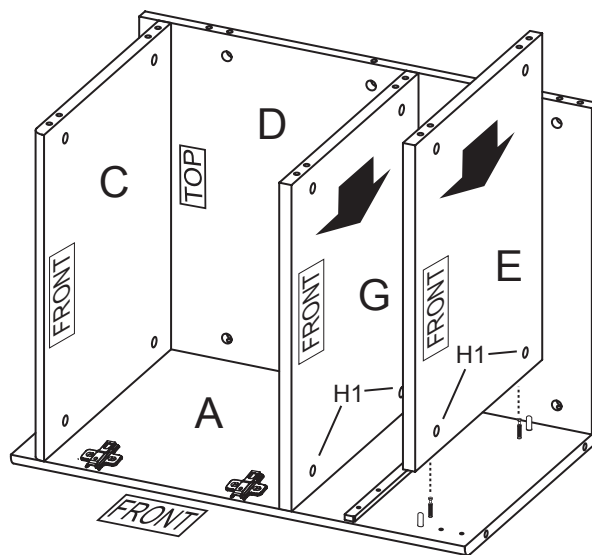**#8**


Position Right Side (B) posts and dowels into the corresponding cams of the unit as shown.

Rotate all six Minifix Cams clockwise to lock in place.

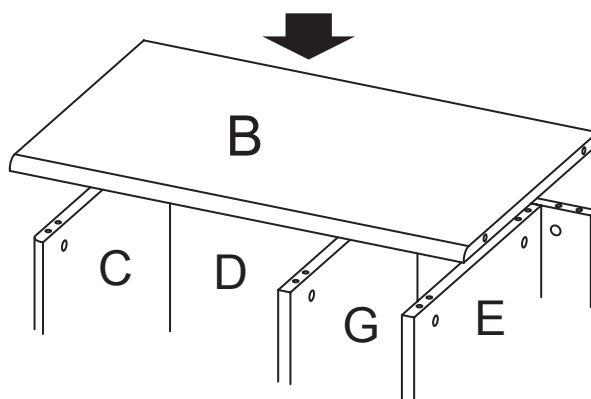

**#9**

Turn the unit face down. Align the Toe Board (F) between the Left and Right Side (A and B) and secure in place using two Angle Brackets (H5) and the Varianta Screws (H6) as shown.

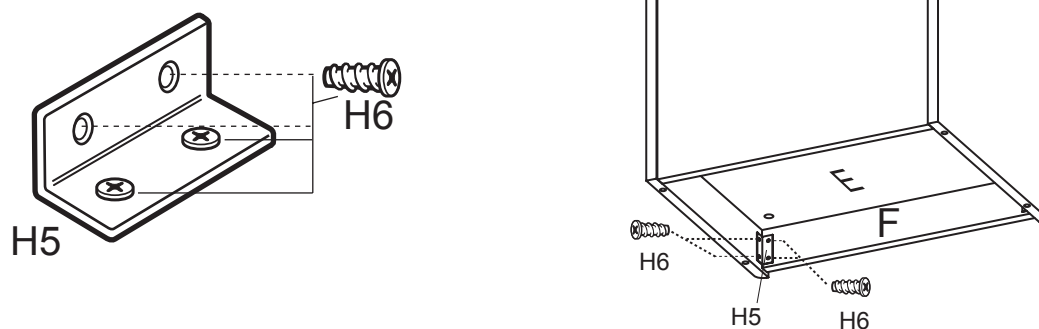


**#10**

Position the Caster Brackets (H7) over the corresponding holes in the bottom edges of the Side Panels.

Insert Caster Sockets (H8) into the holes and tap until bottomed out against the Caster Brackets.

Insert the Casters (H9) into the Caster Sockets and tap into place.


**Note: The locking casters should be positioned toward the front of the unit.**

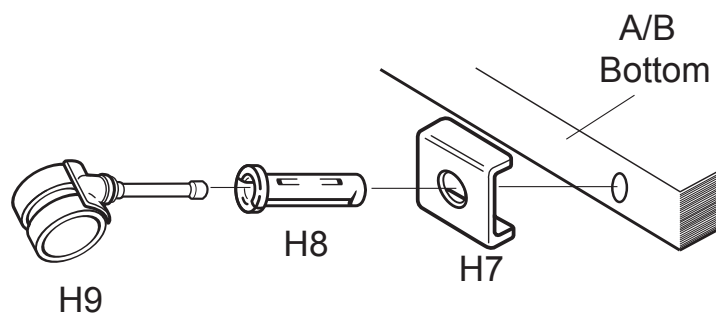

## #11


Using a Plastic Mallet, insert the Hinges (H10) into both Doors (I).

Remove backings and press Square Black Bumpers (H11) onto the opposite corners of Doors where indicated.

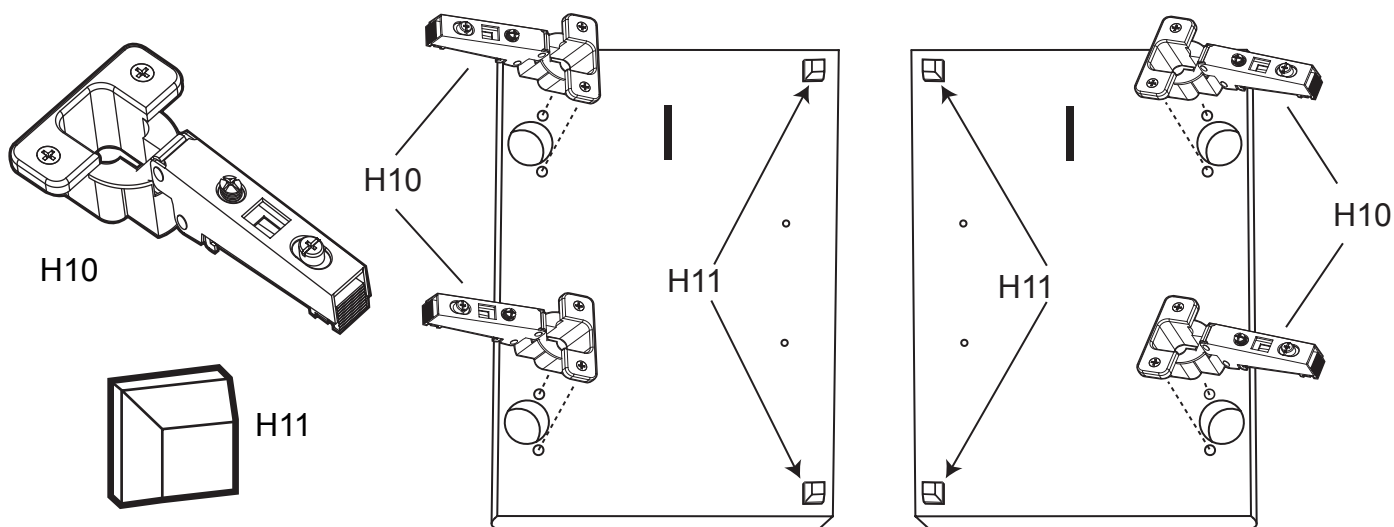


## #12

Turn the unit upright. To attach the Doors (I) to the unit, slide the slots of the Hinges (H10) onto the Hinge Plates (H4) until the release buttons click into place.

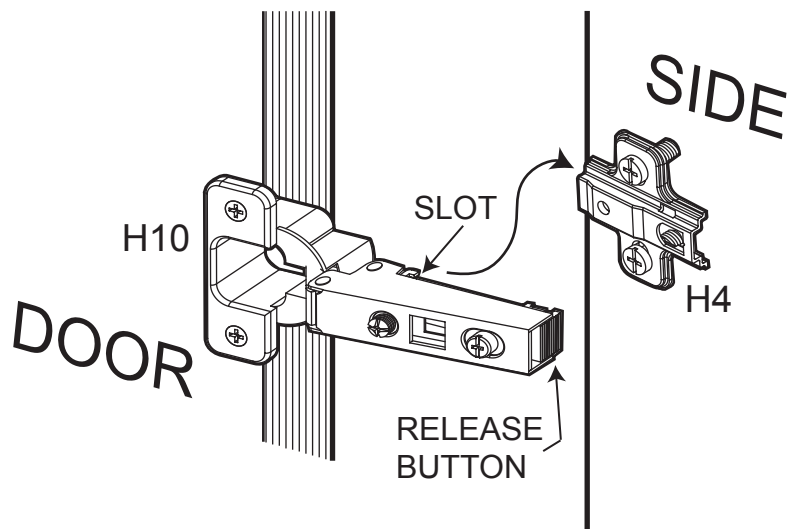

## #13


Adjust Doors (I) to open and close easily by loosening hinge screws and repositioning Hinge as shown. Tighten hinge screws when proper alignment is achieved.

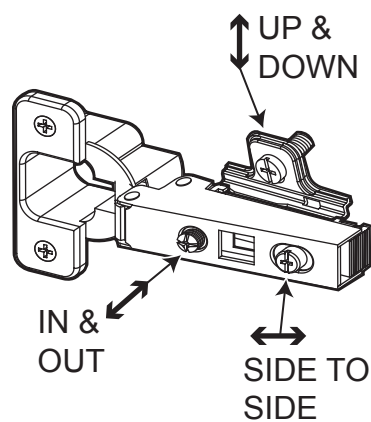

## #14

Spread a thin layer of Glue (H12) on one edge of each Drawer End Panel (D2) as shown.



Use four Confirmat Screws (H13) to attach the Drawer End Panels to a Drawer Side (D1) with grooves aligned on the inside as shown.

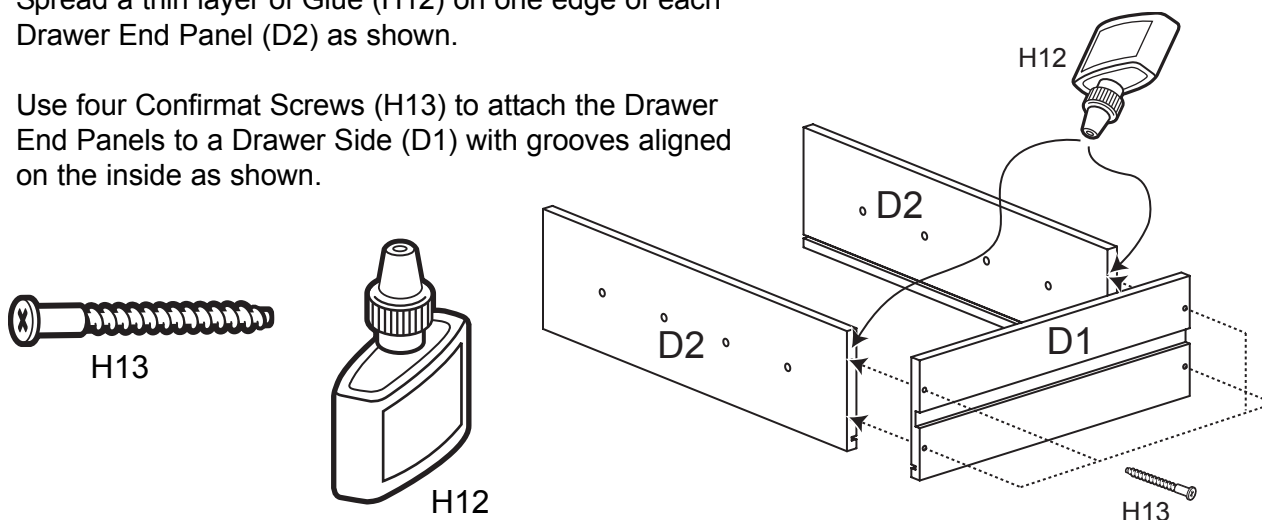

## #15

Spread a thin layer of glue on both end edges and one side edge of Drawer Bottom (D5).



Slide Drawer Bottom into the grooves of the Drawer End Panels (D2) until seated into the Drawer Side (D1) groove as shown.

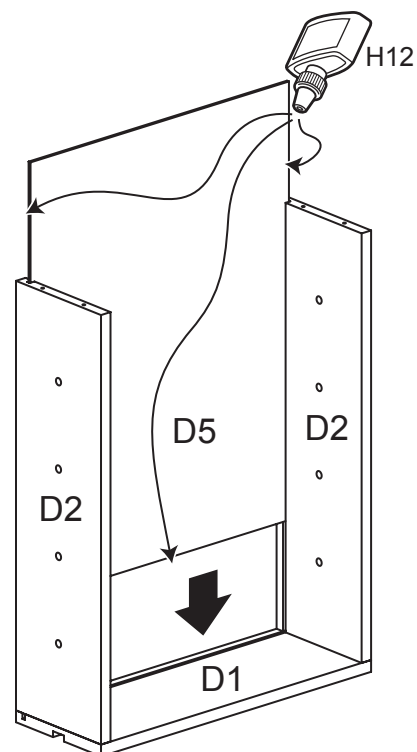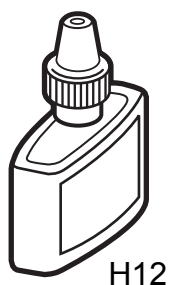

## #16

Apply glue to exposed edges of the Drawer Bottom (D5) and End Panels (D2). Position the other Drawer Side (D1) onto unit with groove aligned with the edge of the bottom.

Secure Drawer Side to Drawer End Panels using four Confirmat Screws (H13) as shown.

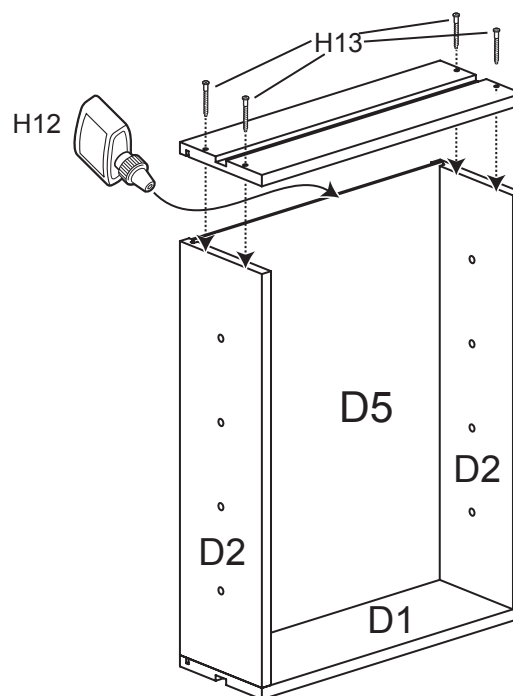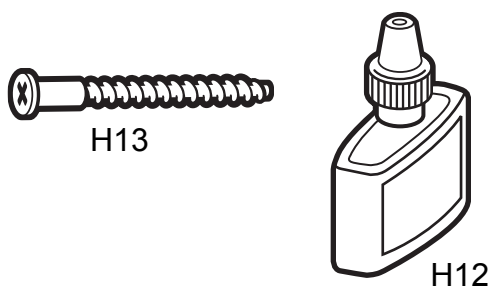


## #17


Attach Drawer Front (J) to the Drawer unit using two Washer Head Screws (H14) in the outside holes as shown.



H14

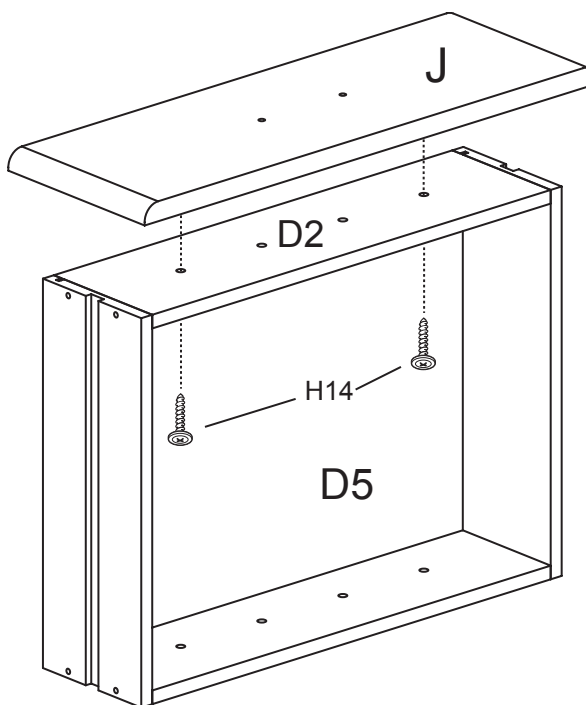

**#18**

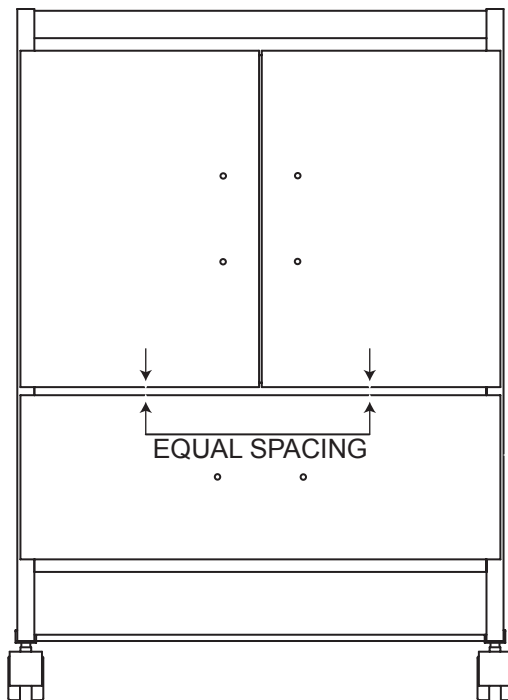

With the drawer in place, check to insure that the Drawer Front (J) is aligned level and with equal spacing at the edges.



If the Drawer Front needs adjustment, loosen Washer Head Screws (H14) slightly, move Drawer Front to the correct position and retighten screws.

LEVEL

FRONT  
ALIGNED  
WITH SIDES

**#19**

When adjusted, attach a Handle (H15) to the Drawer Front (J) using two 1-3/4" Washerhead Screws (H16) as shown.

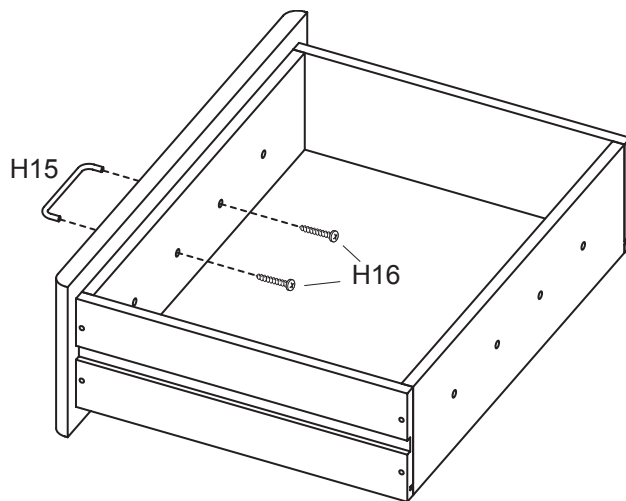


H16



H17

Attach a Handle (H15) to each Door (I) using two 1-1/4" Panhead Screws (H17) as shown.

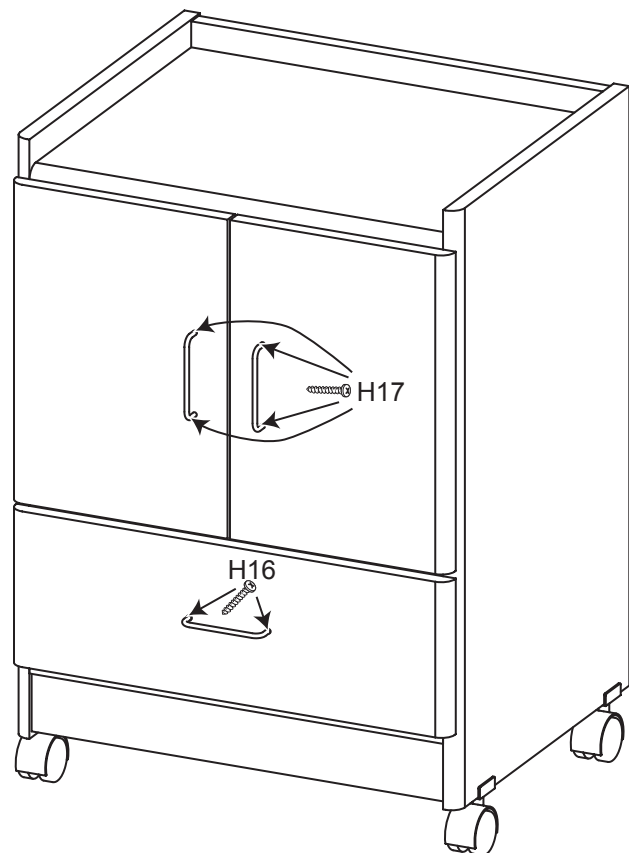

***Your Coffee Bar is now fully assembled and ready for use.***