



## Installation Instructions for your D'vontz Wrought Iron Shelf

---

### Items needed for Installation:

- (4) 3" x 1/4" Lag Bolts if attaching to a wood stud wall.
  - Appropriate anchors or screws if attaching to a masonry wall.
  - Level, Drill with 3/16" bit.
  - 100 % silicon adhesive for installation of stone slab.
- 

### Directions:

1. Carefully unpack components.
2. Observe all local plumbing and building codes. Check with your local building authorities for more information.
3. D'vontz strongly advises attaching to solid wood wall structure i.e. (studs or 2x4 nailer). See fig. 1. If mounting to masonry wall use appropriate masonry screws or anchors. Additional attachment holes can be drilled if necessary.

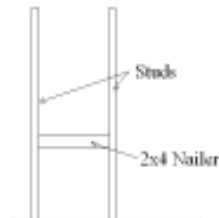


Fig. 1



Fig. 2

4. Level shelf at desired height and mark attachment holes. Pre-drill wall studs with a 3/16" drill bit. Attach shelf to wall with appropriate fasteners. Apply 1/4" bead of silicon adhesive on all corner supports as per fig. 2. (View is from top looking down)
  5. Center and place stone slab on shelf. Allow sealant to cure before using. Unit is now ready for vessel and drain installation.
- 

Any questions with your installation, please call Customer Service  
at (877) 322-3600. We will be happy to assist you.

Copyrights 2005, D'vontz L.L.C. All Rights Reserved

