

BIN WAREHOUSE

FOR STORAGE TOTES - ASSEMBLY INSTRUCTIONS


TOOLS REQUIRED

1. Powered Screwdriver with
#2 Phillips-Head Tip




PARTS LIST

1. (8) Horizontal Crossbars
2. (4) Center Verticals
3. (2) Left & Right Rear Corner Verticals
4. (1) Left Front Corner Vertical
5. (1) Right Front Corner Vertical
6. (4) Wall Mount Flanges
7. (4) Wall Mount Extension Tubes
8. (12) Horizontal Sliderails

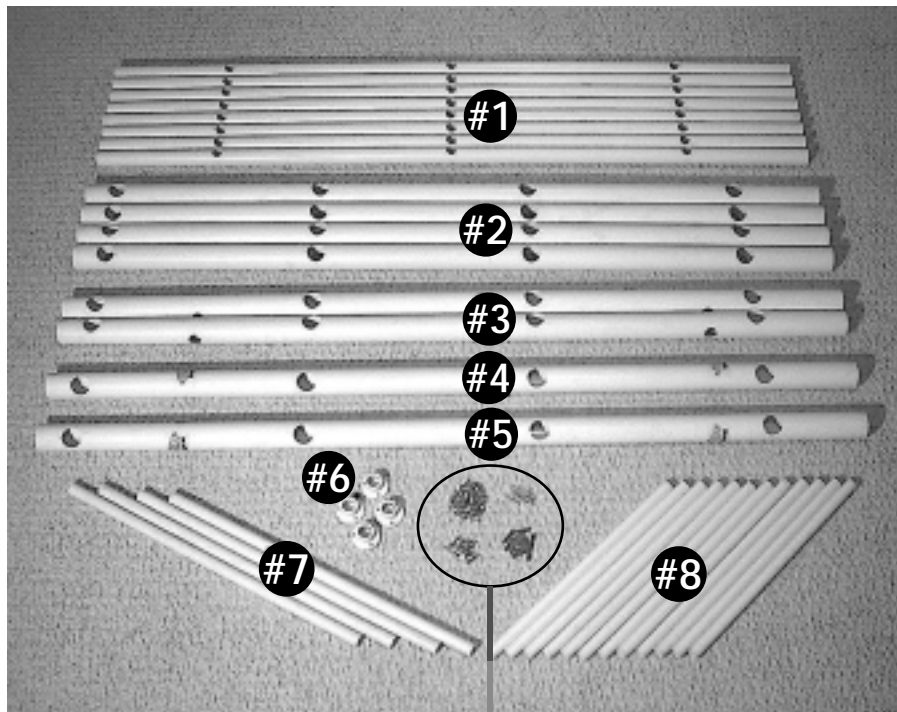

FASTENER LIST

1. (60) #08 x 3/4" Fastening Screws
2. (08) #08 x 1-1/2" Wall Mount
Extension Tube Fastening Screws
3. (12) #10 x 1-1/4" Wall Mount
Flange Screws
4. (12) Plastic Wall Anchors

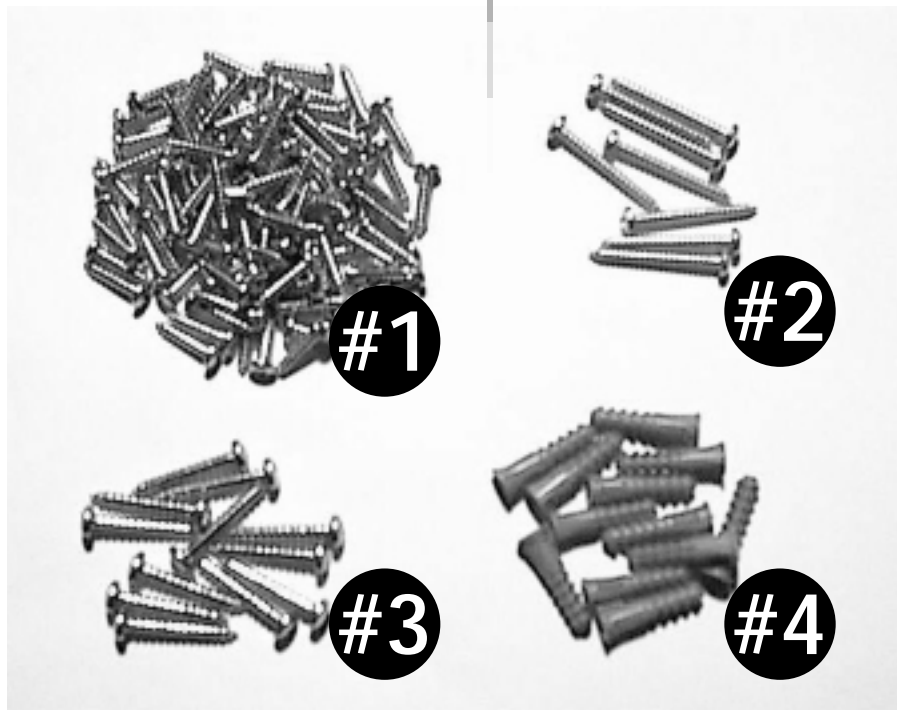

NOTE:

Separate All Parts into Groups
(as shown) and Familiarize.
Read All Instructions Before
Beginning Assembly