


## Thank You



Thank you for choosing Way Basics! With your help, Way Basics products are helping protect the environment. No new trees were cut down to create our furniture, because it's made from recycled paper. At the end of its long life we hope you'll find other uses for our zBoards or simply recycle – then they might eventually find their way back to Way Basics where we'll make them into new zBoards!

## Inside Your Package



Horizontal zBoards

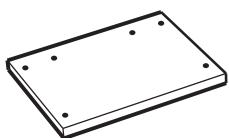


Vertical zBoards  
adhesive strip on 2 edges

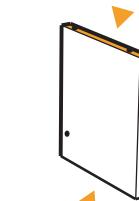

Backboards  
adhesive strip on 3 edges

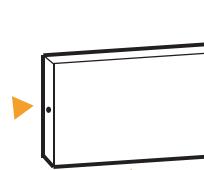

Pins


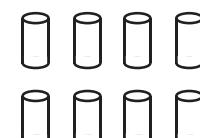


Duplex	24 pins
Triplet	36 pins
Duo	24 pins
Trio	36 pins

## Before You Begin

- Assemble your unit on a flat even surface, carpet not recommended
- Furniture is for indoor use only
- When moving your Way Basics furniture, lift from the bottom
- Make sure zBoard surfaces are clean and dry


## Right Side Up

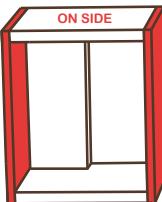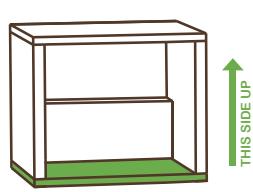


Tip: Make sure only one zBoard touches the floor to confirm correct usage.

When placed on side or back, vertical strength is compromised.


**1** Peel adhesive strips off backboard




**2** Insert 4 pins in backboard

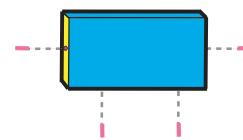


**3** Align backboard on horizontal zBoard

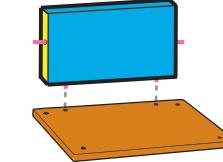


**4** Peel adhesive strips off vertical zBoards

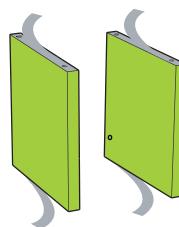


**5** Insert pins into vertical zBoards

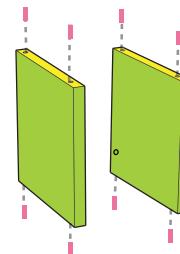


**6** Align vertical zBoards (with inner holes facing backboard) to horizontal zBoard as shown

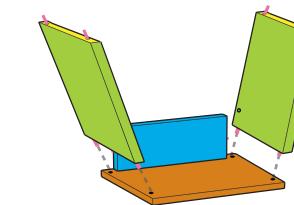

**7** Adhere vertical zBoards onto backboard

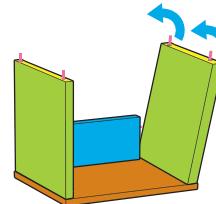


**8** Align horizontal zBoard on vertical zBoards

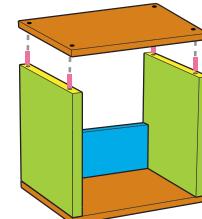


Repeat Steps 1 - 8 for :

Duplex

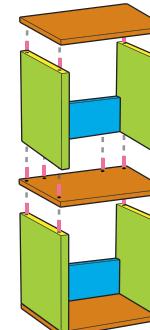

Triplet

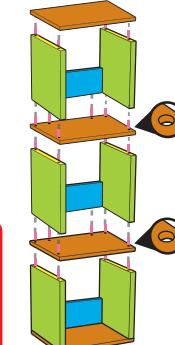

middle horizontal boards have holes completely through

Connect  
With Us



talktous@waybasics.com



Share Your Photos and Win  
[www.waybasics.com/share](http://www.waybasics.com/share)