

Bench Solution™ Installation Instructions for Concrete Wall Applications

This document details the attachment of the Bench Solution™ to concrete and masonry walls only, for all other assembly instructions refer to the Owner's Manual and Installation Instructions provided with the fold down work bench.

1. Locate and level the Horizontal Wall Bracket as described in Step 1 of the Owner's Manual and Assembly Instructions.
2. Mark the hole locations on the concrete wall.
3. Replace the eight ¼" lag screws, Item number 20, part number BS000067, with eight ¼" x 2- 1/4" Tapcon Hex Head Screws (not provided).
4. Predrill the marked hole locations per the instructions provided with the Tapcon screws.
5. Attach the horizontal wall bracket to the concrete wall using the Tapcon screws and the ¼" flat washers, item number 20, part number BS000110 as shown in Figure 1.
6. Attach the Vertical Wall Brackets as described in Step 2 of the Owner's Manual and Assembly Instructions.
7. Predrill holes for the Vertical Wall Brackets in the concrete wall per instructions provided with the Tapcon screws.
8. Attach the Vertical Wall Brackets to the concrete wall using the Tapcon screws and the ¼" flat washers, item number 20, part number BS000110 as shown in Figure 1.

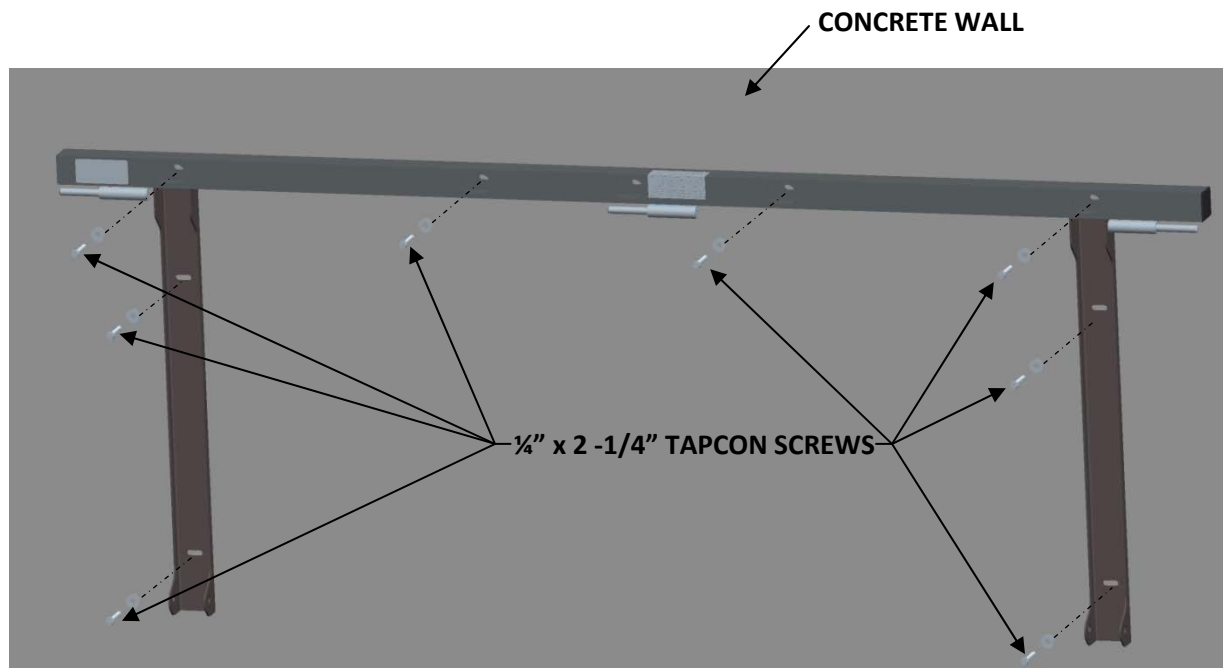


Figure 1