

ASSEMBLY INSTRUCTIONS

2

D - 1/4-20 X 3-1/4 WAFER SHCS


(A)

## **P®LYWOOD** Intelligent Design™

Model: CLC47 & CMC47

## Step 5

Attach all sections together using B - (3) capnuts C - (1) 1 1/2" chair bolt D - (2) 3 1/4" chair bolts

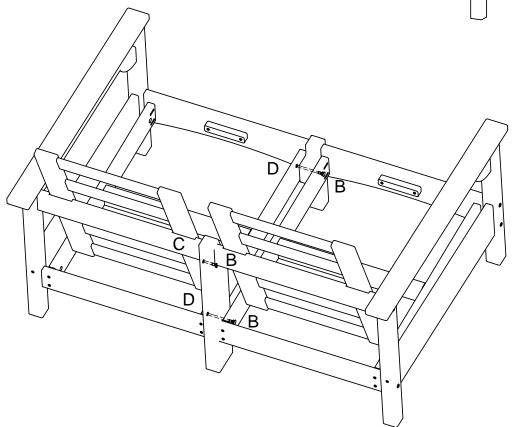

## Step 4 Fit all sections together with mid legs

