



Intelligent Design™

Model:  
CDD200, CDD201, CDD202

**Step 1**

Attach back of arm by threading the attached dowel screw into the pilot hole until the arm is snug against the back leg.

ROTATE  
CLOCKWISE

PILOT HOLE

ROTATE  
CLOCKWISE


**Step 2**

Attach (4) 1-3/4 bolts thru the seat frame into the insert nuts on the arm supports


INSERT  
NUTS

A

CDD200

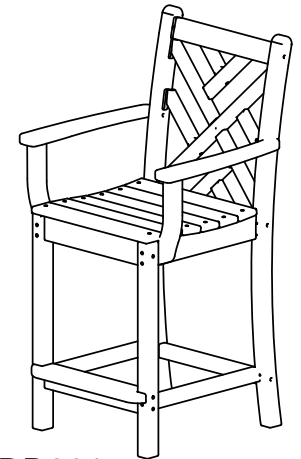

CDD201

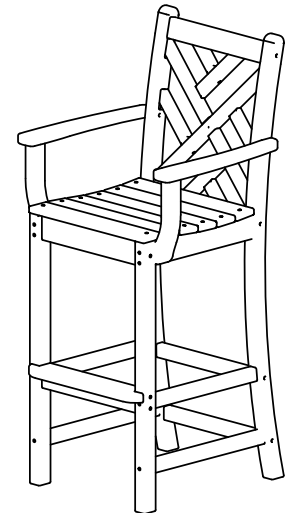

CDD202


- \_\_\_ (1) CHAIR
- \_\_\_ (2) ARM ASMB (RH/LH)
- \_\_\_ (1) HARDWARE PACK

**TOOLS NEEDED**



4mm Hex Key (included)

Qty. Description



4

1



HDWPK-#8 SCREW PLUGS, 4X (EXTRAS)