


Model: TD201


- (1) Seat assembly
- (2) Front leg with arm (LH/RH)
- (1) Back leg assembly
- (1) Foot rest
- (2) Brace (LH/RH)
- (1) Hardware pack

## TOOLS NEEDED

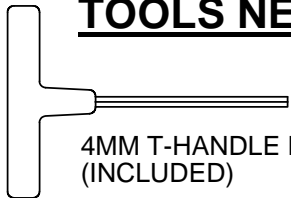


4MM T-HANDLE HEX KEY  
(INCLUDED)

**Step 1**  
Attach legs to the seat assembly  
and foot rest with (8) 3" screws

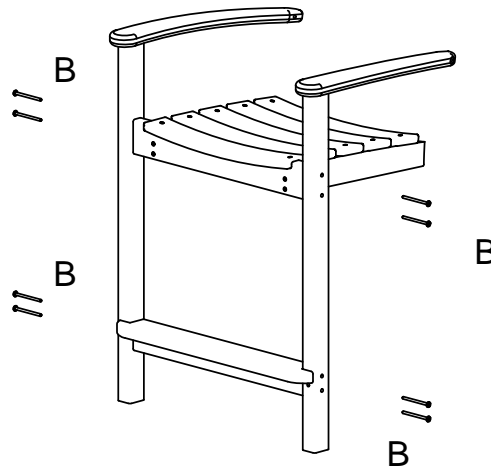

## Step 2


Attach arms to back leg assembly  
using (2) 2½" screws  
Attach back leg assembly to seat assembly  
using (4) 3" screws

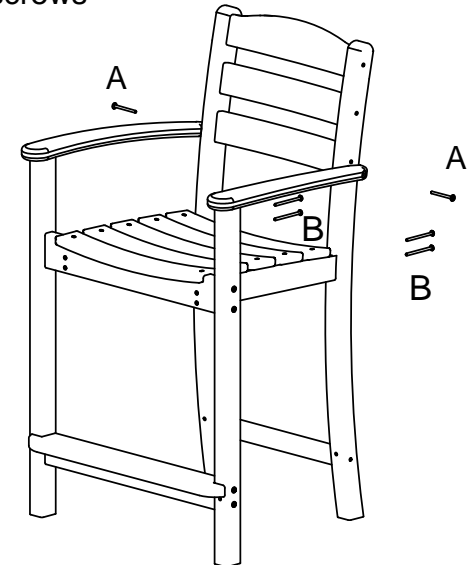


## Step 3

Attach braces between the front and back  
legs with the remaining (4) 3" screws.

Note: Compound angle cut on brace  
should be attached to the back leg

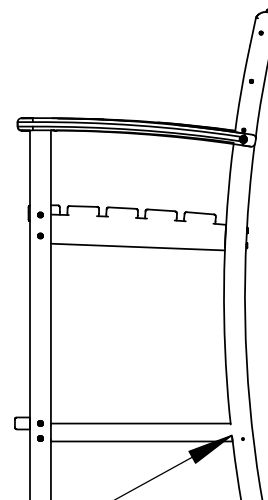

COMPOUND ANGLE, LONG  
EDGE ON THE BOTTOM

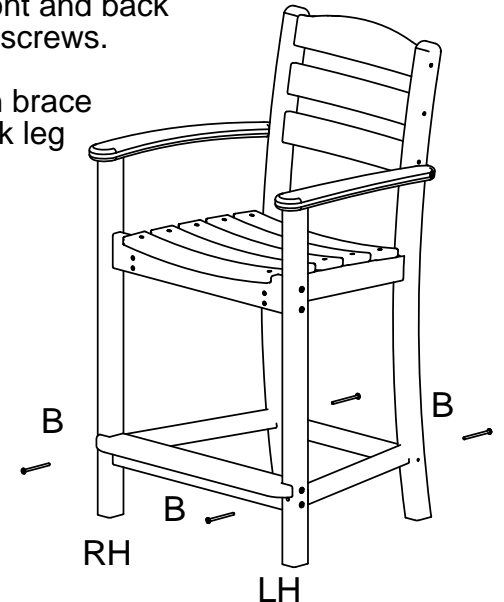

Qty. Description

2 A - .27 X 2-1/2 SOCKET WAFER "A"

16 B - .27 X 3" SOCKET WAFER "A"