

300379Q (B1 & B2)

QUEEN SIZE BED WITH SOFT PU

ASSEMBLY INSTRUCTIONS COASTER FINE FURNITURE



www.coastercompany.com

PAGE 1 OF 5

REVISION 0 : 12/06/2012 REVISION 1 : 06/04/2013

ASSEMBLY TIPS:

- 1.Remove hardware from box and sort by size.
- 2.Please check to see that all hardware and parts are present prior to start of assembly.
- 3.Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



Warning!


- 1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
- 2. This product is for home use only and not intended for commercial establishment.

B1(BOX 1) PARTS IDENTIFICATION							
A		HEADBOARD PANEL	1 PC	Е		BED SLAT	12 PCS
B2 B	(BOX 2)	FOOTBOARD PANEL	1 PC	F	0	BED SLAT SUPPORT	4 PCS
C		BED RAIL	2 PCS	G	0 0	CENTER SUPPORT	2 PCS
D		CENTER RAIL	1 PC	Н		BED LEG	4 PCS
				A		HEADBOARD PANEL	1PCS
Z(B2)-BOX 2 HARDWARE IDENTIFICATION							
1		ALLEN WRENC	H 1 PC	5		LONG SCREW	16 PCS
2		SHORT BOLT	12 PCS	6		FLAT WASHER	8 PCS
3		LONG BOLT	4 PCS	7		LEVELER	4 PCS
4	<u> </u>	SHORT SCREW	26 PCS				




300379Q(B1) – BOX 1 STEP 1

Lay down the headboard panel on a soft surface. Align and fasten bed leg to the pre-marking on the bottom of headboard panel using long screw(as per diagram shown). Then tighten with screw driver(not included).

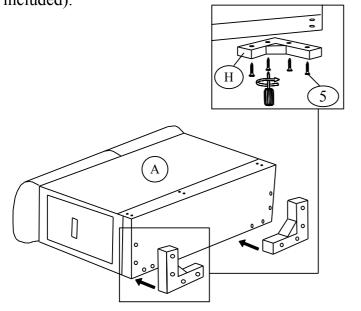


300379Q(B1 & B2) – BOX 1 & BOX 2 STEP 2

Place footboard panel upside down on a soft surface. Align and fasten the bed leg to the premarking on the bottom of footboard panel using long screw (as per diagram shown). Then tighten with screw driver. (not included).

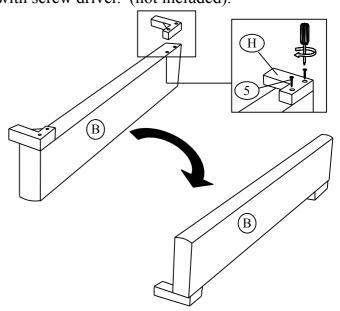

STEP 3


Align and fasten bed rails to headboard panel and footboard panel using short bolts and flat washer. Tighten with Allen wrench.

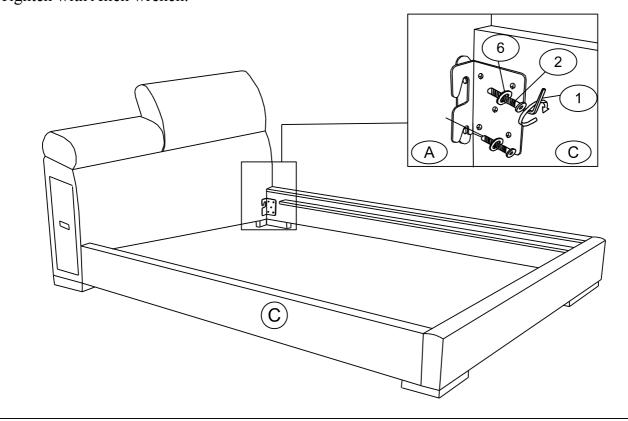




STEP 4

- 4.1) Align & fasten center support to the center of headboard panel & footboard panel using long bolt. Tighten with Allen wrench.
- 4.2) Align & fasten center rail onto center support using short screw. Tighten with screw driver (not included)
- 4.3) Align & fasten leveler to bed slat support by turning leveler clockwise.
- 4.4) Align & fasten bed slat support to center rail using short bolt. Tighten with Allen wrench.

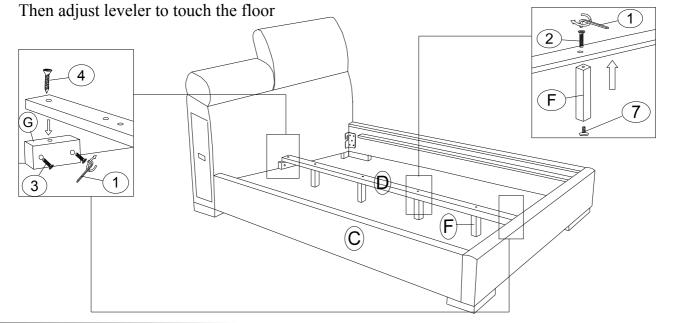


STEP 5

- 5.1) Align and fasten bed slat to bed rail using short screw. Tighten with screw driver(not included).
- 5.2) Pull out headboard's hidden night stand & unfold the shelf as per diagram shown.

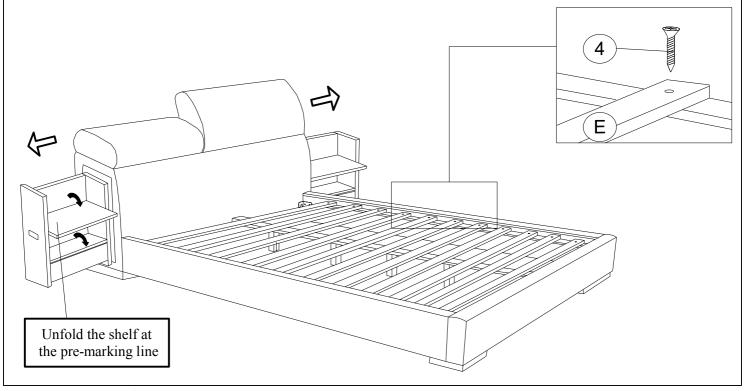



Maintenance Notice:

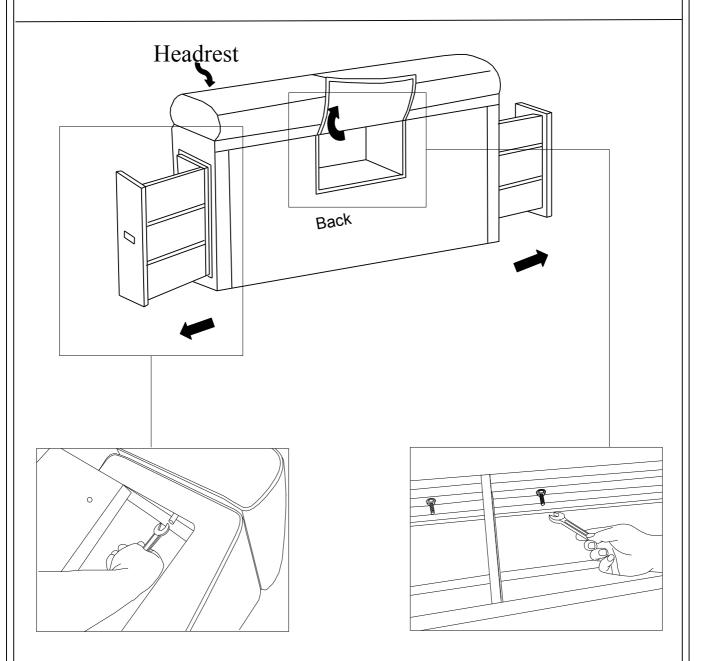

* When the headrest is stucked while moving:

- 1 . Slide out half of the drawers. Open the back cover of the headboard which is secured with velcro tape .
- 2. Loosen nut from the bolt of headrest with wrench.
- 3. Fold down the headrest.
- 4. Tighten the nut with wrench, push back the drawer and close the back cover.

