


**Assembly Instructions
for
Model 820T
Rigid Walker
Capacity - 850 lbs.**

1. Attach Part# A on top of Part# B as shown in picture above with two bolts and lock nuts. Be sure and tighten very securely.

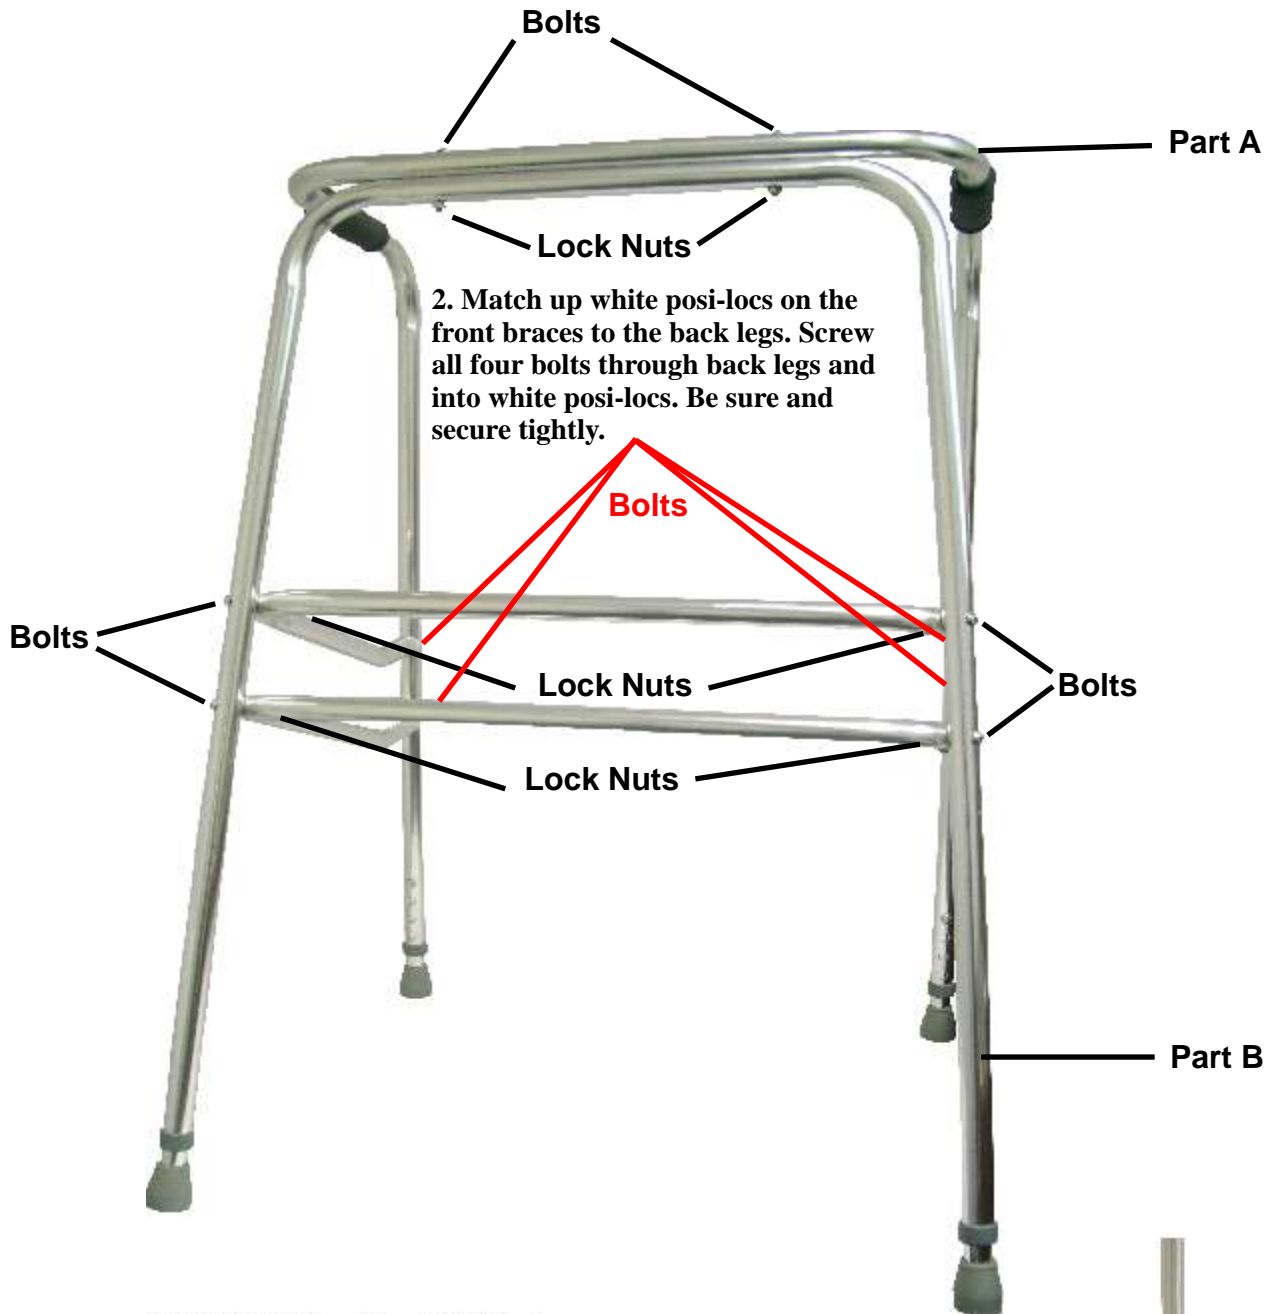

Tools needed: Phillips Head Screwdriver and 7/16" Wrench.
2 - 7/16" Locking Nuts and 6 - 1/4 x 20 - 2-1/4" Bolts

1. Attach Part# A on top of Part# B as shown in picture above with two bolts and lock nuts. Be sure and tighten very securely.

2. Match up white posi-locs on the front braces to the back legs. Screw all four bolts through back legs and into white posi-locs. Be sure and secure tightly.

3. Insert all four legs into desired height position.

Leg

