
P.O. Box 3417 Abilene, TX. 79604 Toll 800-637-8436 Fax 325-677-7217 Website: www.convaquip.com E-mail:info@convaquip.com

Instruction Sheet for Mode 1823 Wheel kit

Extract front legs from walker and remove gray cap with hole from 1. front legs of walker frame.

Ph. 325- 677-4177

Attach solid aluminum button to spring. (see photo) 2.

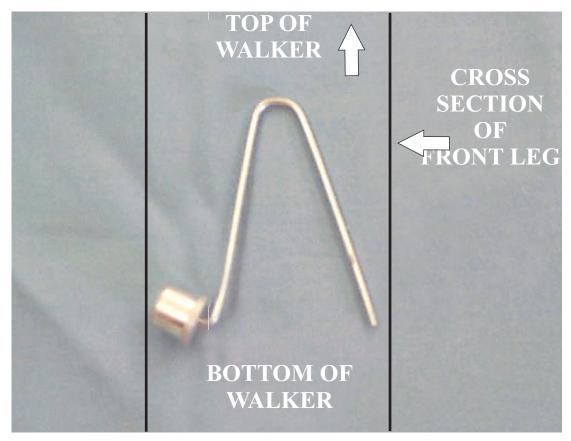

- **3.** Insert spring with button attached into frame of front walker leg with the curved side up and the open side down.
- 4. Push up into leg until button goes in lowest hole.
- **5.** Hold down button and slide wheel kit over frame of leg until desired position is attained. (Getting Wheel kit started over frame will be difficult by design, but it will slide over frame)