



ATTACHMENT OF CABINETS INSTRUCTION

1. REMOVE BOTTOM DRAWER (A) OF TOP UNIT TO BE ATTACHED. ALSO REMOVE TOP DRAWER (B) OF BOTTOM UNIT. DRAWERS MAY BE PULLED STRAIGHT OUT.

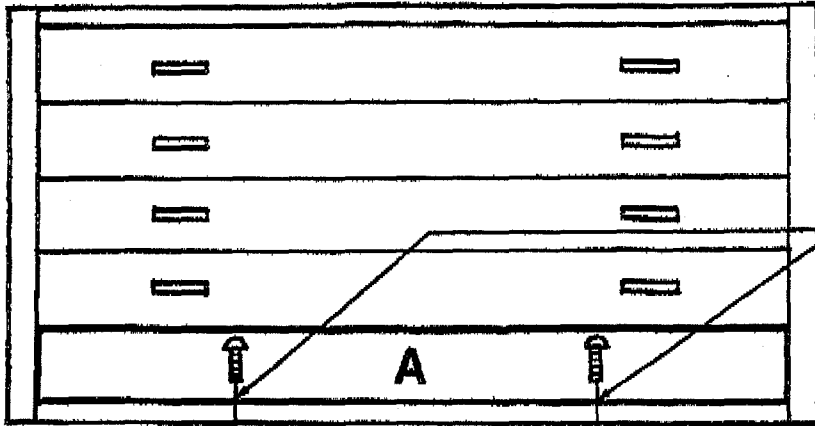

2. REMOVE "KNOCKOUT" PLUGS AT POSITION HOLES INDICATED.

3. INSERT SCREWS THRU 2 HOLES AT FRONT LEDGE ONLY, AND FASTEN NUTS ON BOTTOM.

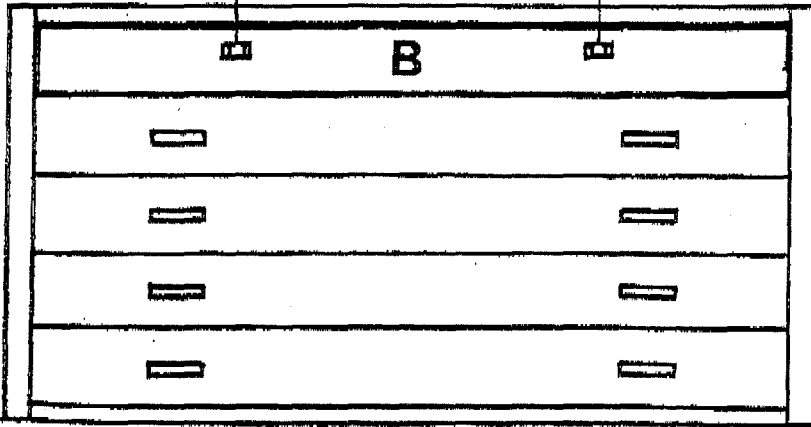

SEE HANDLE, LABEL HOLDER
INSTALLATION ON SIDE 2.

HANDLE & LABEL HOLDER INSTALLATION

ADD SCREWS
(THRU LARGE HOLES IN BACK)
AND THRU OUTSIDE HOLES
TO HANDLES.

ATTACH LABEL HOLDER
PUSHING TABS THRU
SLOTS IN FRONT AND
BENDING TOWARD
CENTER TO SECURE.

SIDE TWO

03/96

