


ASSEMBLY INSTRUCTIONS

45003 RECT COCKTAIL W/PULL-OUTS

COMPONENT AND PARTS LIST

1	TOP & APRON	1 PC
2	METAL LEG	4 PCS
3	BOTTOM SHELF	1 PC
4	METAL SCROLL	2 PCS
5	TRAY	1 PC

#	HARDWARE		QTY	EXT
A	M5/16" X 1-5/8" ALLEN-HEAD BOLT		4 PCS	1 PC
B	M5/16" SPRING WASHER		8 PCS	1 PC
C	M5/16" X 22MM FLAT WASHER		4 PCS	1 PC
D	5mm ALLEN WRENCH		1 PC	
E	M1/4" X 3/4" ALLEN-HEAD BOLT		4 PCS	
F	M1/4" SPRING WASHER		4 PCS	1 PC
G	M1/4" FLAT WASHER		4 PCS	1 PC
H	4mm ALLEN WRENCH		1 PC	
I	M5/16" X 3/4" ALLEN-HEAD BOLT		4 PCS	1 PC
J	M5/16" X 18MM FLAT WASHER		4 PCS	1 PC
K	KNOB		2 PCS	

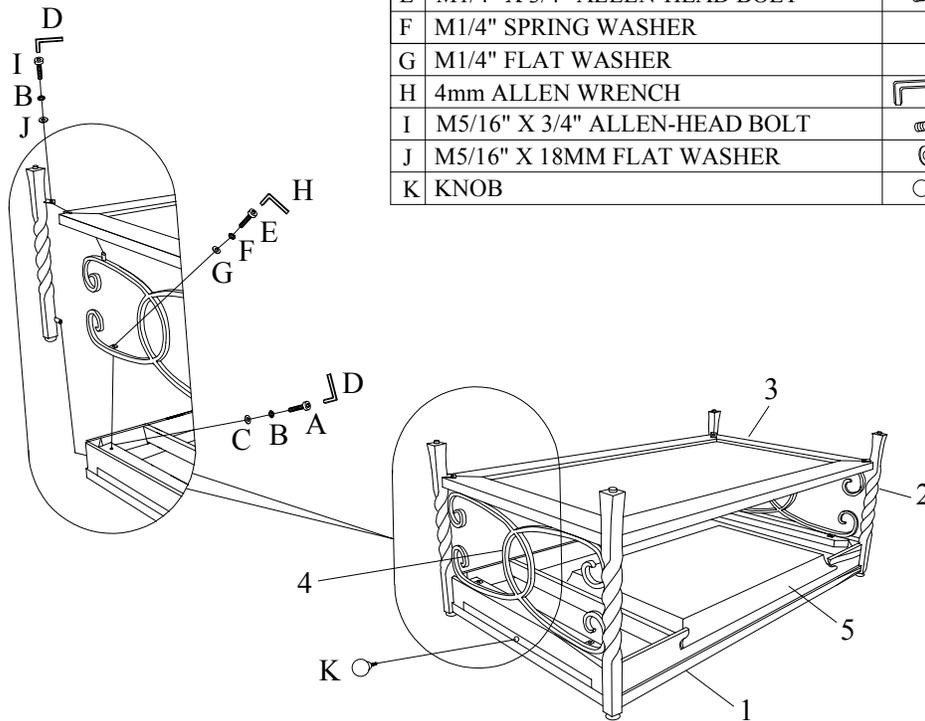

Note:

1. Do not discard any packing materials until the table has been completely assembled, to prevent parts from being accidentally discarded.
2. To prevent possible scratches or damage, assemble the table upside down on a soft surface such as a blanket or carpet.
3. Attach Metal Legs to the Top & Apron using four 1-5/8" Allen-Head bolts (A), Spring Washers (B), and Flat Washers (C), into the inside corner of the legs. Only partially install bolts until after step #6.
4. Attach Metal Scroll to bottom side of Top & Apron using two $\frac{1}{4}$ " x $\frac{3}{4}$ " Allen-Head Bolts (E), Spring Washers (F) and Flat Washers (G). Do not fully tighten until after step #6.
5. Place Wood Shelf onto the locator pins on the bottom of the Metal Scroll.
6. Attach the Wood Shelf to the Metal Legs using the four $\frac{5}{16}$ " x $\frac{3}{4}$ " long Allen-Head bolts (I), Spring Washers (B) and Flat Washers (J).
7. Tighten all bolts using the supplied Allen Wrenches, (D or H).
8. Attach the Knob (K) to the pull-out shelves.
9. Carefully turn the Table upright.