

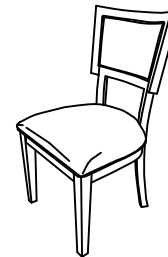
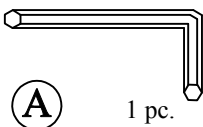
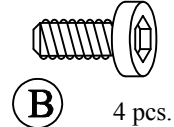



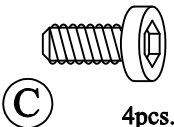



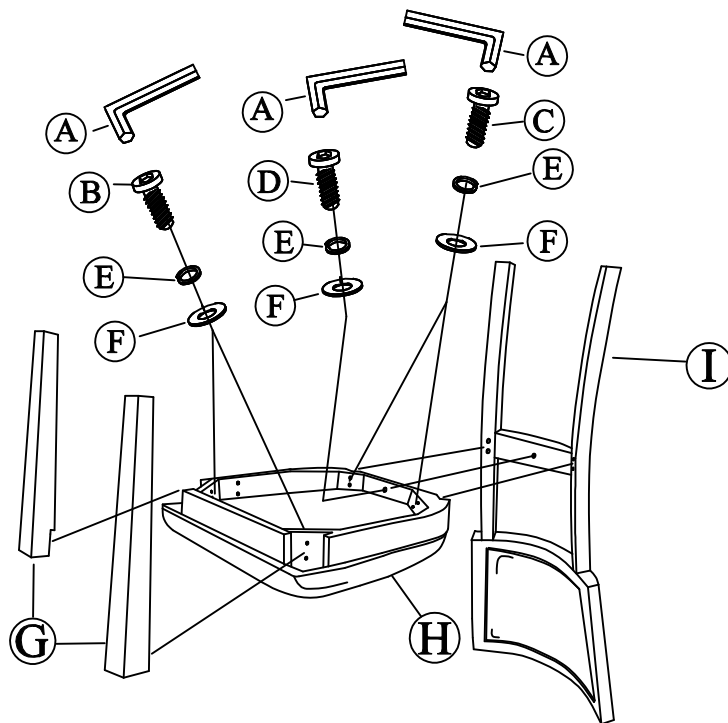
1753 Side chair

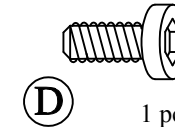

Components and Hardware List					
5mm Allen Wrench	M5/16" x 2-1/4" Allen Head Bolt	M5/16" x 2-3/4" Allen Head Bolt	M5/16" x 1-3/4" Allen Head Bolt		
 (A) 1 pc.	 (B) 4 pcs.	 (C) 4pcs.	 (D) 1 pc.		
5/16" Spring Washer	M5/16" x 3/4" Flat Washer	Front Leg	Seat Frame	Chair Back Frame	
 (E) 9 pcs.	 (F) 9 pcs.	 (G) 2 pcs.	 (H) 1 pc.	 (I) 1 pc.	

Be sure to check all packing material carefully for small parts, which may have come loose inside the carton during shipment.

Before beginning assembly, sort hardware and always compare bolt length used so the correct length bolts are used in the proper locations.



Note:

1. Do not discard any packing materials until the Chair has been completely assembled, to prevent parts from being accidentally discarded. To prevent possible scratches or damage, assemble the chair on a soft surface such as a blanket or carpet, or it's own packaging materials.
2. Attach Seat Frame (H) to Chair Back Frame (I) using one 1-3/4" long Bolt (D), Spring Washers (E), and Flat Washers (F) on the middle of the Back. Install two 2-3/4" long Bolts (C), Spring Washers (E), and Flat Washers (F) into each back corner of the Seat Frame. Do not fully tighten until Step 5.
3. Place the Front Legs (G) into the front corners of the Seat Frame. Attach using 2-1/4" long Allen Head Bolts (B), Spring Washers (E), and Flat Washers (F). Tighten only these Bolts using the Allen Wrench (A).
4. Place the assembled Chair on a flat surface to level chair. Using the Allen Wrench (A), tighten all Bolts that were not tightened previously.