


Important: Always unplug the power cord before installing or replacing bulb and before cleaning or other maintenance.

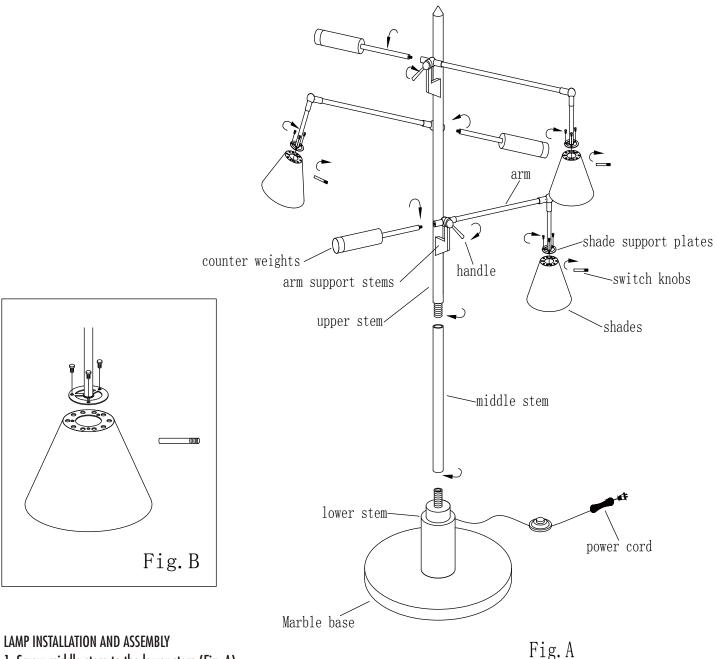

- 1. Screw middle stem to the lower stem (Fig. A)
- 2. Screw the upper stem to the middle stem (Fig. A)
- 3. Screw 3 counter weights behind the arms (Fig. A)
- 4. Place 3 shades under shade support plate and secure with 3 screws on each shade. (Fig.B) Make sure hole at the side of shade is aligned with the socket switch.
- 5. Screw switch knob through the side hole of shade into the socket switch(Fig.B)
- 6. Install A19 bulbs (not included).
- 7. Plug in power cord.